


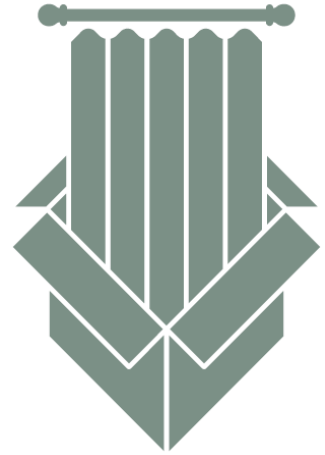

# REGAL DRAPES



Motorized Shades

Somfy Motor & Remote Control Programming

## Getting Started

- Get familiar with the instructions before you begin. Not every programming step described below is needed in your situation. Please call Customer Support 800-256-5005, if you have questions. Please use a ladder (if needed) to reach the motor inside the shade's track. The motor programming button is accessible from the outside, you will need a pin or a small screwdriver to access it. Please make sure that the Li-ion battery has been charged for at least several hours before you begin. Antenna wire should be outside of the track and not damaged.

## Programming Scenarios


Programming after a complete reset – reset motor to the factory setting, then execute steps 1 through 4.

Adjusting top and bottom limits – execute Action 1.

Recording the favorite position (My) – execute Action 2.

## Remote Control Programming

### Remote Control & Motor Buttons

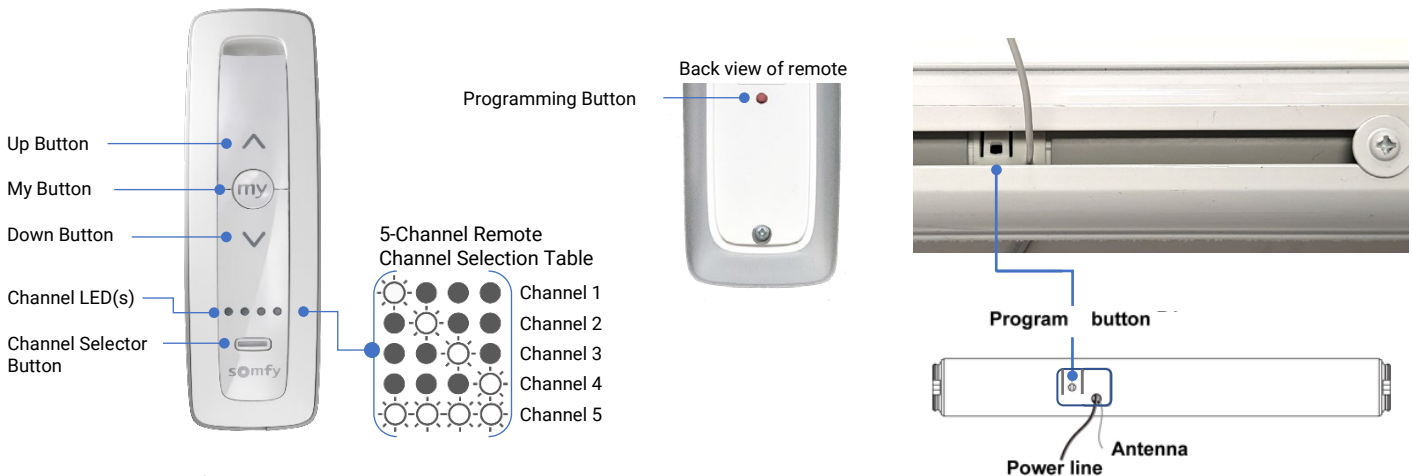

### Motor Operations

**Activate Programming** - Press & hold Program Button on the motor with the pin or small screwdriver until motor **jogs once**. Jog is a brief up and down shade motion. Release the Program Button.

**Erase the motor's memory** - Press & hold Program Button on the motor until motor **jogs 2 times**. Release the Button.

**Reset to the factory setting** - Press & hold Program Button on the motor until motor **jogs 3 times**. Release the Button. This will erase all settings from the motor including end limits.

### Step 1 - Pairing Motor with New Remote


Press & hold the **Up** and **Down** Buttons on the remote controller until shade **jogs once**. (If using a **5-channel remote controller**, select the correct channel first.)



**Step 2 - Checking the Direction of Rotation**


Press the **Up** Button on the remote controller:

- a) If shade rises – the direction of rotation is correct, continue with the Setting the End Limits.
- b) If shade lowers – press the **My** Button to stop the shade movement, then press and hold the **My** Button until the shade jogs. The direction of rotation has been reversed. Press **Up** Button to check direction of rotation.

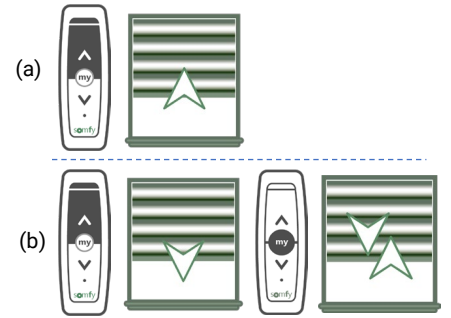

**Step 3 - Setting the Top & Bottom Limits (Can be set in any order)**


1. Bring the shade to the desired bottom position.
2. Press **My** and **Up** buttons simultaneously until the shade starts moving to the other end. The LOWER end limit is set.
3. Stop the shade by pressing **My** Button at the upper limit. Adjust as needed.
4. Press **My** and **Down** Buttons simultaneously until the shade start moving to the other end. The UPPER end limit is set.
5. Press **My** Button to stop the shade, then **press & hold My** Button until shade jogs. End limits are set.

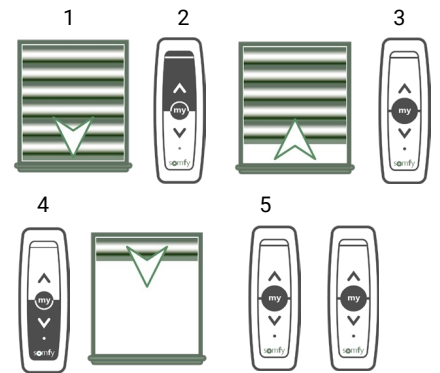

**Step 4 - Recording the Remote Control**

Quickly press the **PROG** Button on the back of the remote control. The shade jogs once and the remote control is recorded.


**Note:** if the shade is no longer in the programming mode repeat Steps 1 and 4 in quick succession.

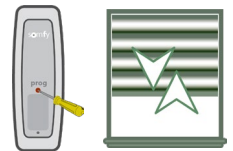

**Action 1 - Re-Adjusting Top & Bottom Limits**

**Readjusting the top limit:**

- 1A. **Top limit:** Press the **Up** Button to move the shade to the current top limit.
- 1B. **Bottom limit:** Press the **Down** Button to move the shade to the current bottom limit.
2. Press the **Up** and **Down** Buttons on the remote controller until shade jogs once.
3. Move the shade to the new top or bottom limit position.
4. Press the **My** Button until the shade jogs to confirm the new limit.

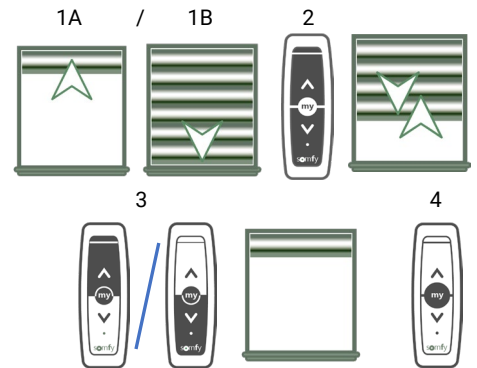

**Action 2 - Record or Delete the Favorite Position (My)**

- 1) Place the motorized product in the desired favorite position (**My**).
- 2) Press the **My** Button until the motorized product moves up and down: the desired favorite position (**My**) has been programmed (or deleted).



Thank you for choosing Regal Drapes. We are proud to make your shades with careful attention to every detail. We hope you enjoy your shades for many years to come.

The Regal Drapes Team