


# Board-Mounted Valance

## Installation Instructions

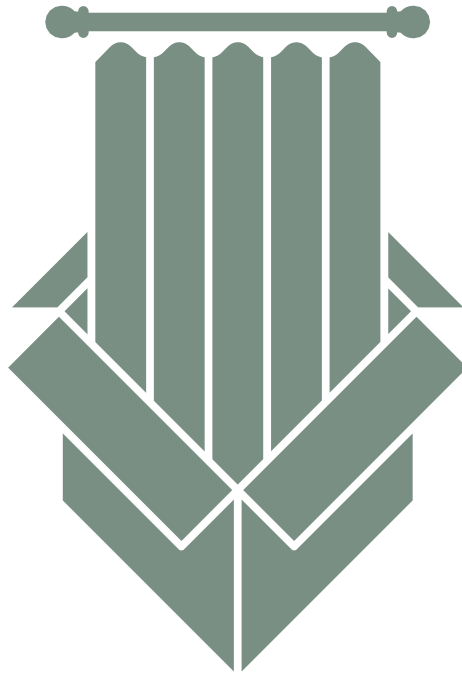


Let's get excited for your new valances. Please take a few minutes to review these simple steps so your valances will be hanging beautifully in no time.

## Before You Begin

### Materials


Please read through all instructions carefully before you begin. Unpack all materials, making sure all parts are included:

- A** Valance
- B** L-brackets, to be installed no greater than 36" apart
- C** Wood screws - for mounting L-bracket to board
- D** Screws & anchors - for mounting L-bracket to wall
- E** Mending plates & screws, required for valances over 96"

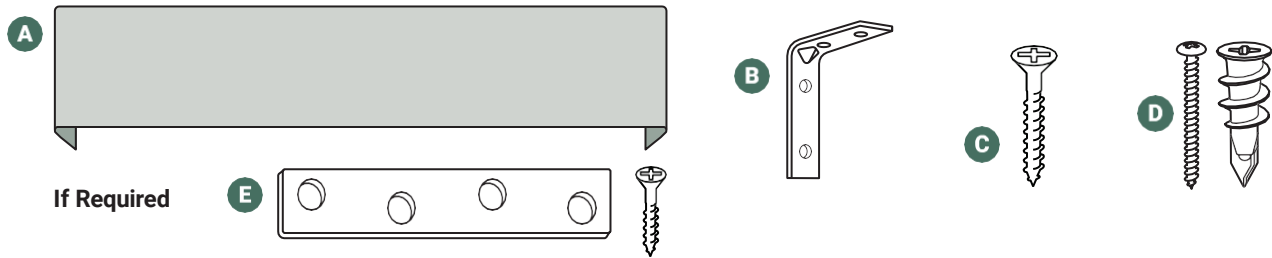

### Tools You Will Need


- Drill with Phillips screwdriver bit
- Pencil
- Metal tape measure
- Level
- Step stool / Ladder

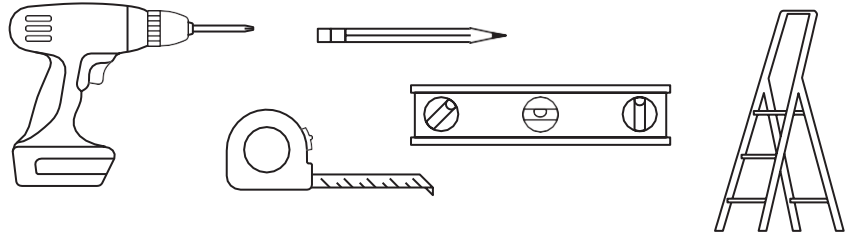

## Installation

### Step 1 - Install Mending Plates (if required)

Valances over 96" wide will have 2 mending plates temporarily installed on the board. Remove the plates and save the 8 screws. Connect the boards together, make sure they are aligned straight. Slide mending plates over the seam of board and align with the pre-drilled holes. Install the removed screws and repeat for the 2nd mending plate.


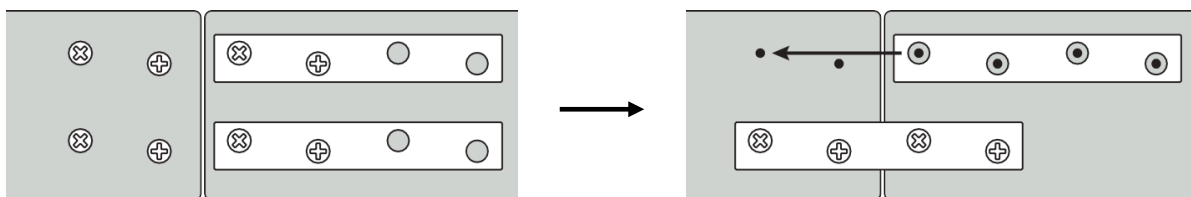


## Installation

Cont'd

**Step 2 - Determine Valance Position**




Hold valance and level above the window to determine the placement height. With a pencil, mark the wall of the underside of the board. This will be the mark for the top of the L-brackets. Mark a level line across the wall shorter than the width of valance.

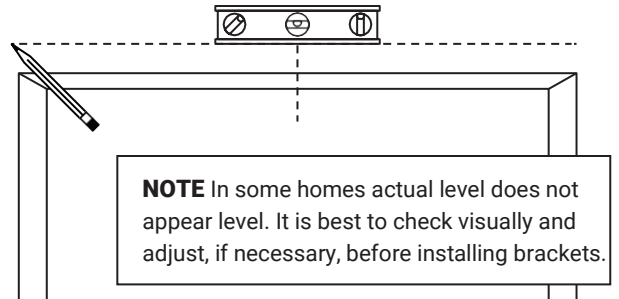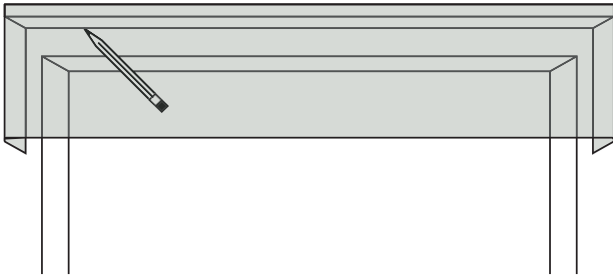**Step 3 - L-Bracket Placement**

Locate the studs or window header. The spacing of L-brackets should be no more than 36" apart. As they will be hidden by the valance, the brackets can be spaced unevenly to catch a stud. If you must install brackets where studs are not located, the provided anchors **must be used** to install brackets for standard Sheetrock. For other wall types, such as brick, concrete, etc., use appropriately rated anchors (not included).

**HINT** To find wall studs, use a thin finish nail to tap through Sheetrock or use a stud finder.



Use the L-bracket to mark the holes.

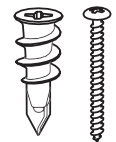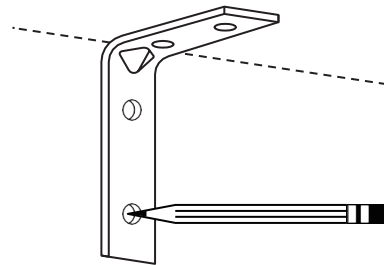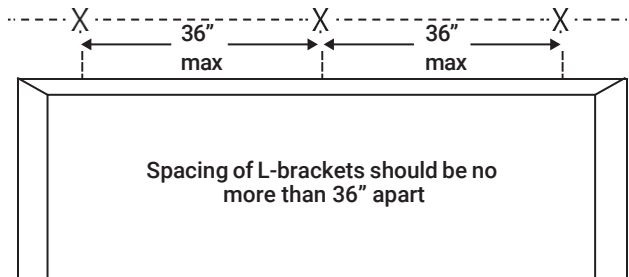

Use anchors when wall studs are not accessible

**Step 4 - Mount L-Brackets**

Pre-drill holes. Attach L-brackets to the wall. Use anchors if not attaching to studs.

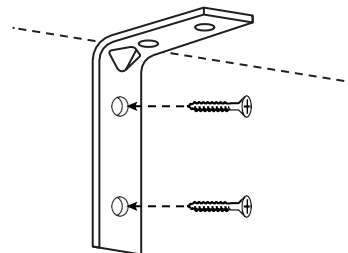
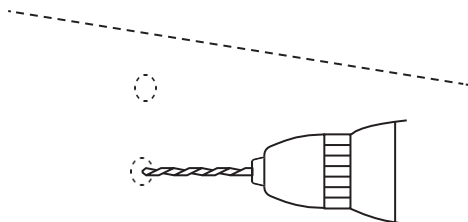


## Installation

Cont'd

**Step 5 – Attach Valance to L-Brackets**

Place valance on top of L-brackets, hold in place so it will not fall. Make sure the valance is centered and positioned level on the wall above the window. Make sure the board is tight to the wall. Insert the small woodscrews through the L-bracket into the white underside of the valance board.

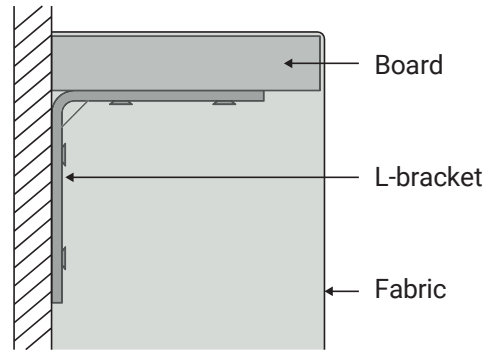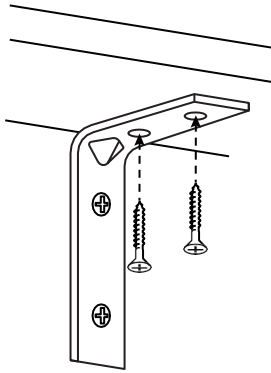

*Side view of installed valance*

## Valance Care

Once the valance is installed and dressed, most wrinkles and folds will hang out on their own within 1 - 2 weeks.

A garment steamer may also be used to help smooth out the wrinkles. Please take care not to overheat the fabric while removing wrinkles. You also can use a wrinkle release spray like Downy® Wrinkle Releaser.

Certain fabrics like silks or linens have natural characteristics that steaming will not remove.

Please contact Customer Care at 1-800-256-5005 if you have additional questions about how to care for your valances.



Thank you for choosing Regal Drapes. We are proud to make your valances with careful attention to every detail. We hope you enjoy your valances for many years to come.

The Regal Drapes Team