



# REGAL DRAPES

## FIRST TIME INSTALLING DRAPES?


DON'T WORRY, WE'LL WALK YOU THROUGH THE WHOLE PROCESS. JUST FOLLOW THESE SIMPLE STEPS AND YOU'RE NEARLY THERE.

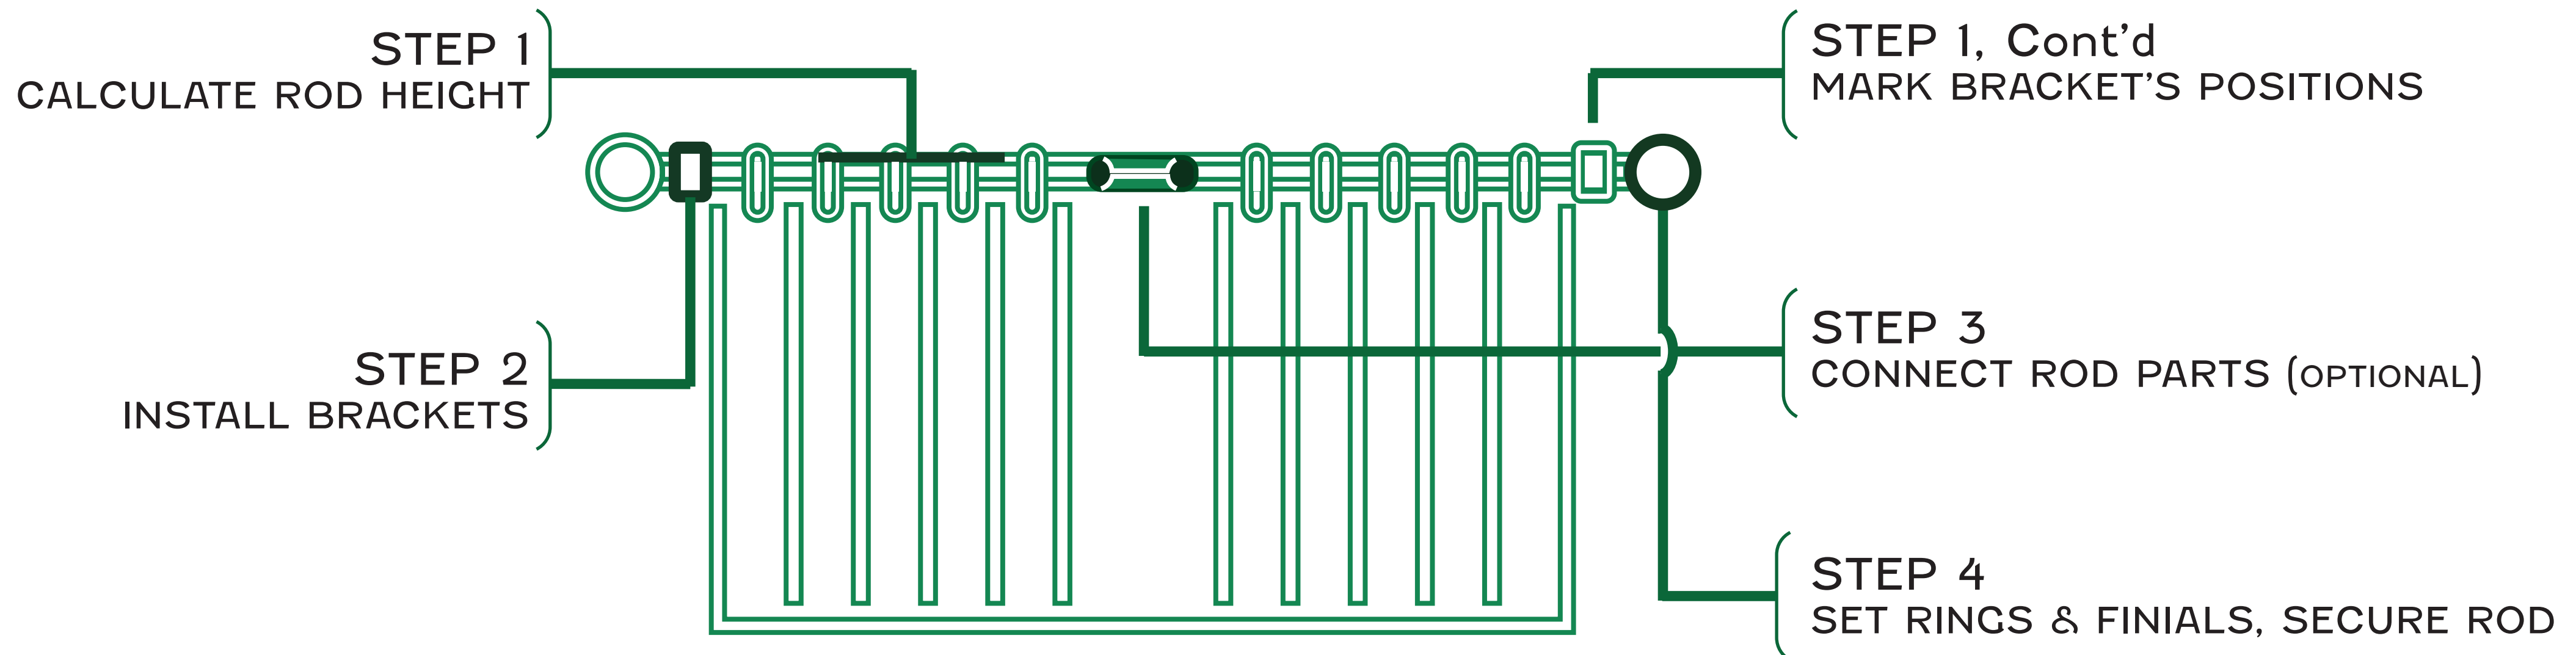

### PARTS YOU GET

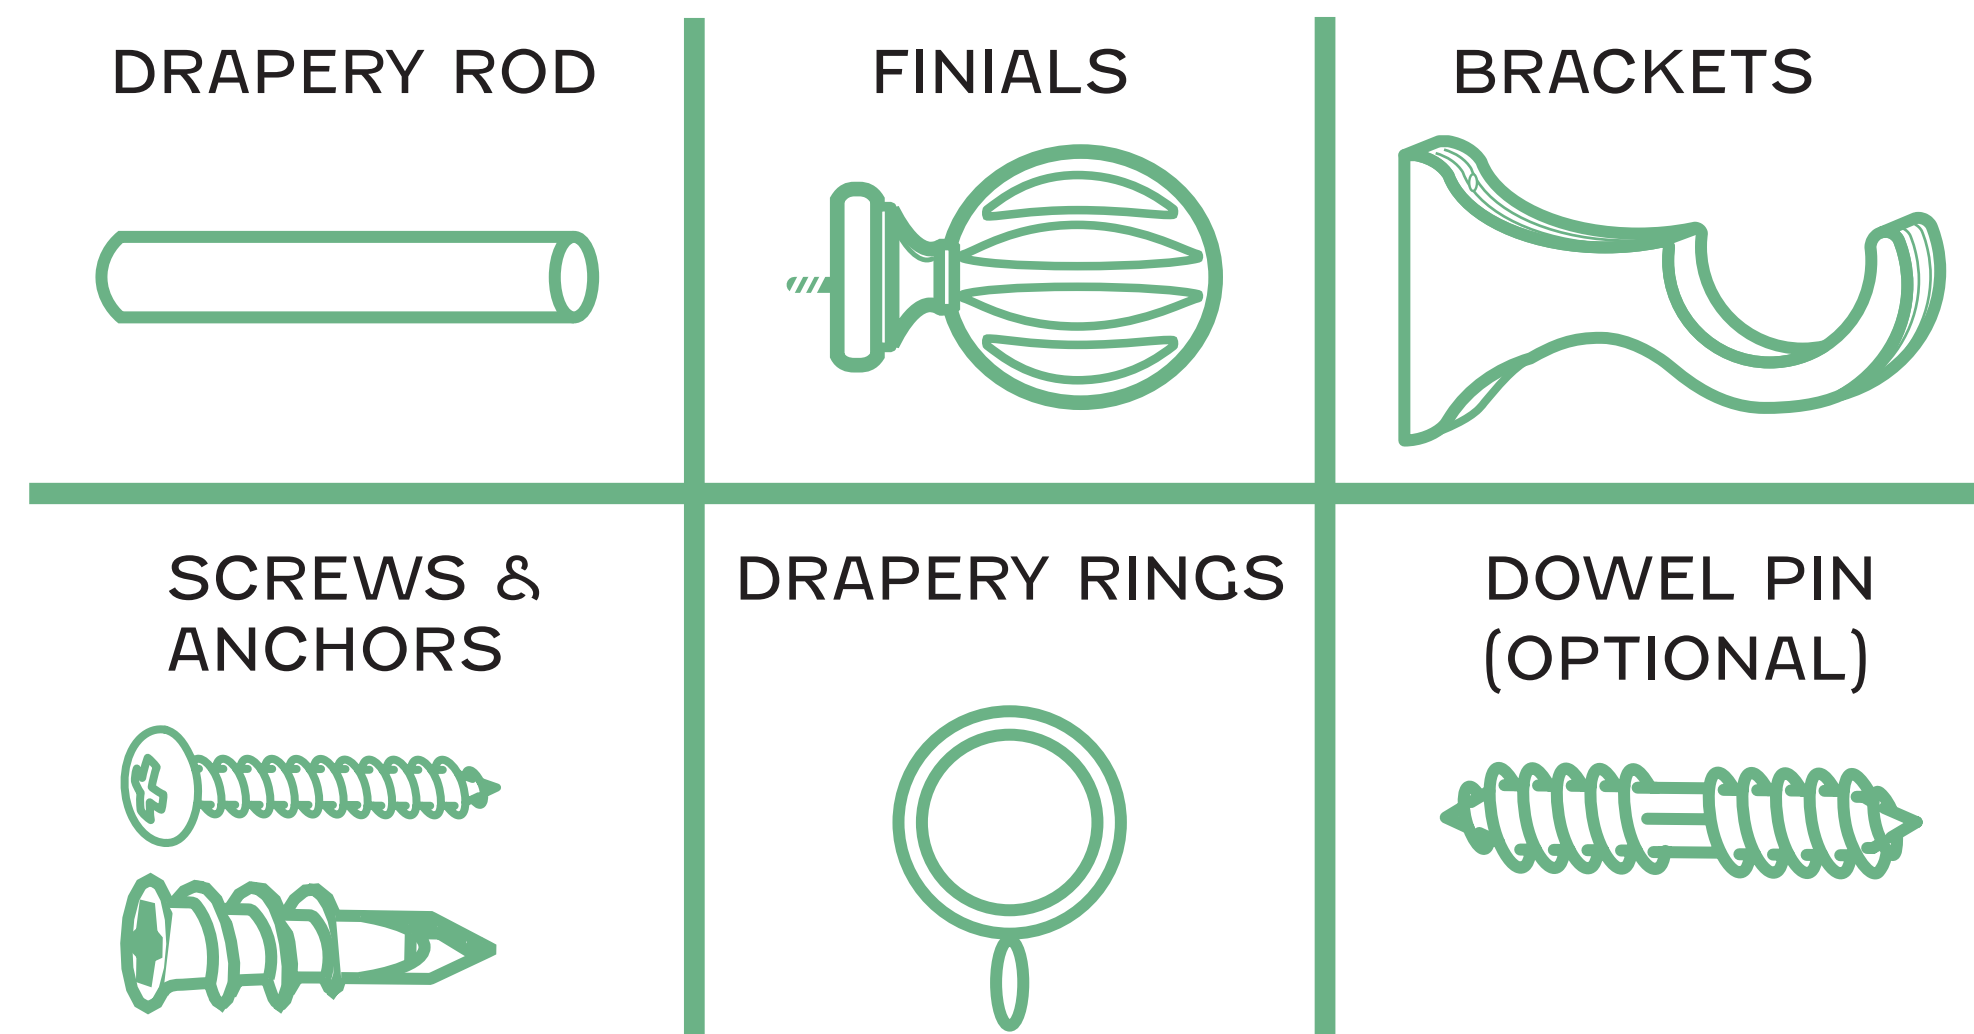

### TOOLS YOU WILL NEED

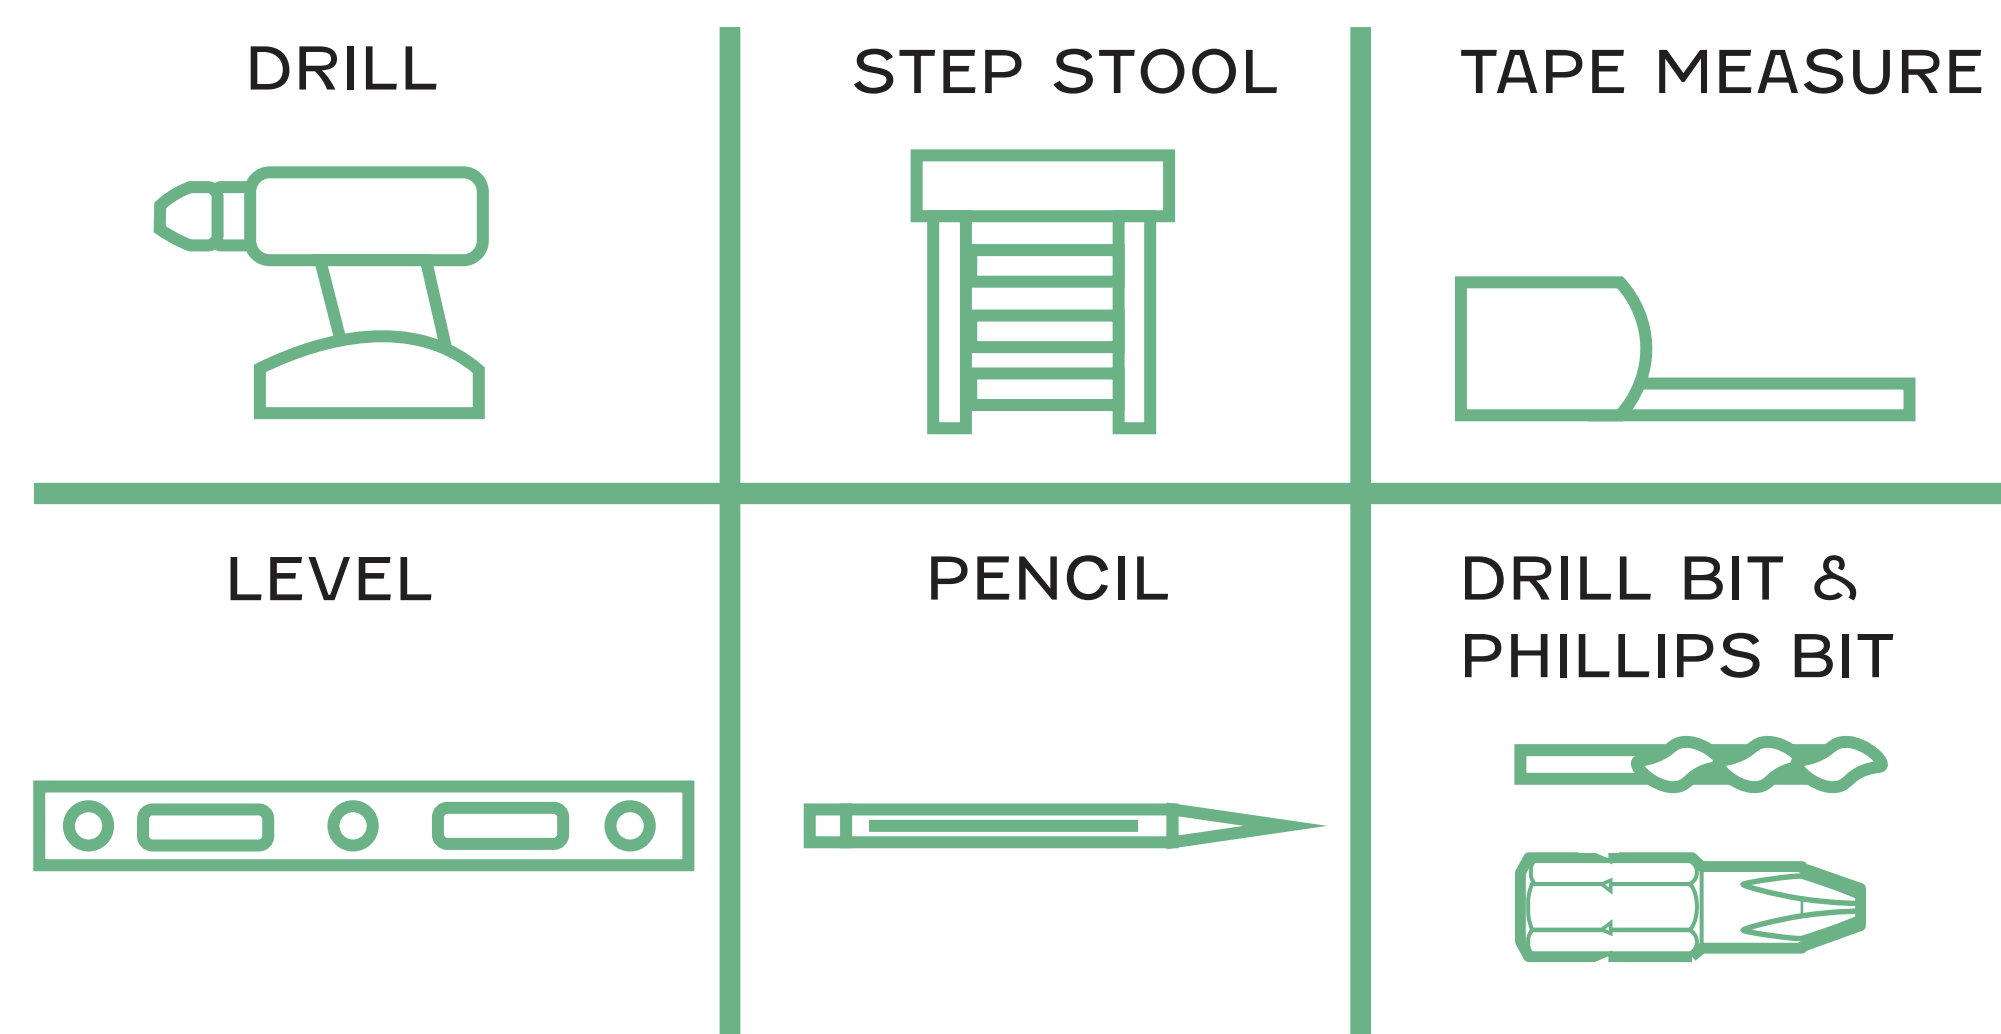

### STEP 1 MARKING BRACKET PLACEMENT

**1** Find the Suggested Rod Height on your invoice. Add 1/4 inch and use this number to mark bracket's height.

**2** Measure the width of your drapery rod.

**RIPPLE FOLD DRAPER Y**

Drape Width(Each): 136"  
Drape Length(Each): 95 3/4"  
These drapes were designed assuming a rod/track width of 1 1/2" and a rod/track height of 1 1/2" (top of rod/track to bottom of track).

**PAIR**




**INVOICE SAMPLE**

- Hardware: 154" White Track (154" x 1 1/2" x 1 1/2") (2)
- Lining: Premium Privacy Lining
- Drapery Wands: 30 in. White Wand (x 2)

**3** Put the end brackets' marks at the new calculated height, 3-4 inches in from the rod ends, and symmetrical to the window/door.

**4** Place the center bracket mark at the exact center between the two end marks.


**5** Make sure that all marks are level to the floor and placed in a straight line.

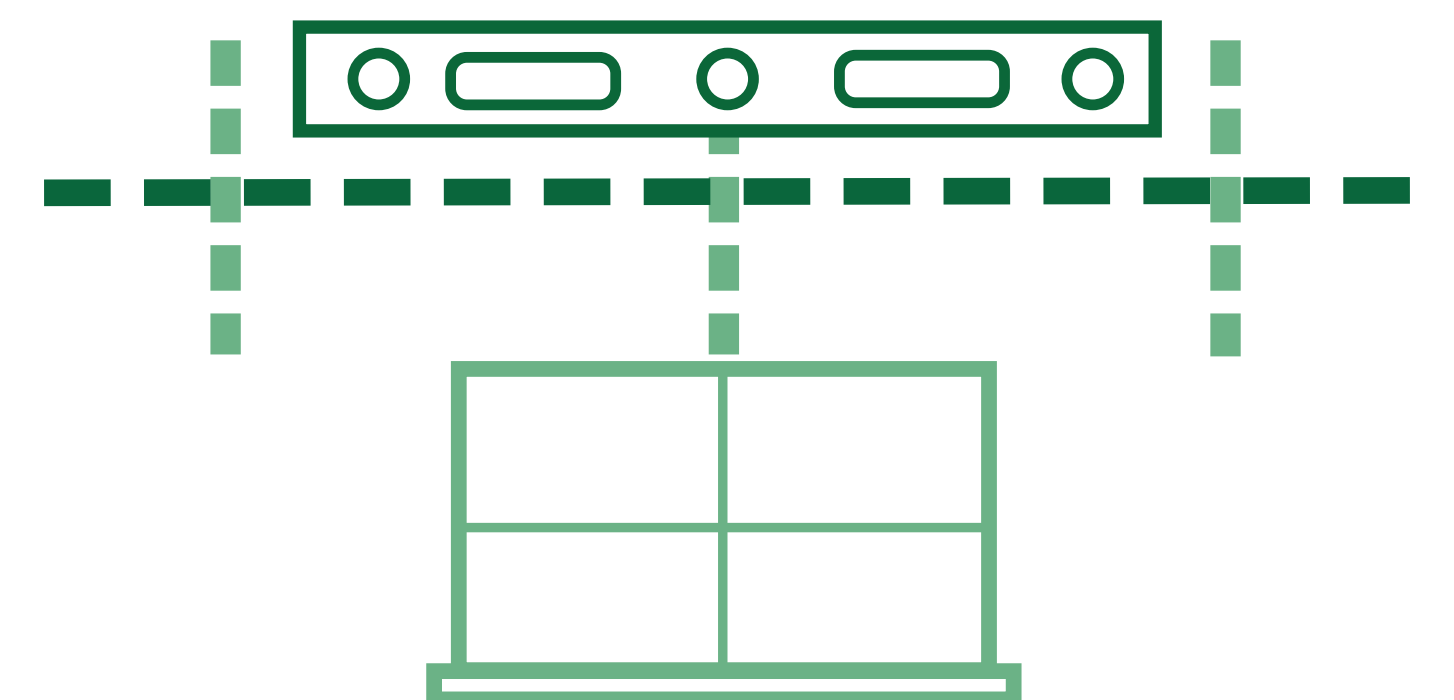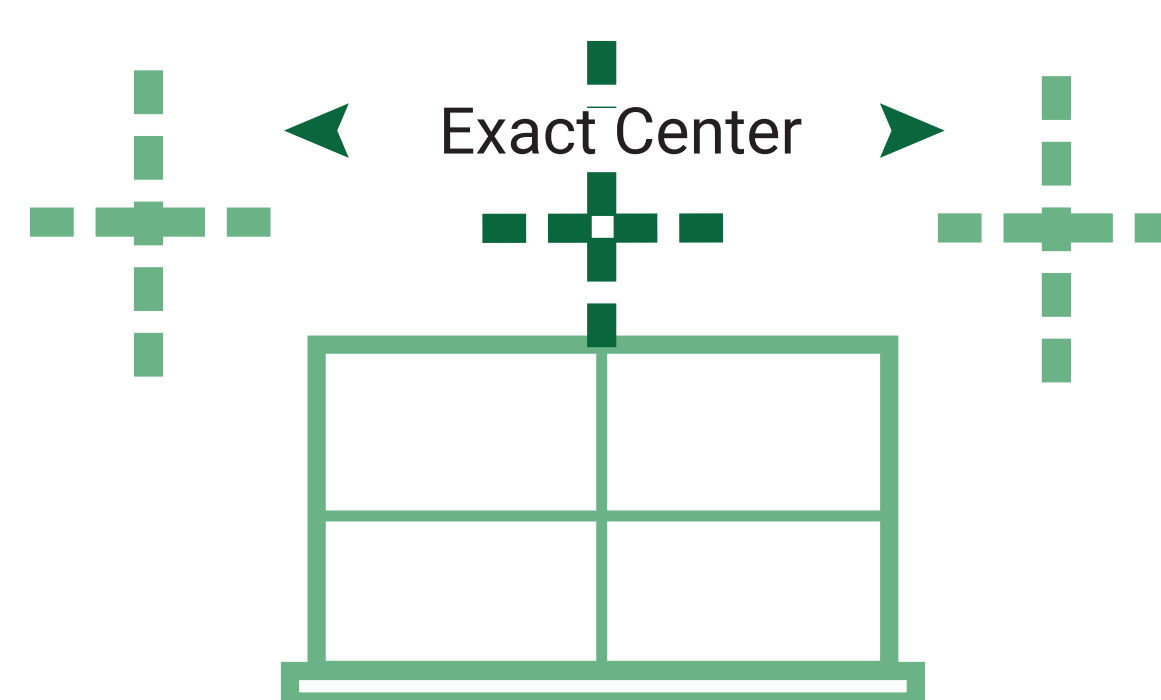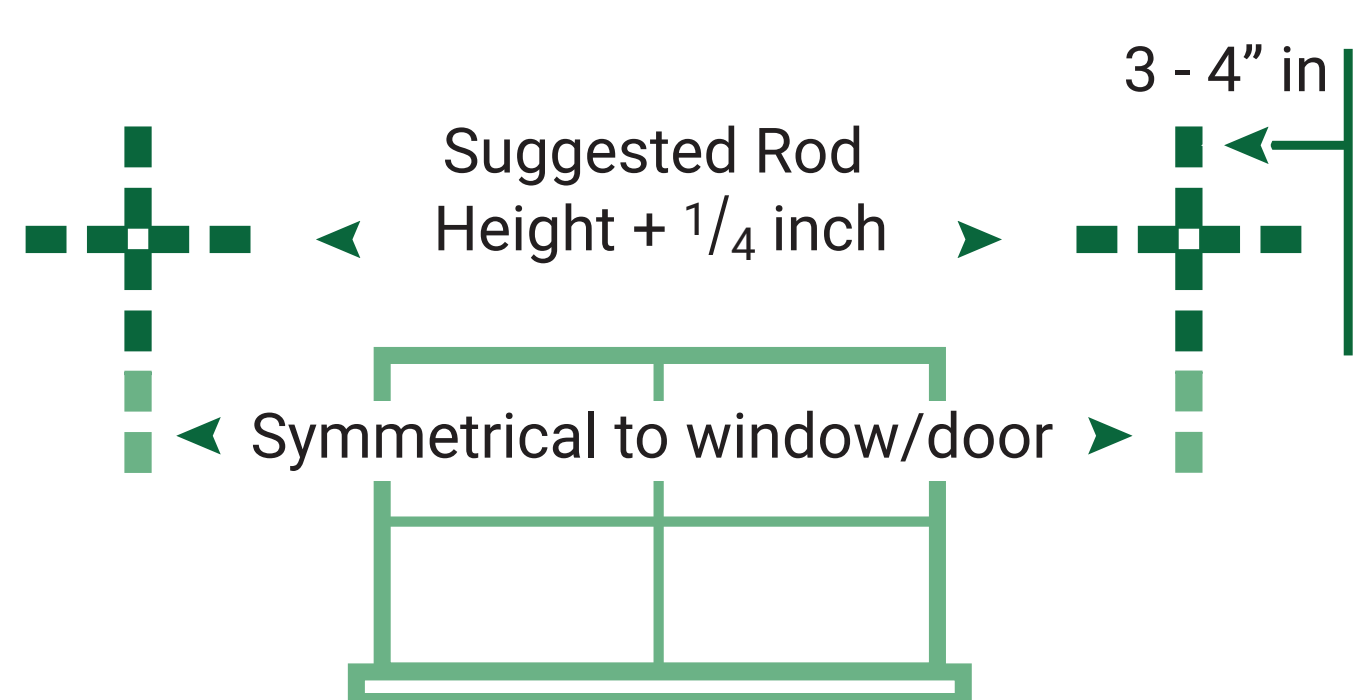


M A D R I D D R A P E R Y H A R D W A R E

## STEP 2 MOUNTING BRACKETS


**1** Place the top of the bracket arm at the horizontal mark on the wall.

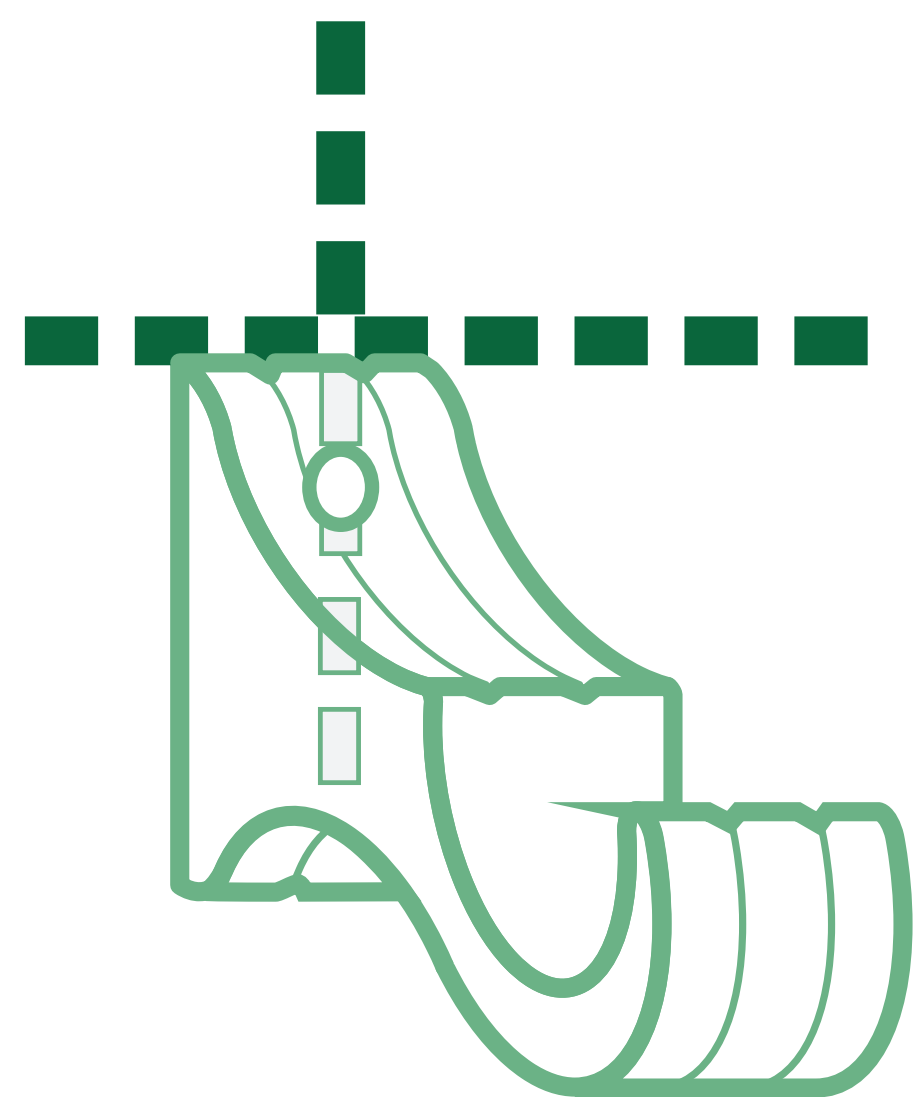

**2** While holding the bracket in place, mark the places of the bracket's holes.

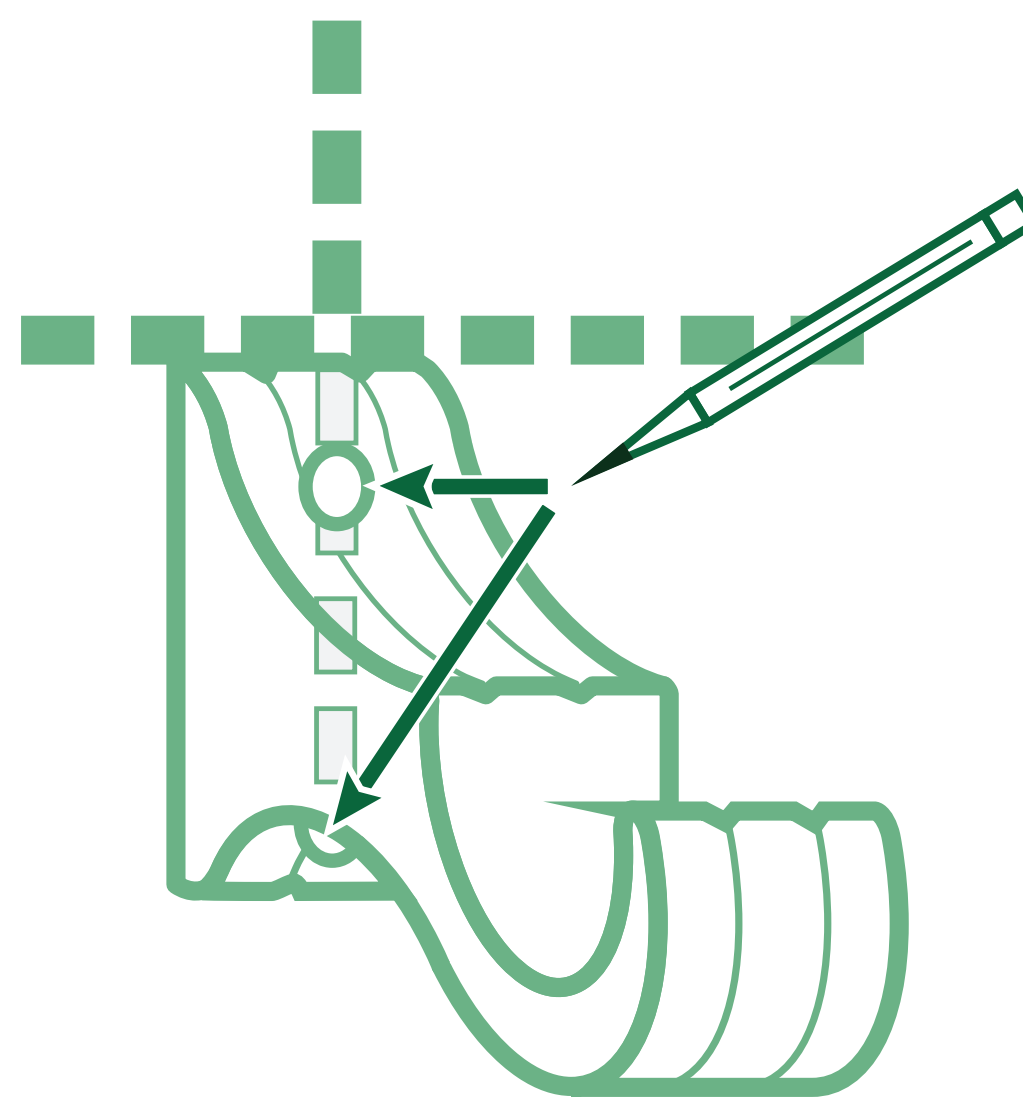


**3** If needed, install the anchors or pre-drill the holes. Drill in the screws to attach the mounting plate.

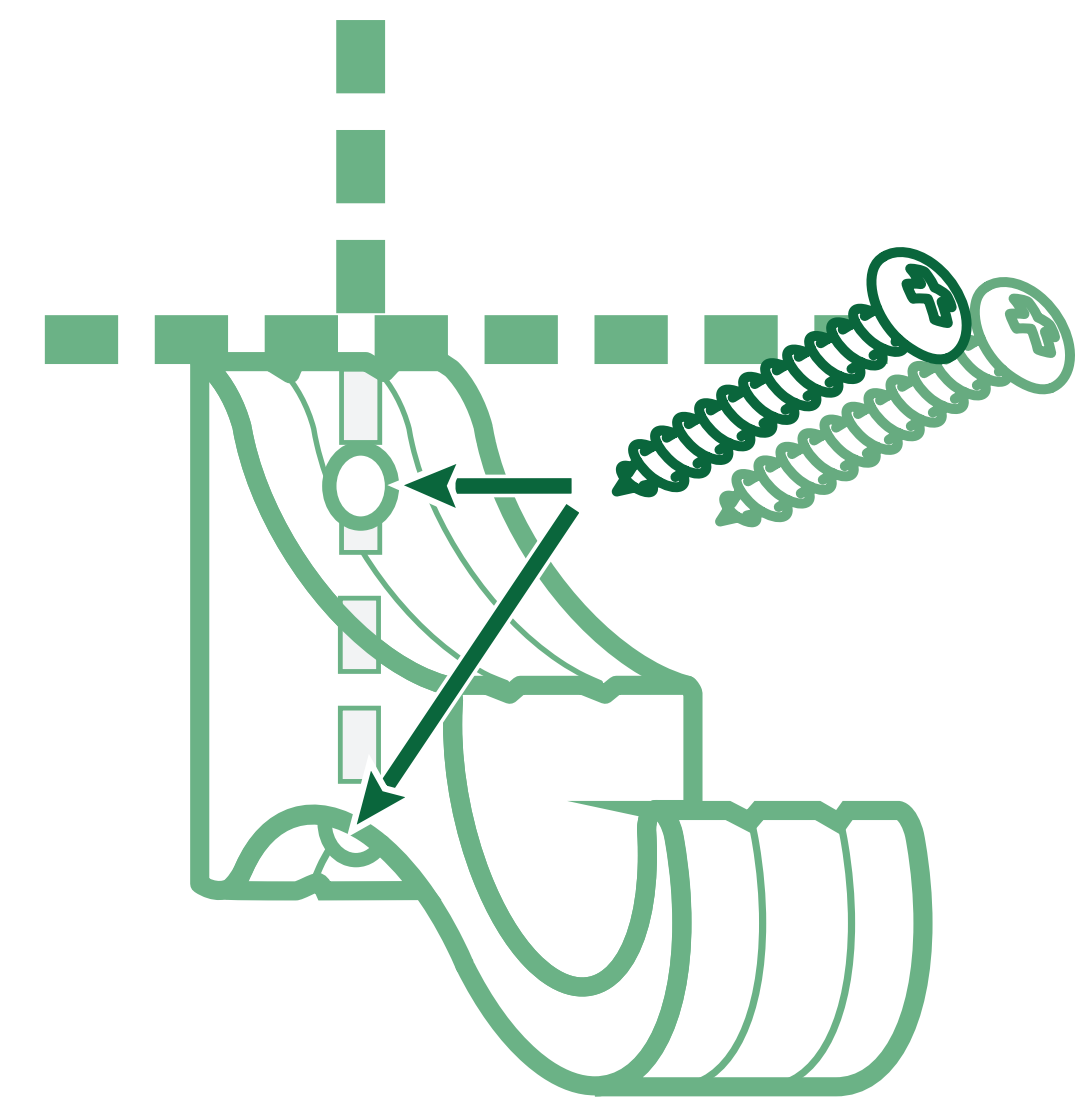


## STEP 3 CONNECTING ROD WITH THE DOWEL PIN (Optional)

**1** If your drapery rod pieces must be connected, screw in the dowel pin halfway into one half of the rod.

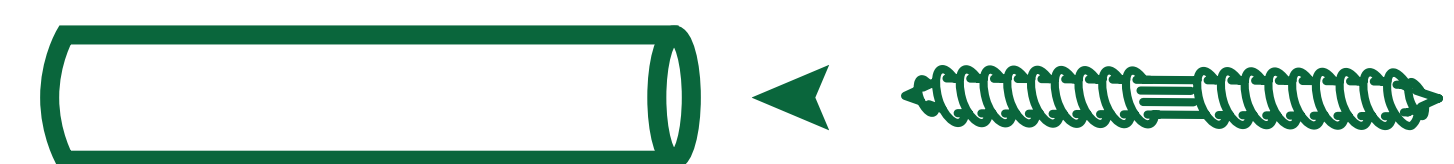


**2** Then screw in the other half of the rod to the dowel pin.

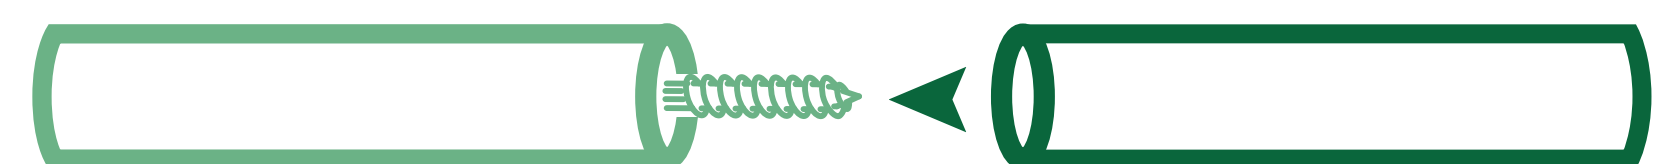


## STEP 4 ATTACHING RINGS, FINIALS, AND MOUNTING ROD


**1** Slide in the rings onto the rod.

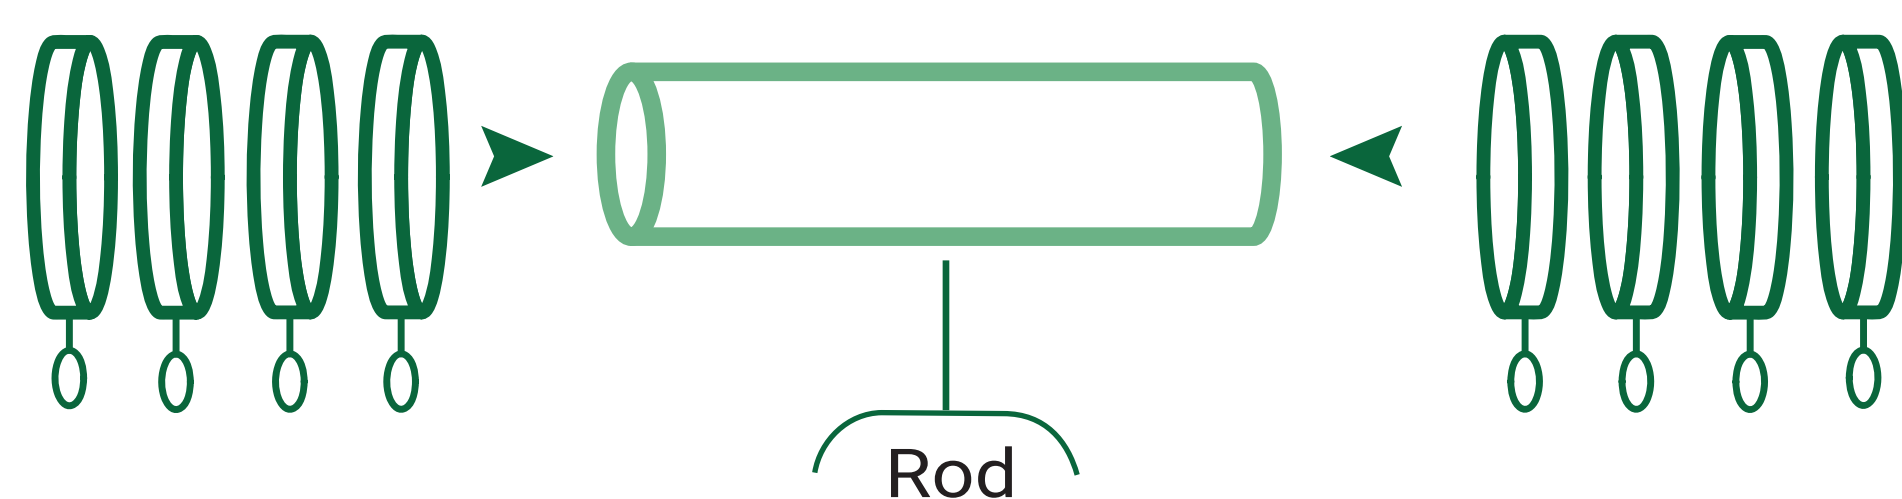


**2** Secure the finials on the rod ends.

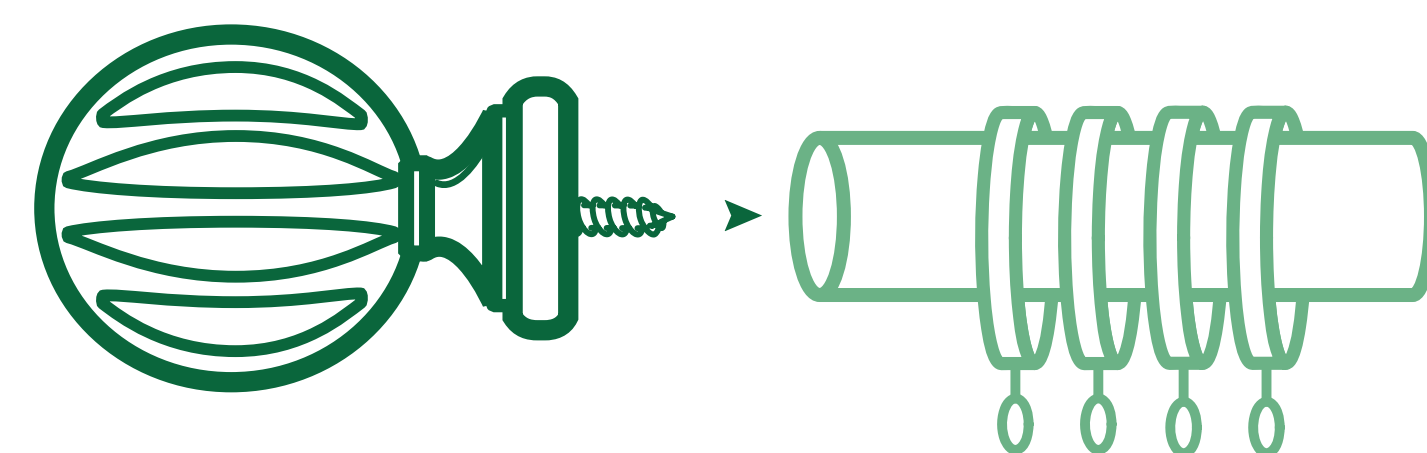

**3** Gently put rod into the bracket arms, then move the last ring to the other side of the bracket arm.

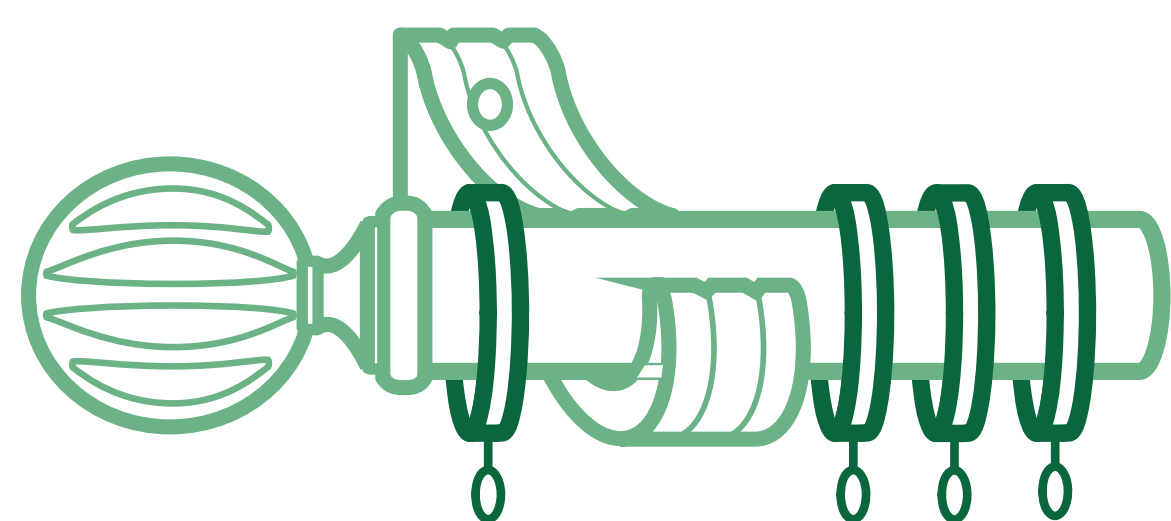

**4** Secure the rod with the screw via the hole on the bottom of the bracket.

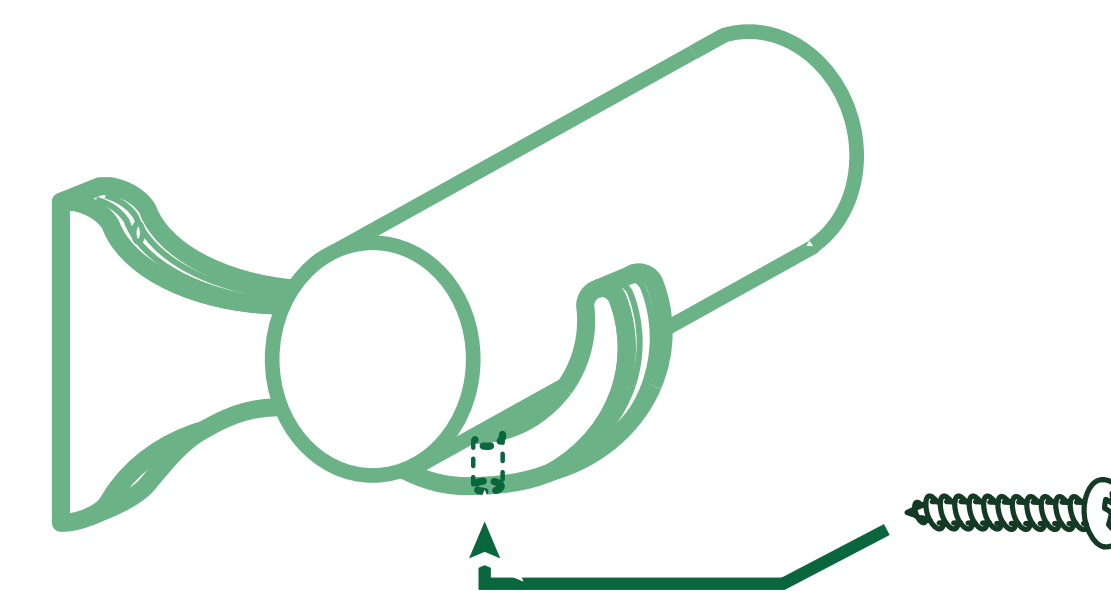

Congratulations, job well done! Still have questions? Customer Care is available at 800-256-5005.

**THANK YOU FOR CHOOSING REGAL DRAPES.**

WE ARE PROUD TO MAKE YOUR DRAPES WITH CAREFUL ATTENTION TO EVERY DETAIL. WE HOPE YOU ENJOY YOUR DRAPES FOR MANY YEARS TO COME.