


# FIRST TIME INSTALLING DRAPES?

DON'T WORRY, WE'LL WALK YOU THROUGH THE WHOLE PROCESS. JUST FOLLOW THESE SIMPLE STEPS AND YOU'RE NEARLY THERE.

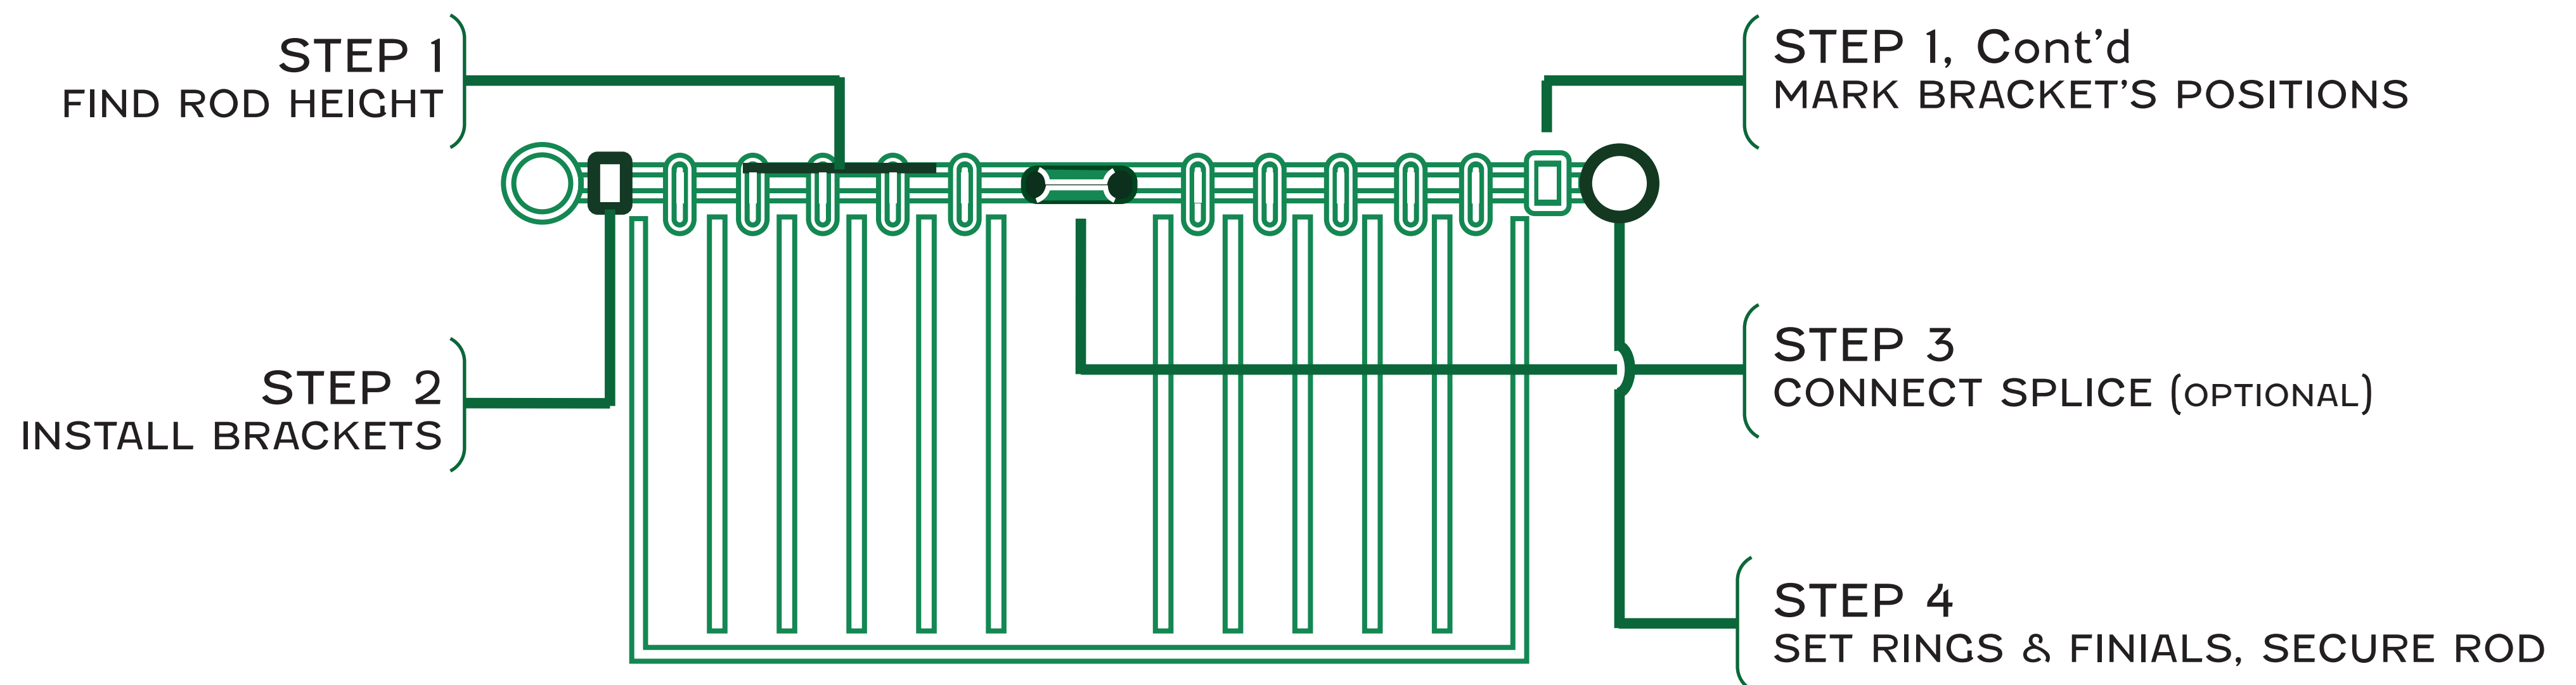

## PARTS YOU GET

<b>DRAPERY ROD</b> 	<b>FINIALS</b> 	<b>BRACKETS</b> 
<b>SCREWS &amp; ANCHORS</b> 	<b>DRAPERY RINGS</b> 	<b>SPLICE</b> 

## TOOLS YOU WILL NEED

<b>DRILL</b> 	<b>STEP STOOL</b> 	<b>TAPE MEASURE</b> 
<b>LEVEL</b> 	<b>PENCIL</b> 	<b>DRILL BIT &amp; PHILLIPS BIT</b> 




## STEP 1 MARKING BRACKET PLACEMENT

- Find the Suggested Rod Height on your invoice.
- Measure the width of your drapery rod.

### RIPPLE FOLD DRAPERY

**PAIR**  
 Drape Width(Each): 136"  
 Drape Length(Each): 95 3/4"  
 These drapes were designed assuming a rod/track length of 154" and a rod/track height of 95 3/4" (top of rod/track to floor).  
 • Hardware: 154" White Track (154" x 1 1/2" x 1 1/2")  
 • Lining: Premium Privacy Lining  
 • Drapery Wands: 30 in. White Wand (x 2)


- Put the end brackets' marks at the Suggested Rod Height, 3-4 inches in from the rod ends, and symmetrical to the window/door.
- Place the center bracket mark at the exact center between the two end marks.
- Make sure that all marks are level to the floor and placed in a straight line.

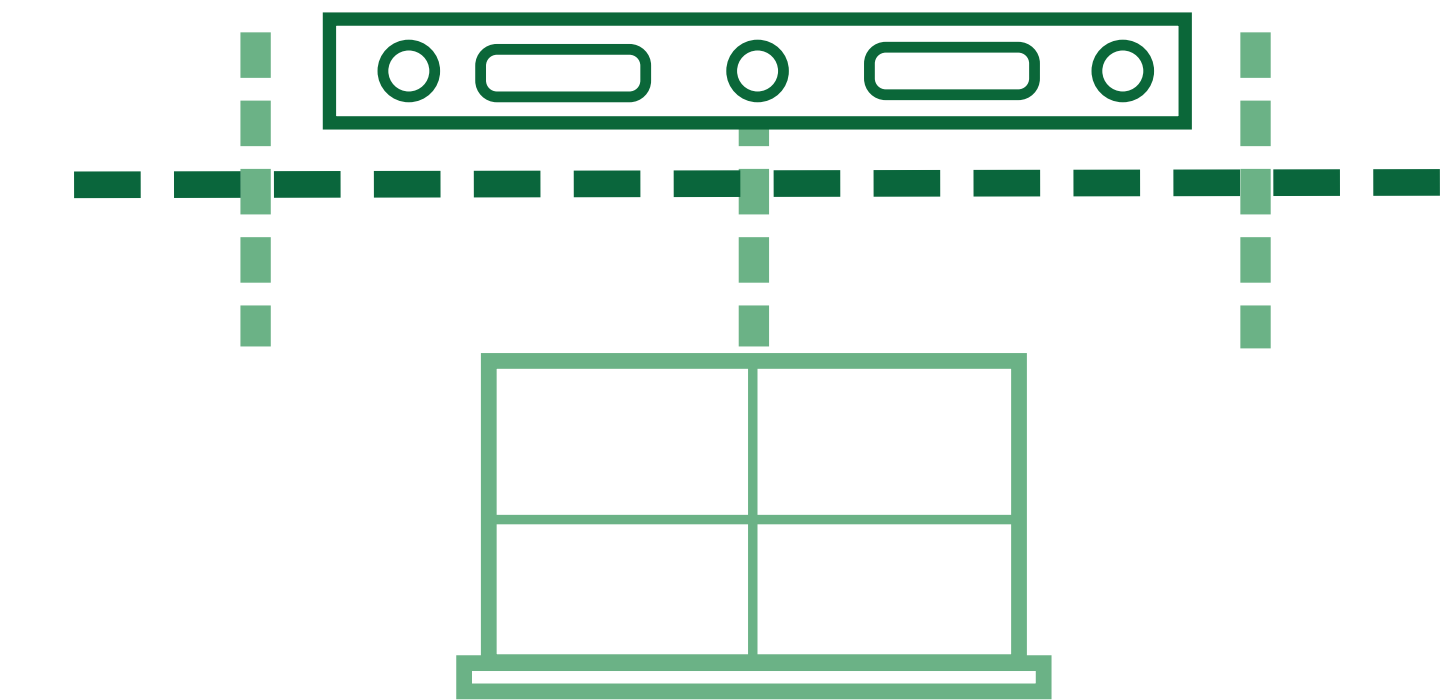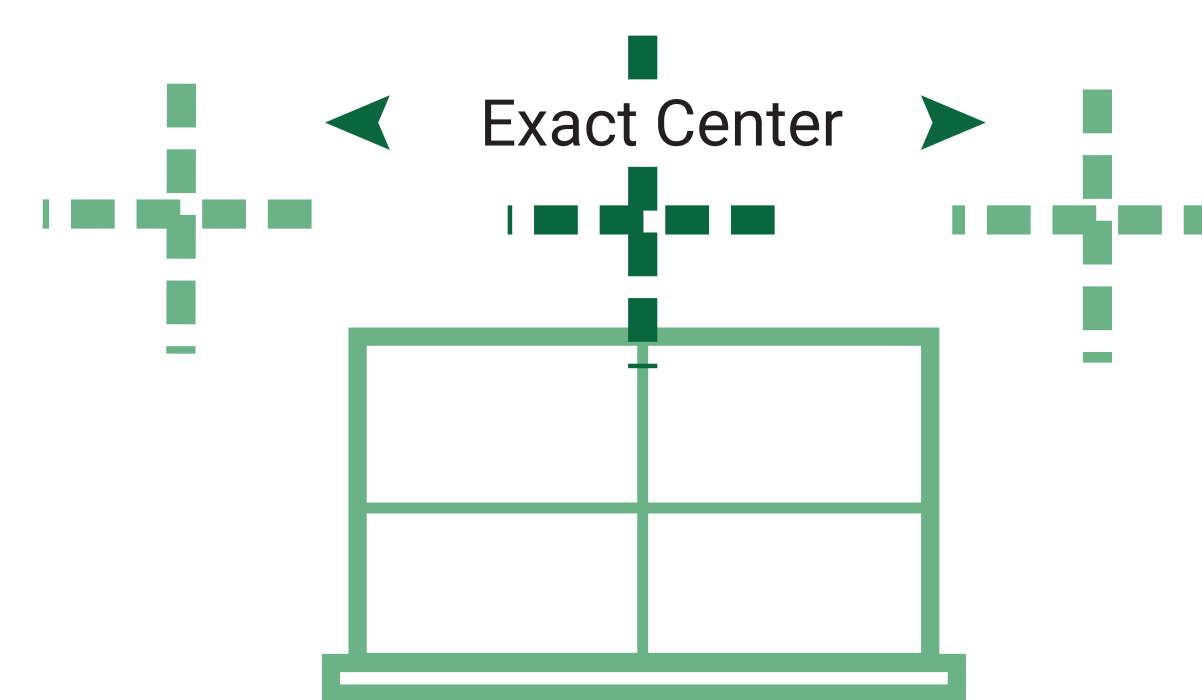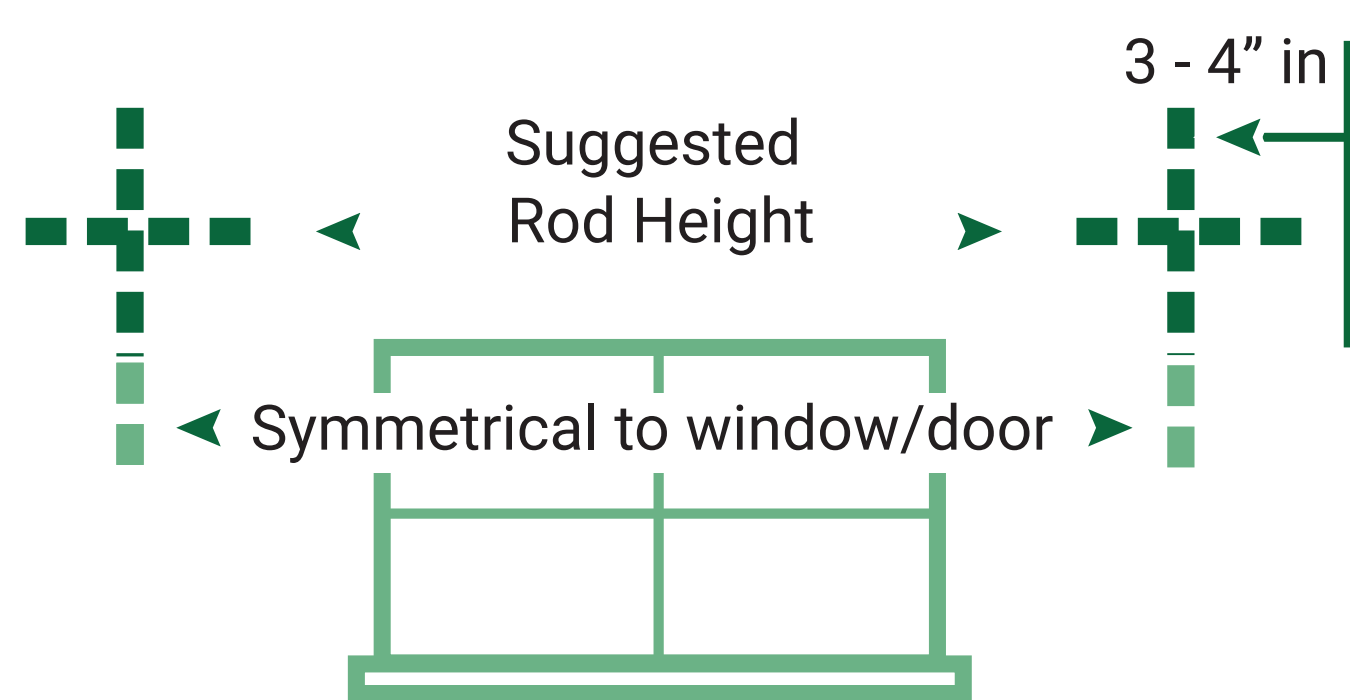


MILAN DRAPERY HARDWARE

## STEP 2 PLACING BRACKET MOUNTING PLATE


**1** Unscrew the mounting plate from the bracket's central threaded rod.

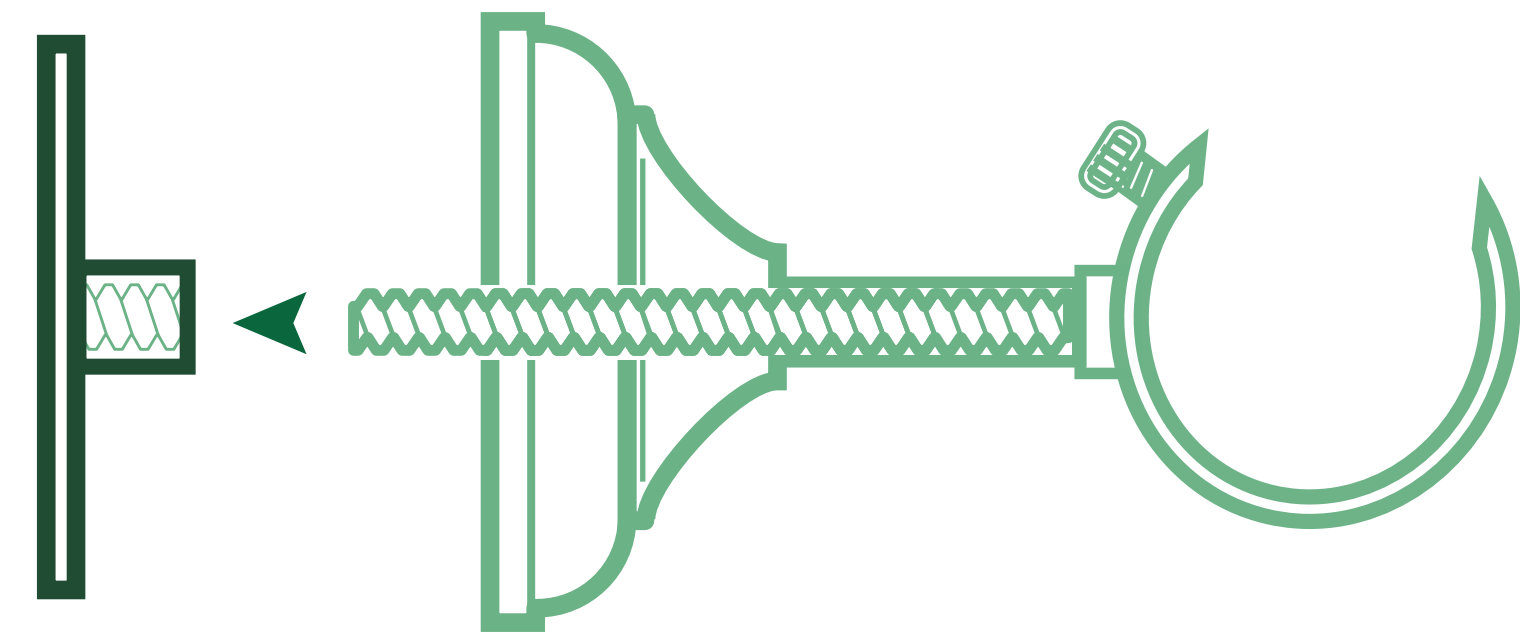


**2** Position the circular hole of the mounting plate on the mark facing up.

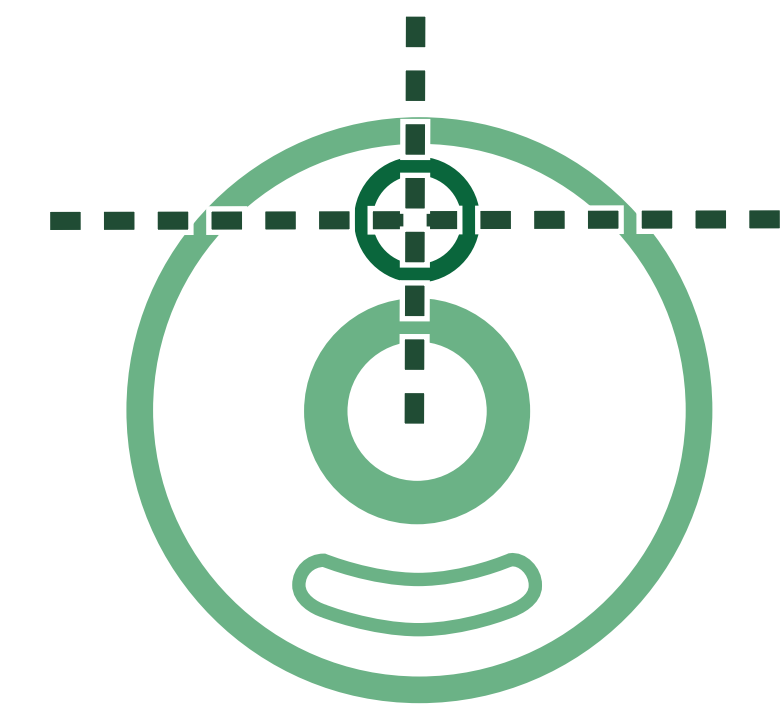


**3** Use holes to mark the positions for screws or anchors.

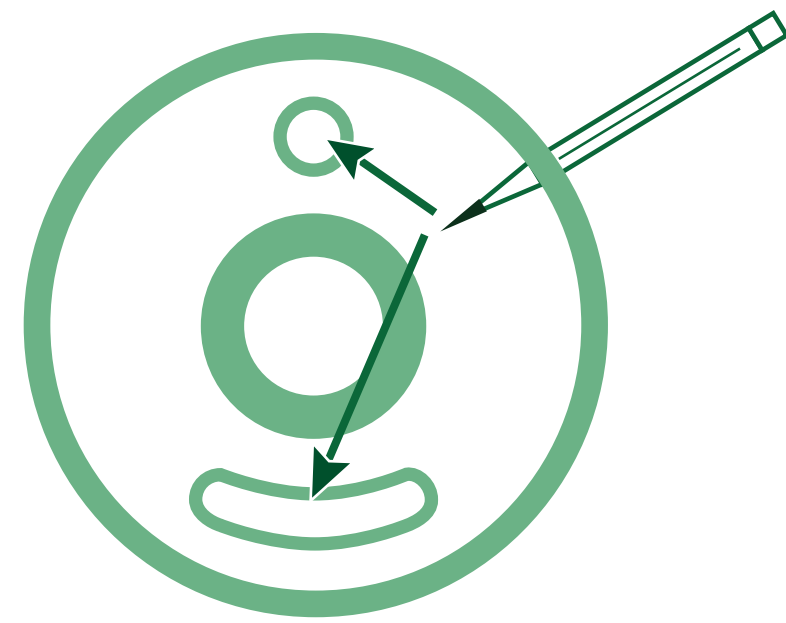

**4** If needed, pre-drill the holes or install the anchors. Drill in the screws to attach the mounting plate.

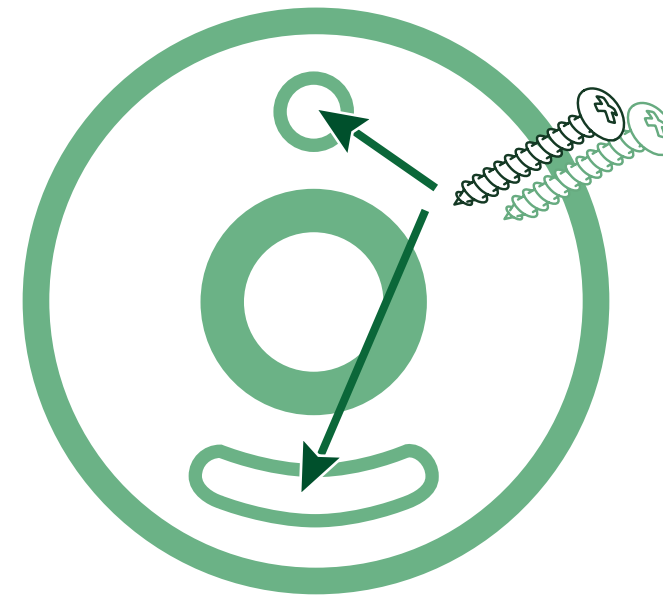


**5** Screw in the bracket to the mounting plate.

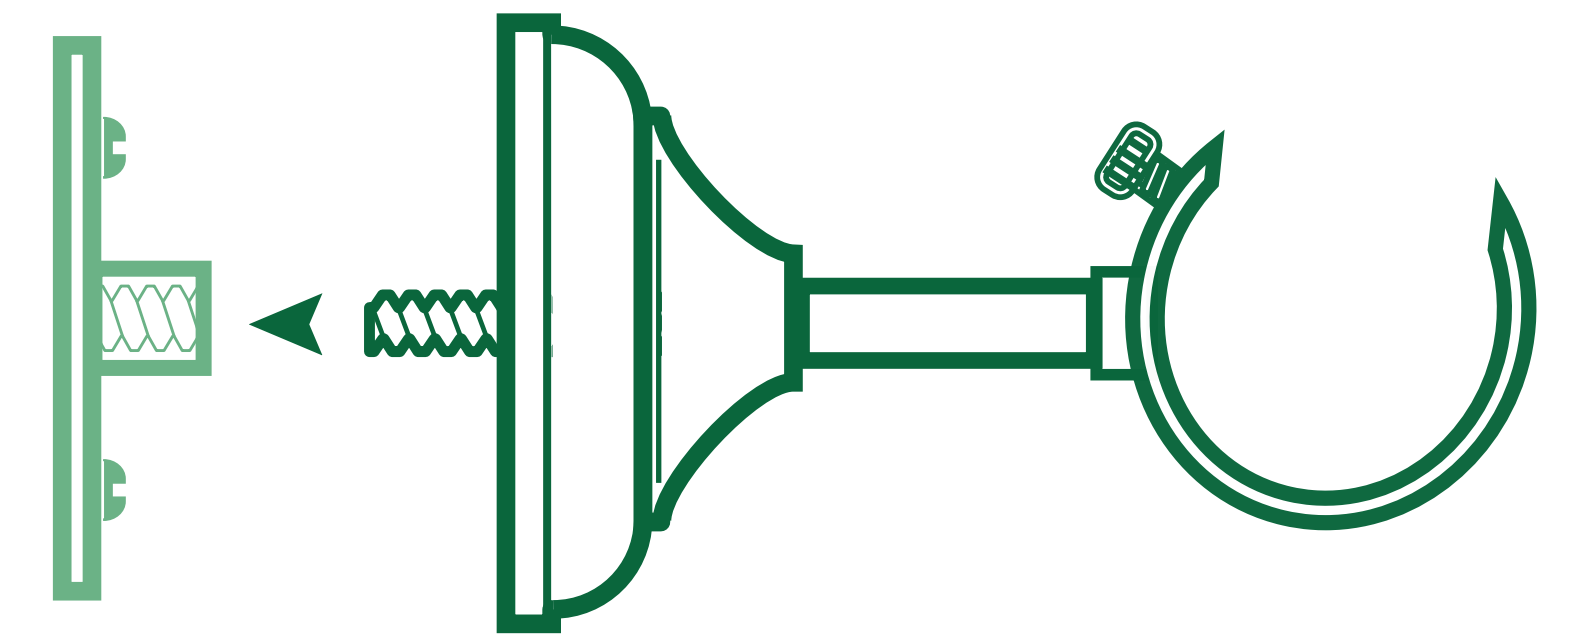


## STEP 3 CONNECTING ROD WITH SPLICE (OPTIONAL)

**1** Insert the splice halfway into the rod. Then attach the other half of the rod to the splice.

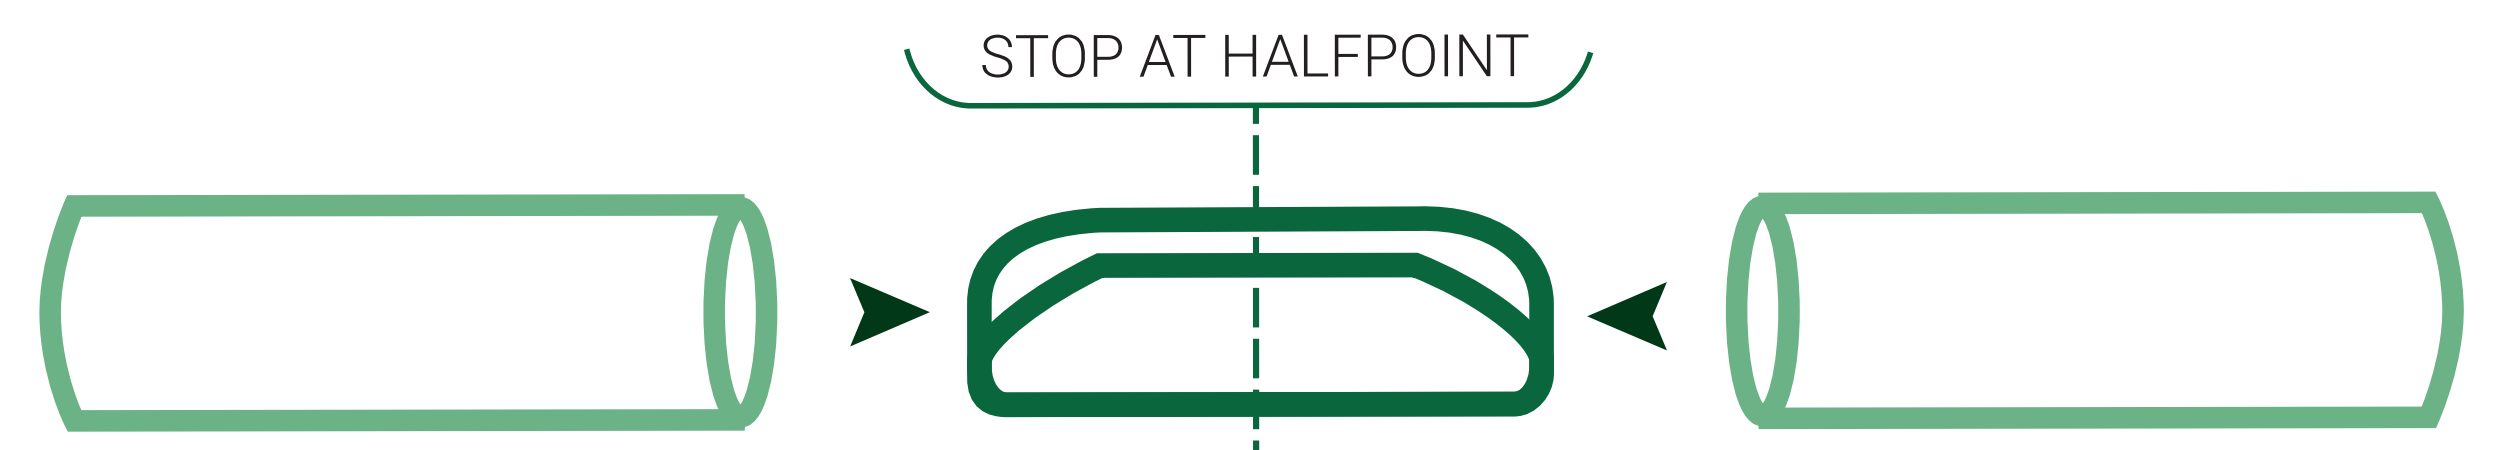


## STEP 4 ATTACHING RINGS, FINIALS, AND MOUNTING ROD


**1** Slide in the rings onto the rod.

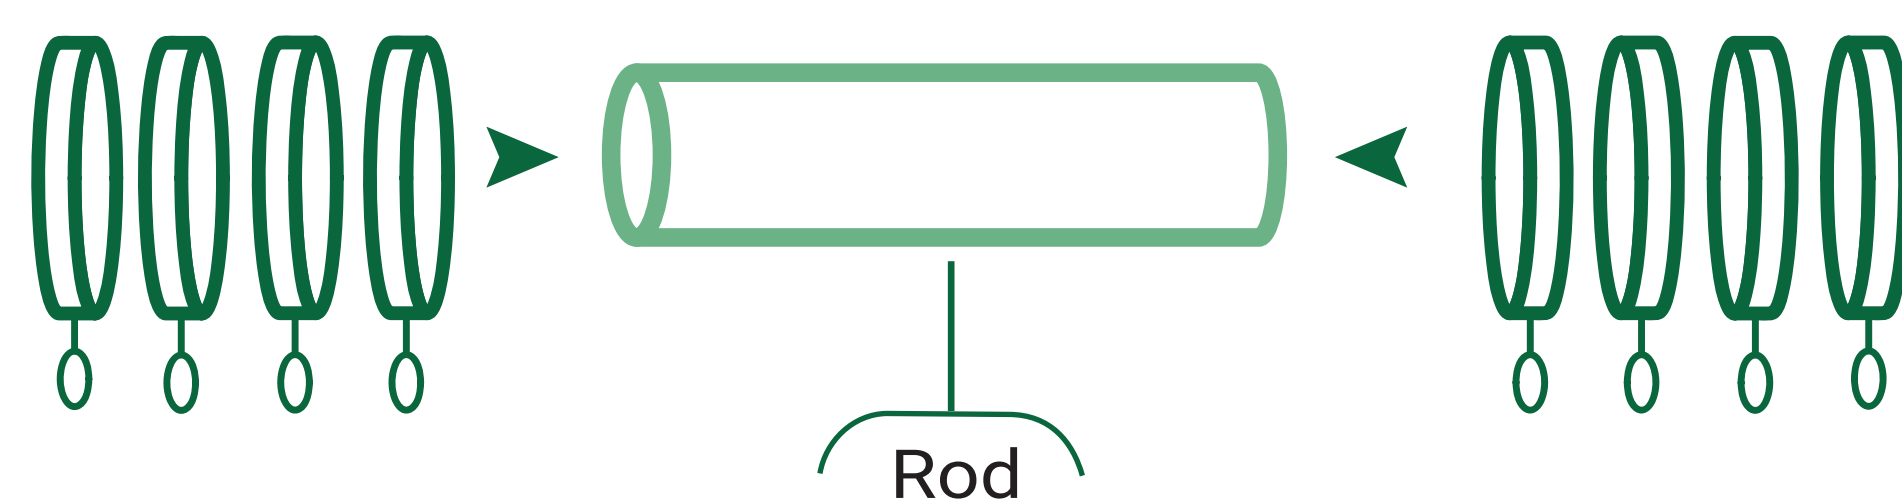


**2** Secure the finials on the rod ends.

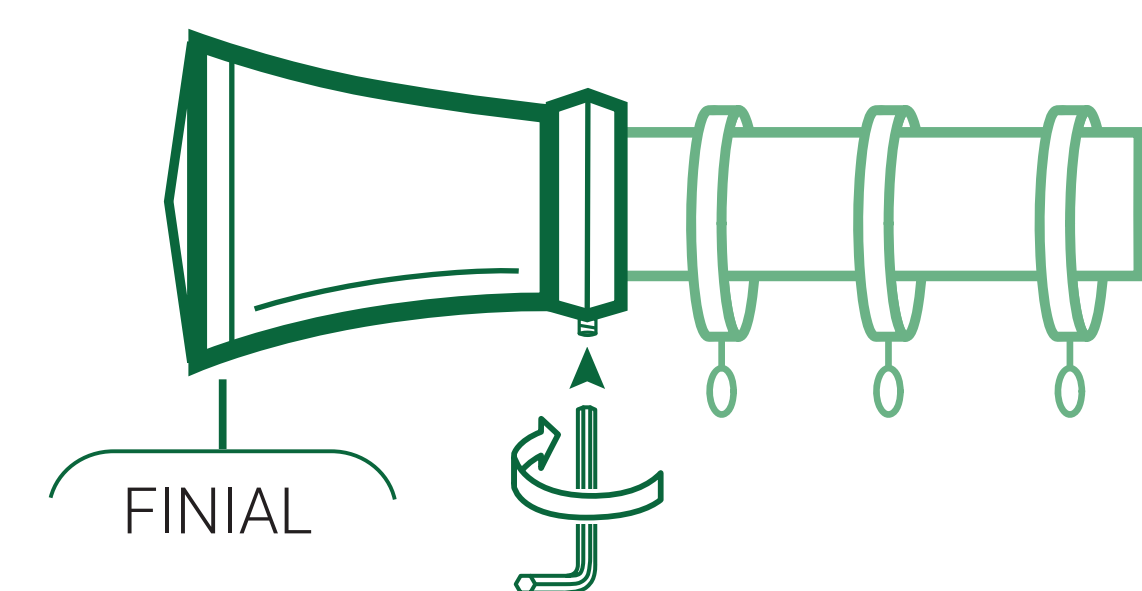

**3** Gently put rod into the bracket arms, then move the last ring to the other side of the bracket arm.

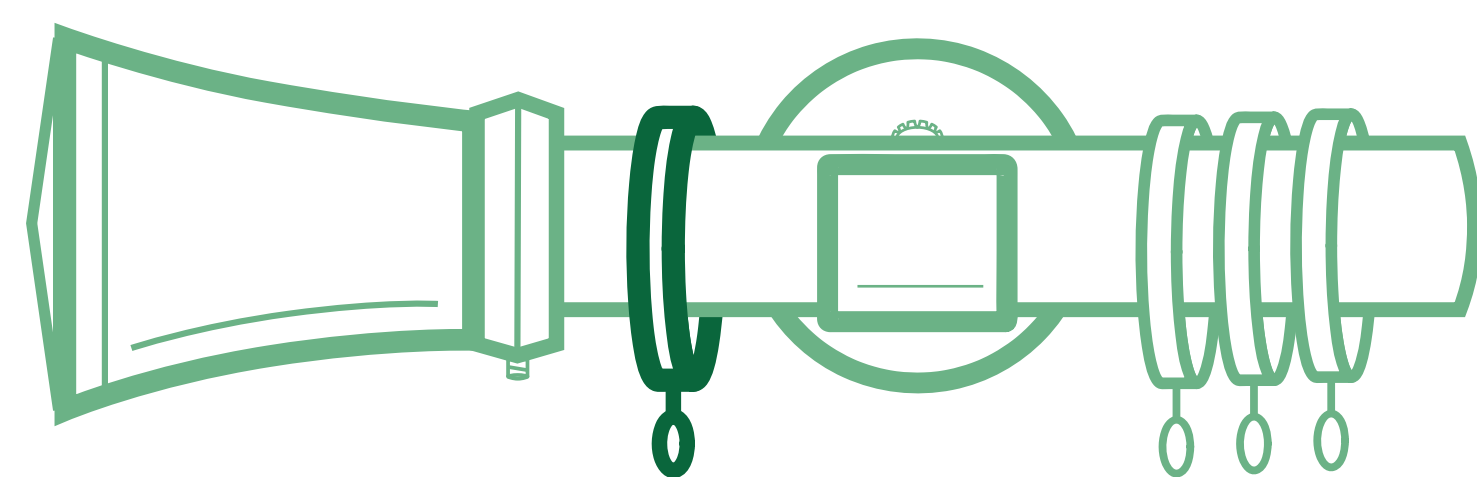

**4** Center the rod on the brackets and secure it with the Allen key.

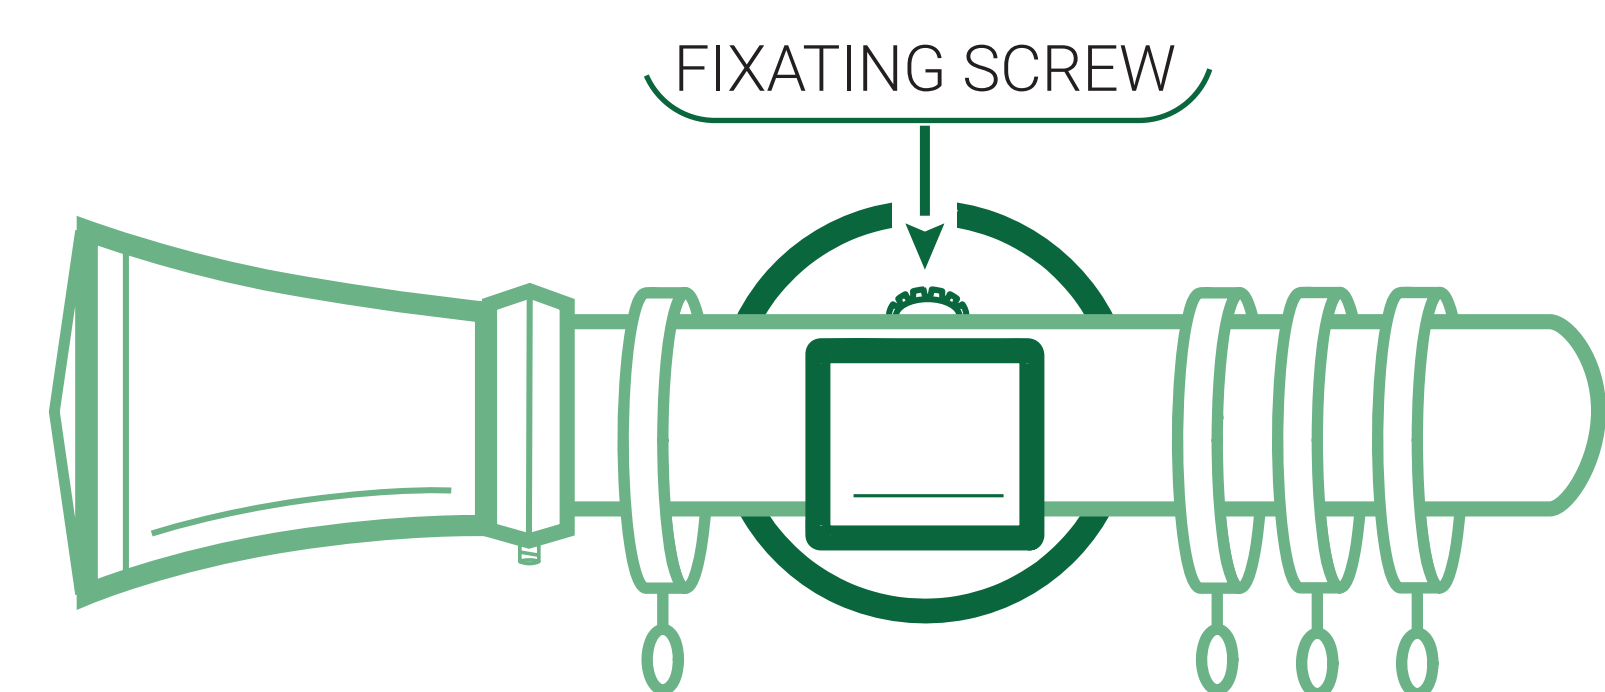

Congratulations, job well done! Still have questions? Customer Care is available at 800-256-5005.

**THANK YOU FOR CHOOSING REGAL DRAPES.**

WE ARE PROUD TO MAKE YOUR DRAPES WITH CAREFUL ATTENTION TO EVERY DETAIL. WE HOPE YOU ENJOY YOUR DRAPES FOR MANY YEARS TO COME.