


FIRST TIME INSTALLING DRAPES?

DON'T WORRY, WE'LL WALK YOU THROUGH THE WHOLE PROCESS. JUST FOLLOW THESE SIMPLE STEPS AND YOU'RE NEARLY THERE.

ROMA DRAPERY HARDWARE

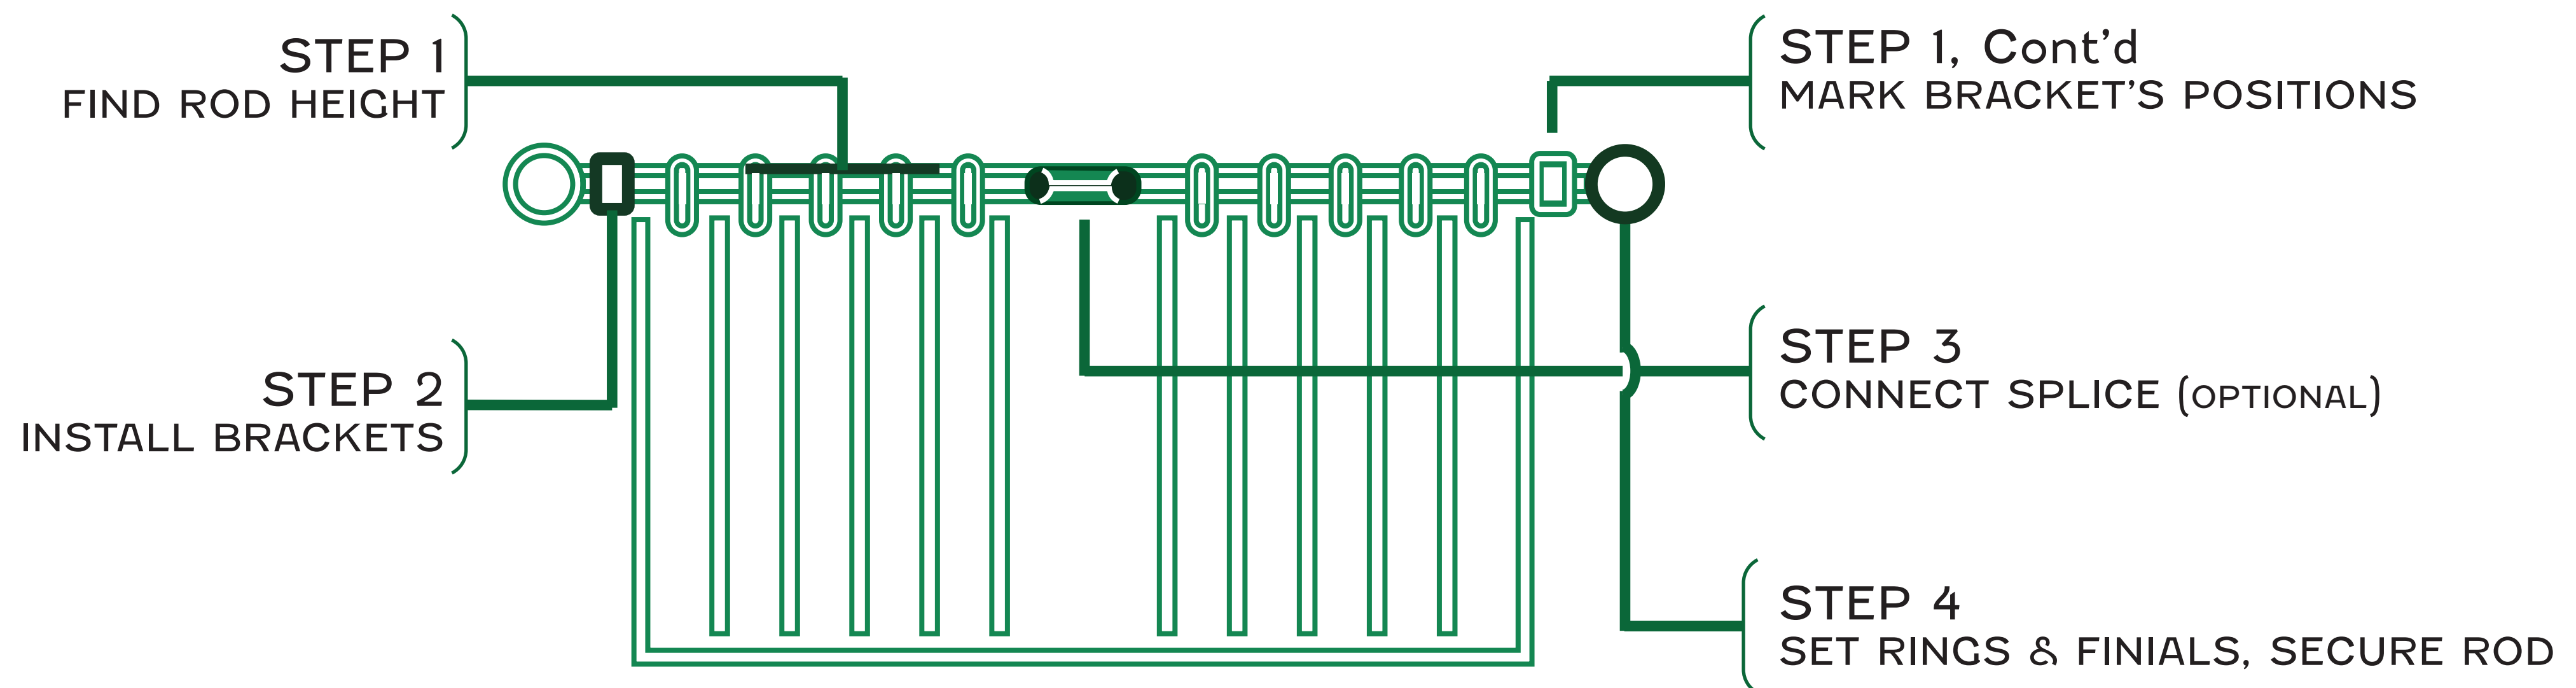

PARTS YOU GET

DRAPERY ROD 	FINIALS 	BRACKETS
SCREWS & ANCHORS 	DRAPERY RINGS 	DOWEL PIN (OPTIONAL)

TOOLS YOU WILL NEED

DRILL 	STEP STOOL 	TAPE MEASURE
LEVEL 	PENCIL 	DRILL BIT & PHILLIPS BIT

STEP 1 MARKING BRACKET PLACEMENT

1 Find the Suggested Rod Height on your invoice. Add $\frac{1}{4}$ inch to this number and use this number to mark the bracket's location.

2 Measure the width of your drapery rod.

RIPPLE FOLD DRAPERY

Drape Width(Each): 136"
 Drape Length(Each): 95 3/4"
 These drapes were designed assuming a rod/track length of 154" and a rod/track height of 95 3/4".

PAIR




• Hardware: 154" White Track (Wand Draw)
 • Lining: Premium Privacy Lining
 • Drapery Wands: 30 in. White Wand (x 2)

INVOICE SAMPLE

3 Put the end brackets' marks at the height calculated at the step 1, 3-4 inches in from the rod ends, and symmetrical to the window/door.


4 For rods conneted with the dovel pin, place the center bracket mark at the exact center between the two end marks.

5 Make sure that all marks are level to the floor and placed in a straight line.

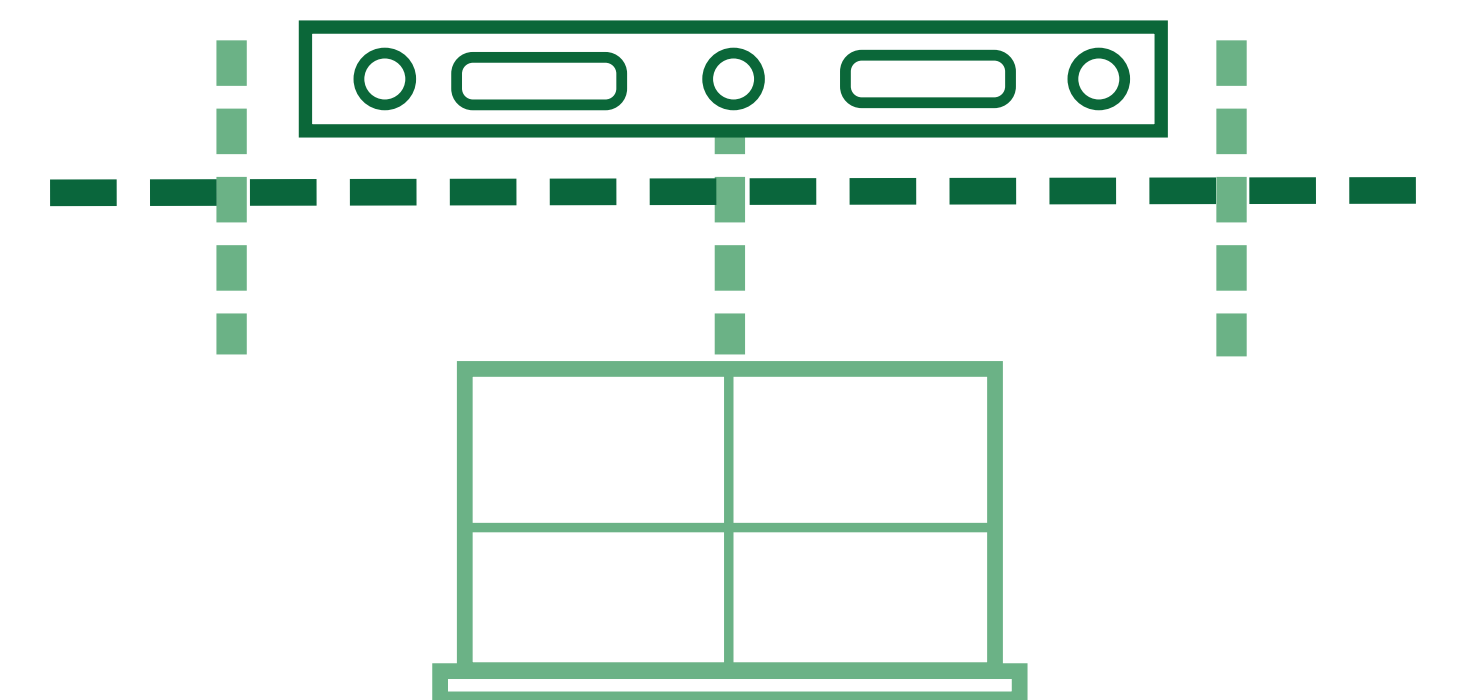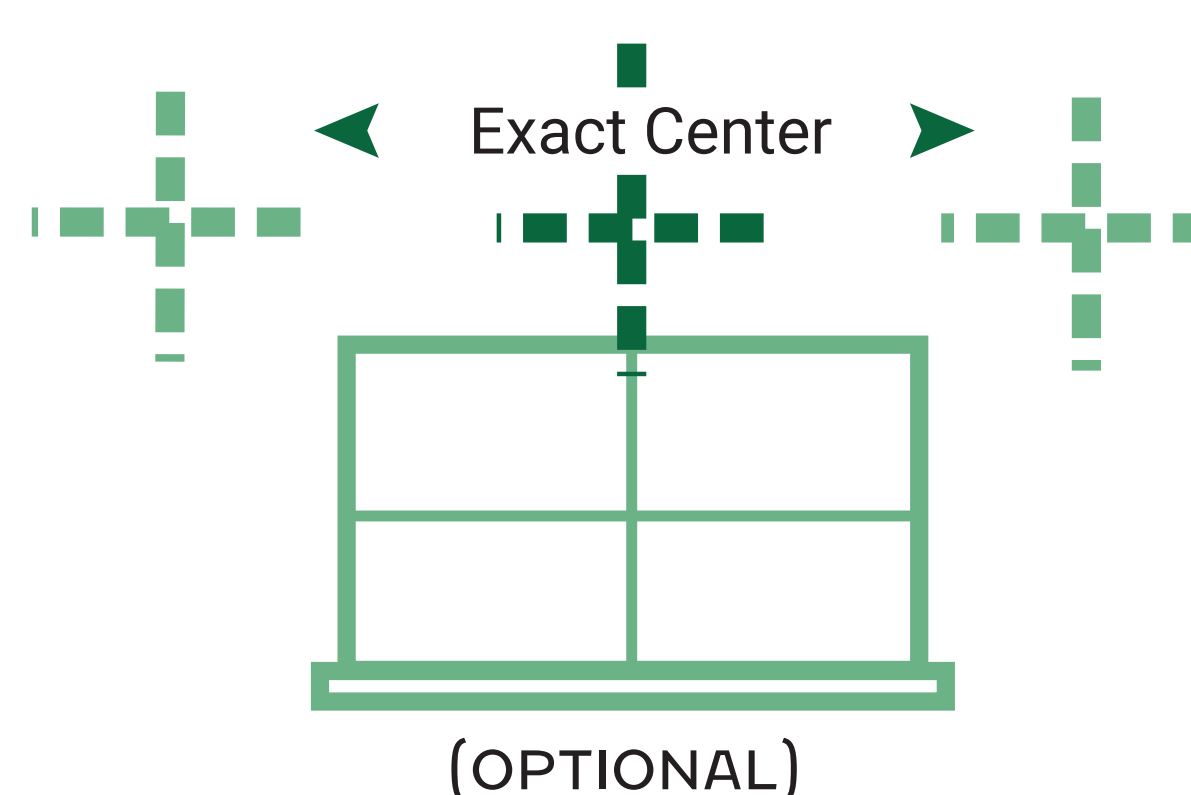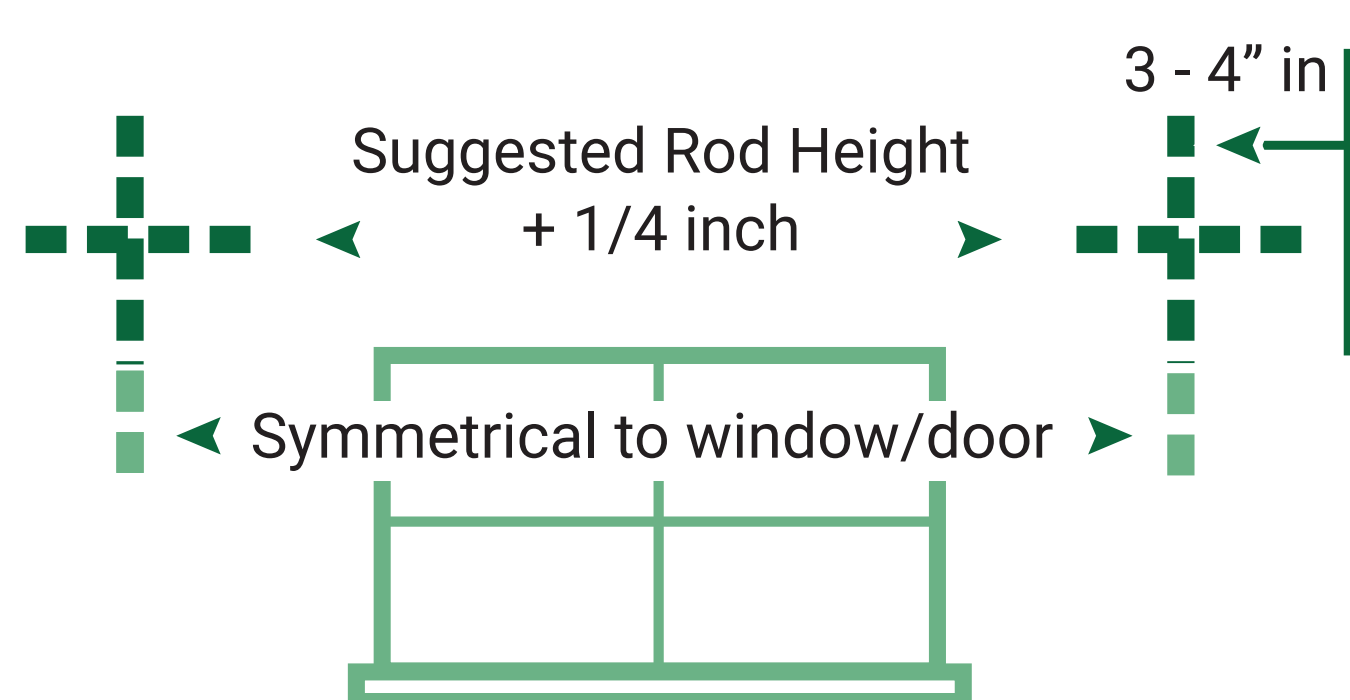


STEP 2 PLACING BRACKETS


1 Detach the mounting plate from the bracket.

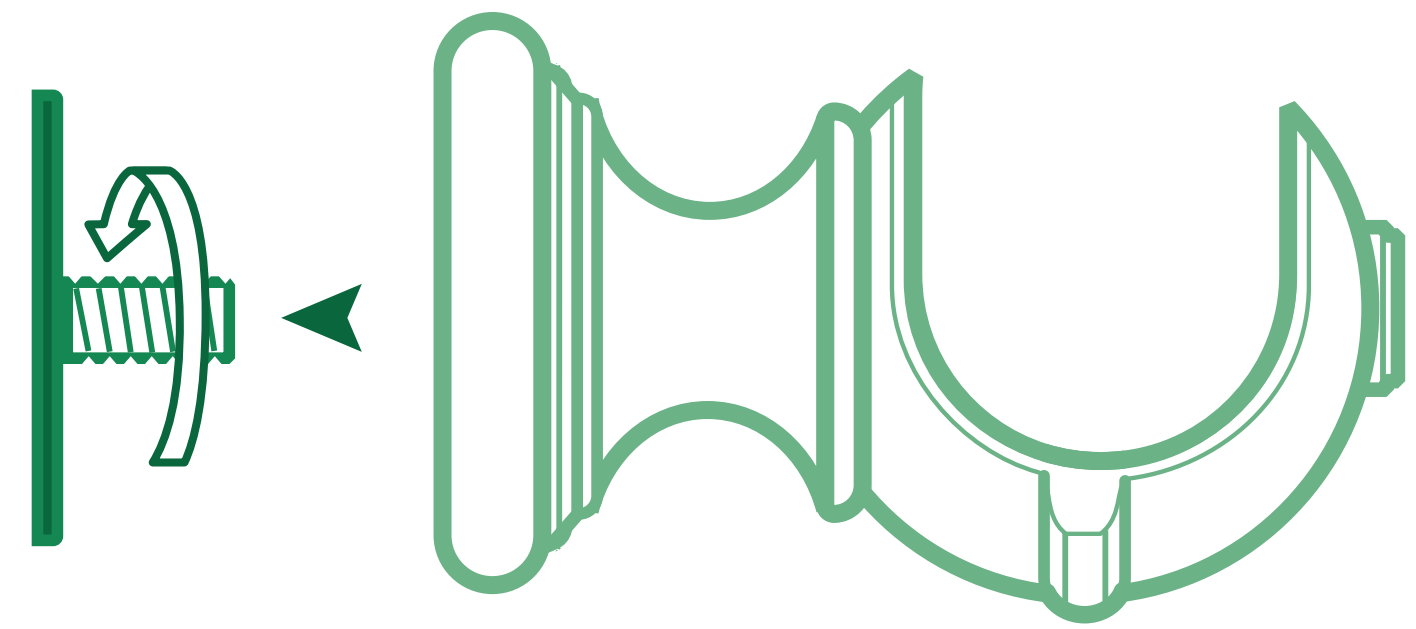


2 Position the circular hole on the mark facing up.

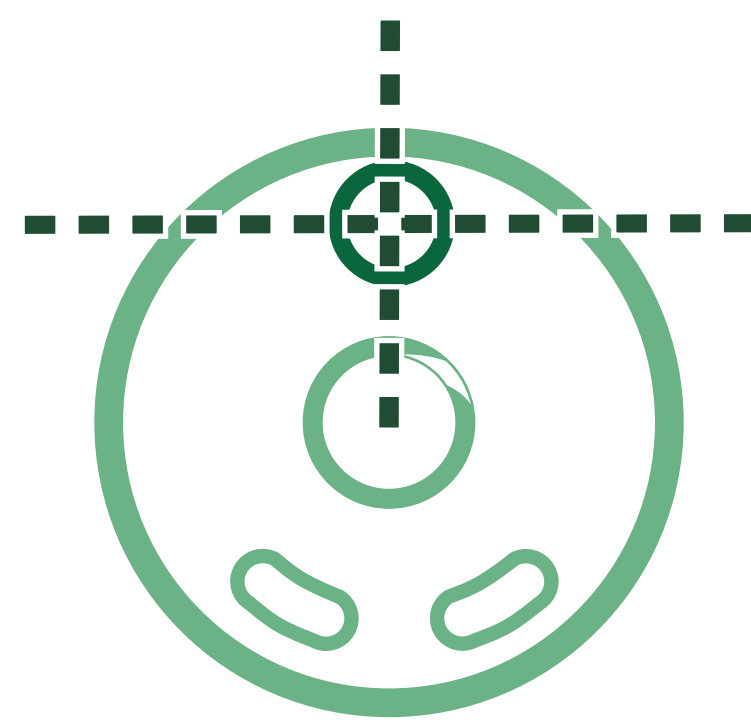


3 Use holes to mark the positions for screws or anchors.

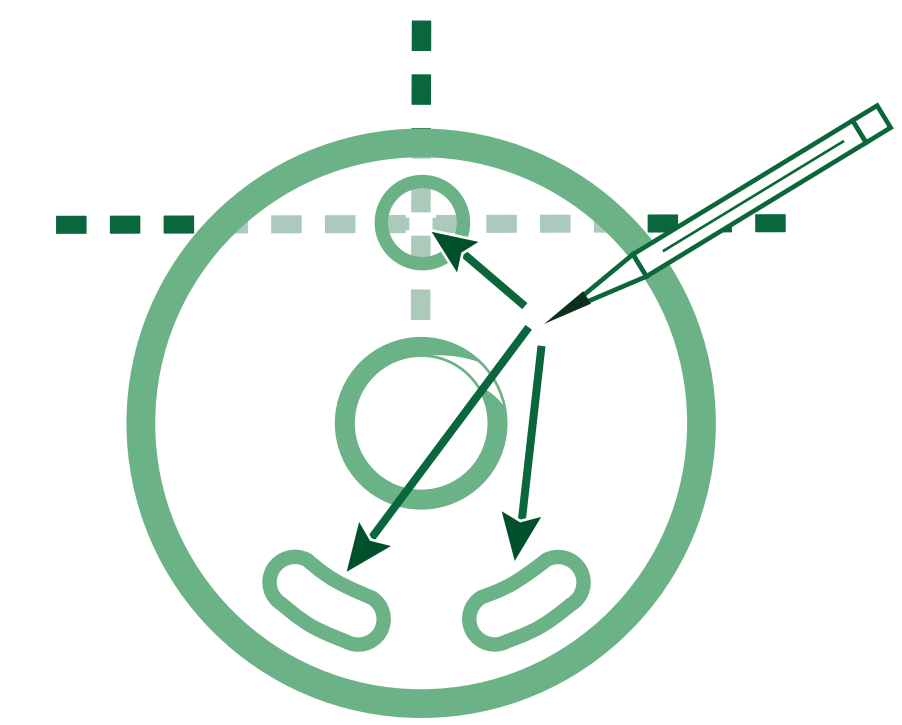

4 If needed, install the anchors or pre-drill the holes. Drill in the screws to attach the mounting plate.

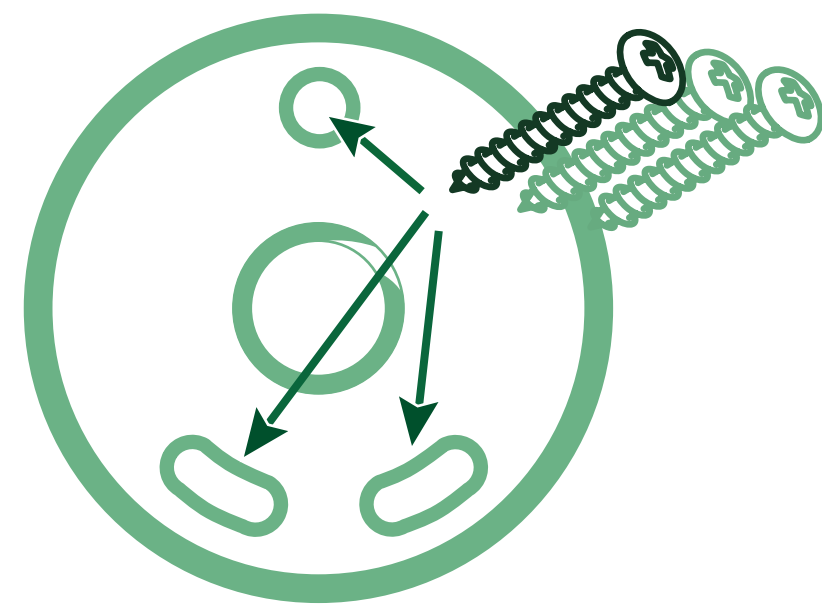


5 Screw in the bracket to the mounting plate.

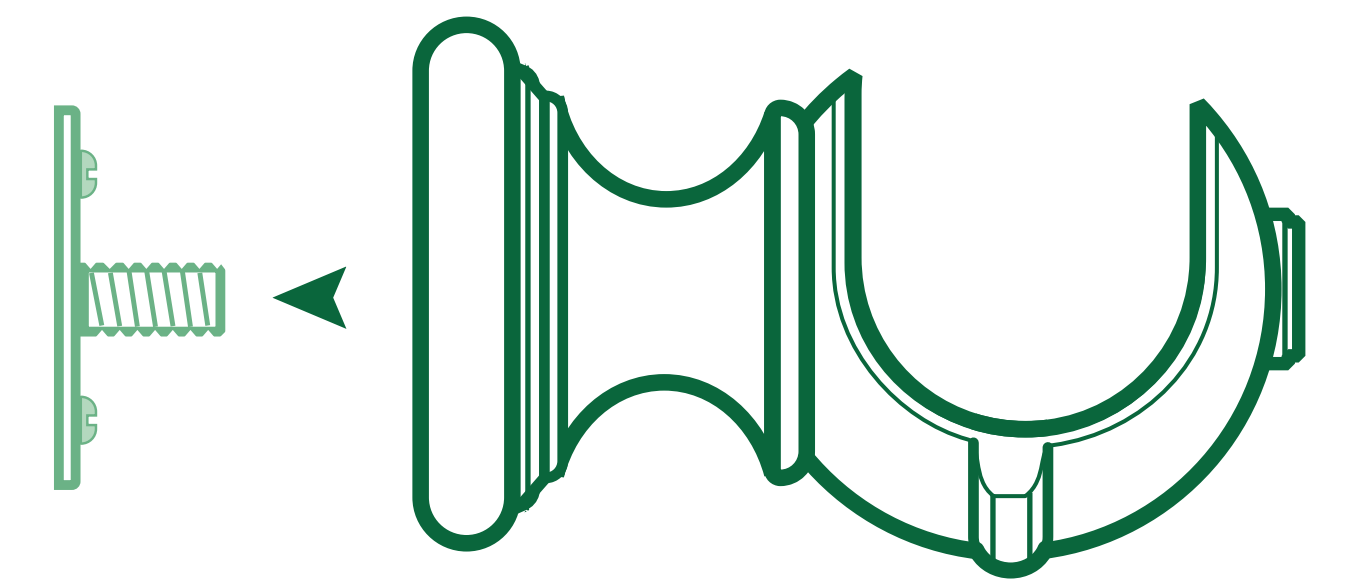


STEP 3 CONNECTING ROD WITH SPLICE (OPTIONAL)

1 If your drapery rod pieces must be connected, screw in the dowel pin halfway into one half of the rod.

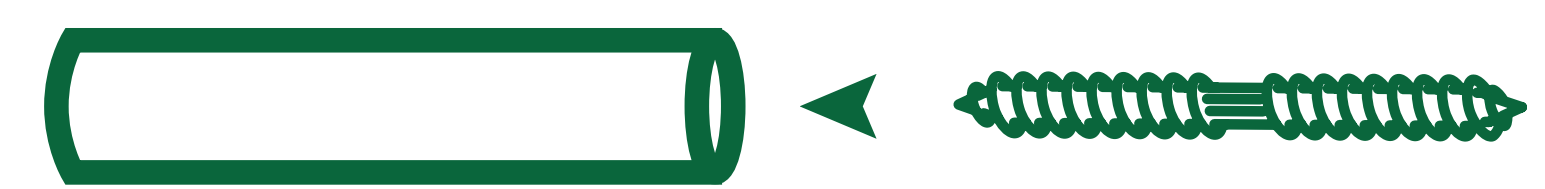


2 Then screw in the other half of the rod to the dowel pin.

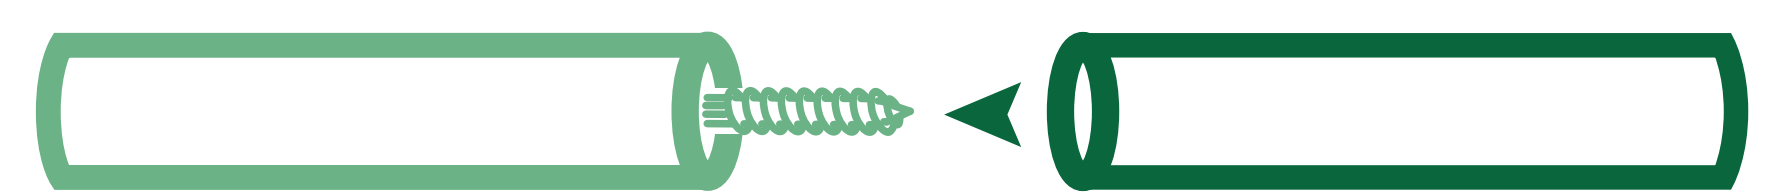


STEP 4 ATTACHING RINGS, FINIALS, AND MOUNTING ROD


1 Slide in the rings onto the rod.

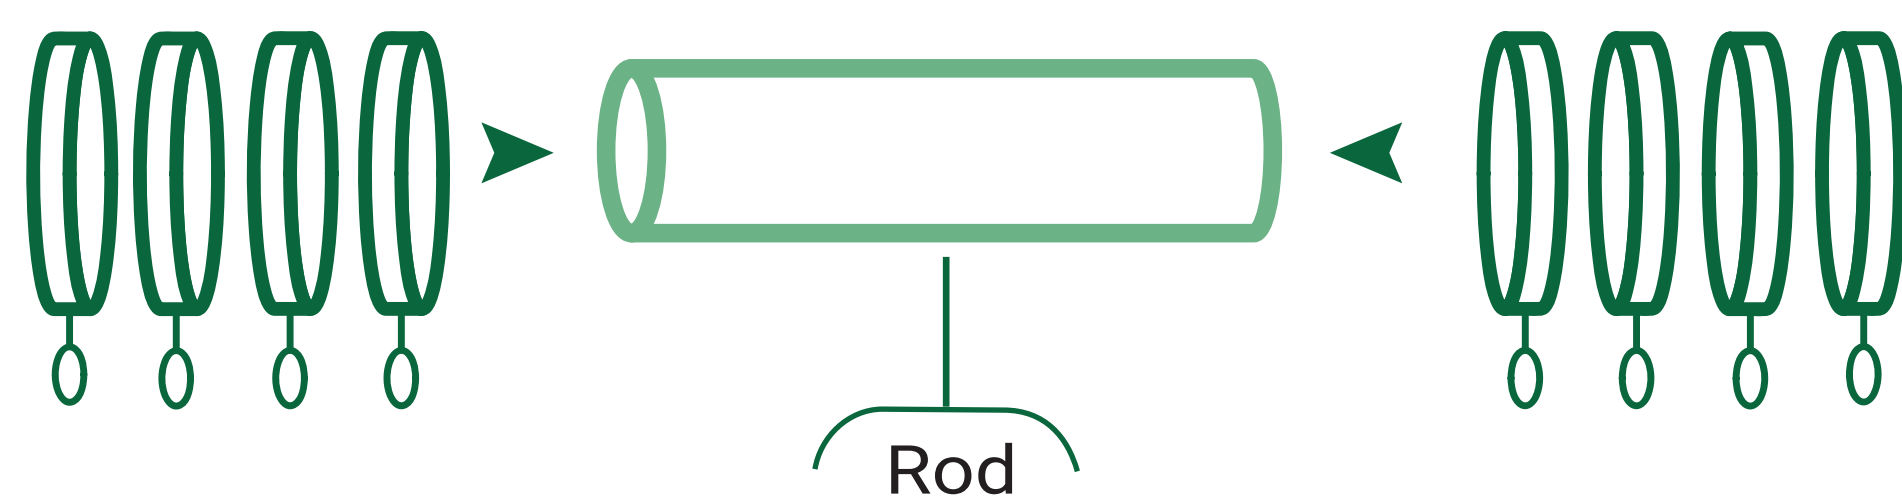


2 Secure the finials on the rod ends.

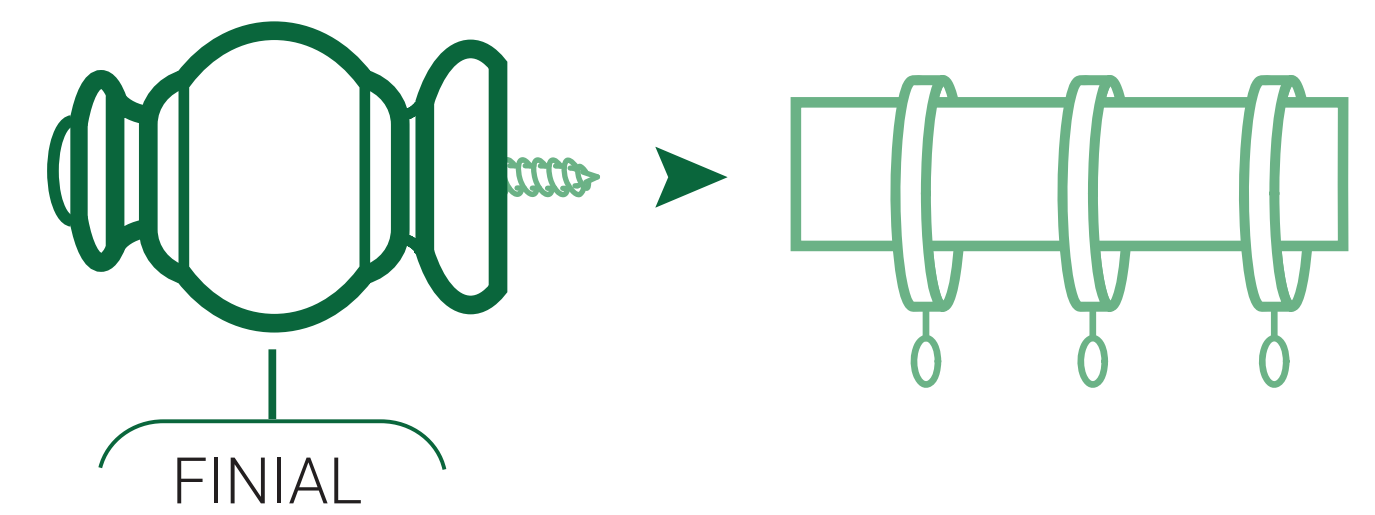

3 Gently put rod into the bracket arms, then move the last ring to the other side of the bracket arm.

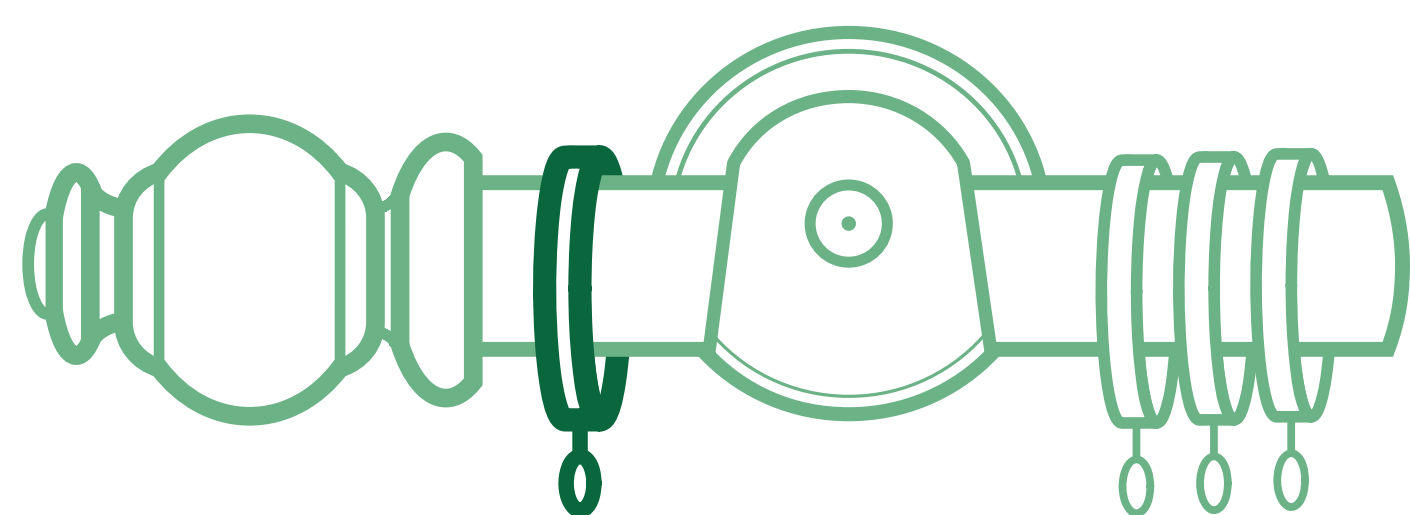

4 Center the rod on the brackets and secure it with the fixating screw.

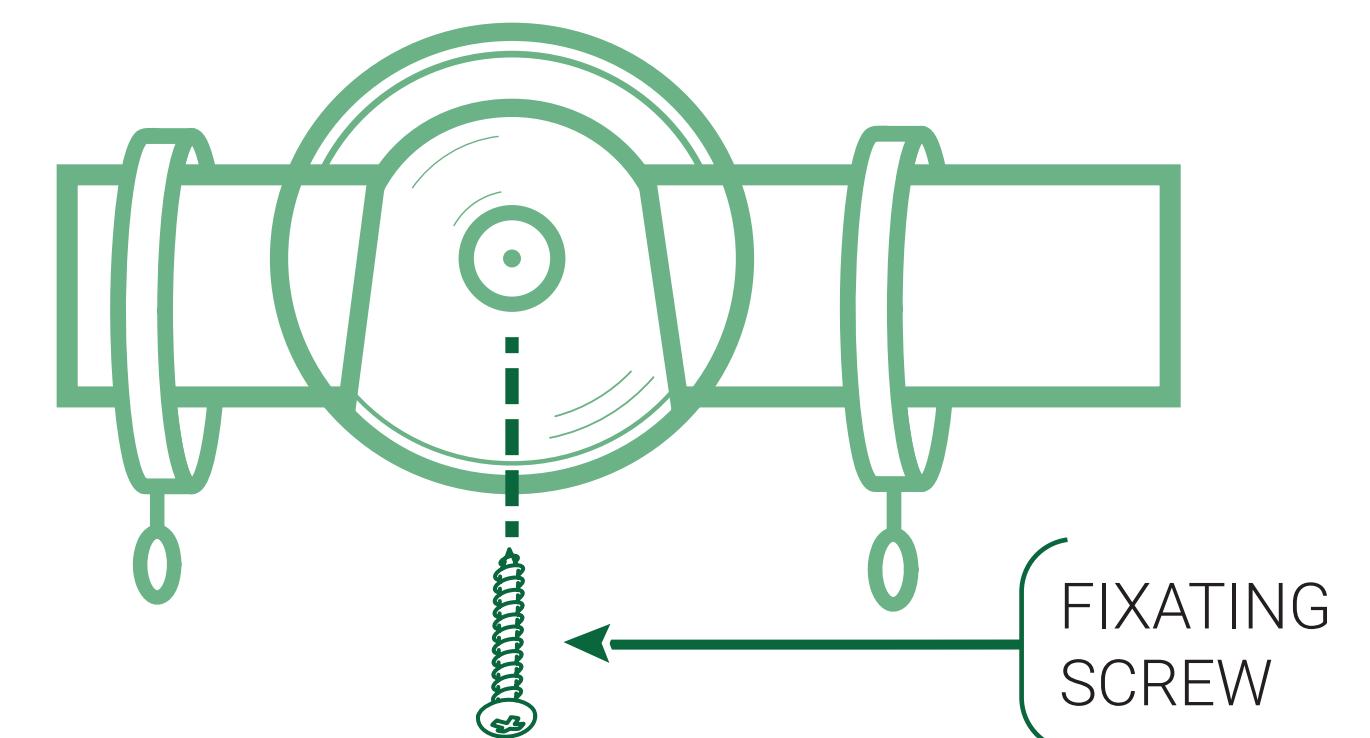

Congratulations, job well done! Still have questions? Customer Care is available at 800-256-5005.

THANK YOU FOR CHOOSING REGAL DRAPES.

WE ARE PROUD TO MAKE YOUR DRAPES WITH CAREFUL ATTENTION TO EVERY DETAIL. WE HOPE YOU ENJOY YOUR DRAPES FOR MANY YEARS TO COME.