


# FIRST TIME INSTALLING DRAPES?

DON'T WORRY, WE'LL WALK YOU THROUGH THE WHOLE PROCESS. JUST FOLLOW THESE SIMPLE STEPS AND YOU'RE NEARLY THERE.

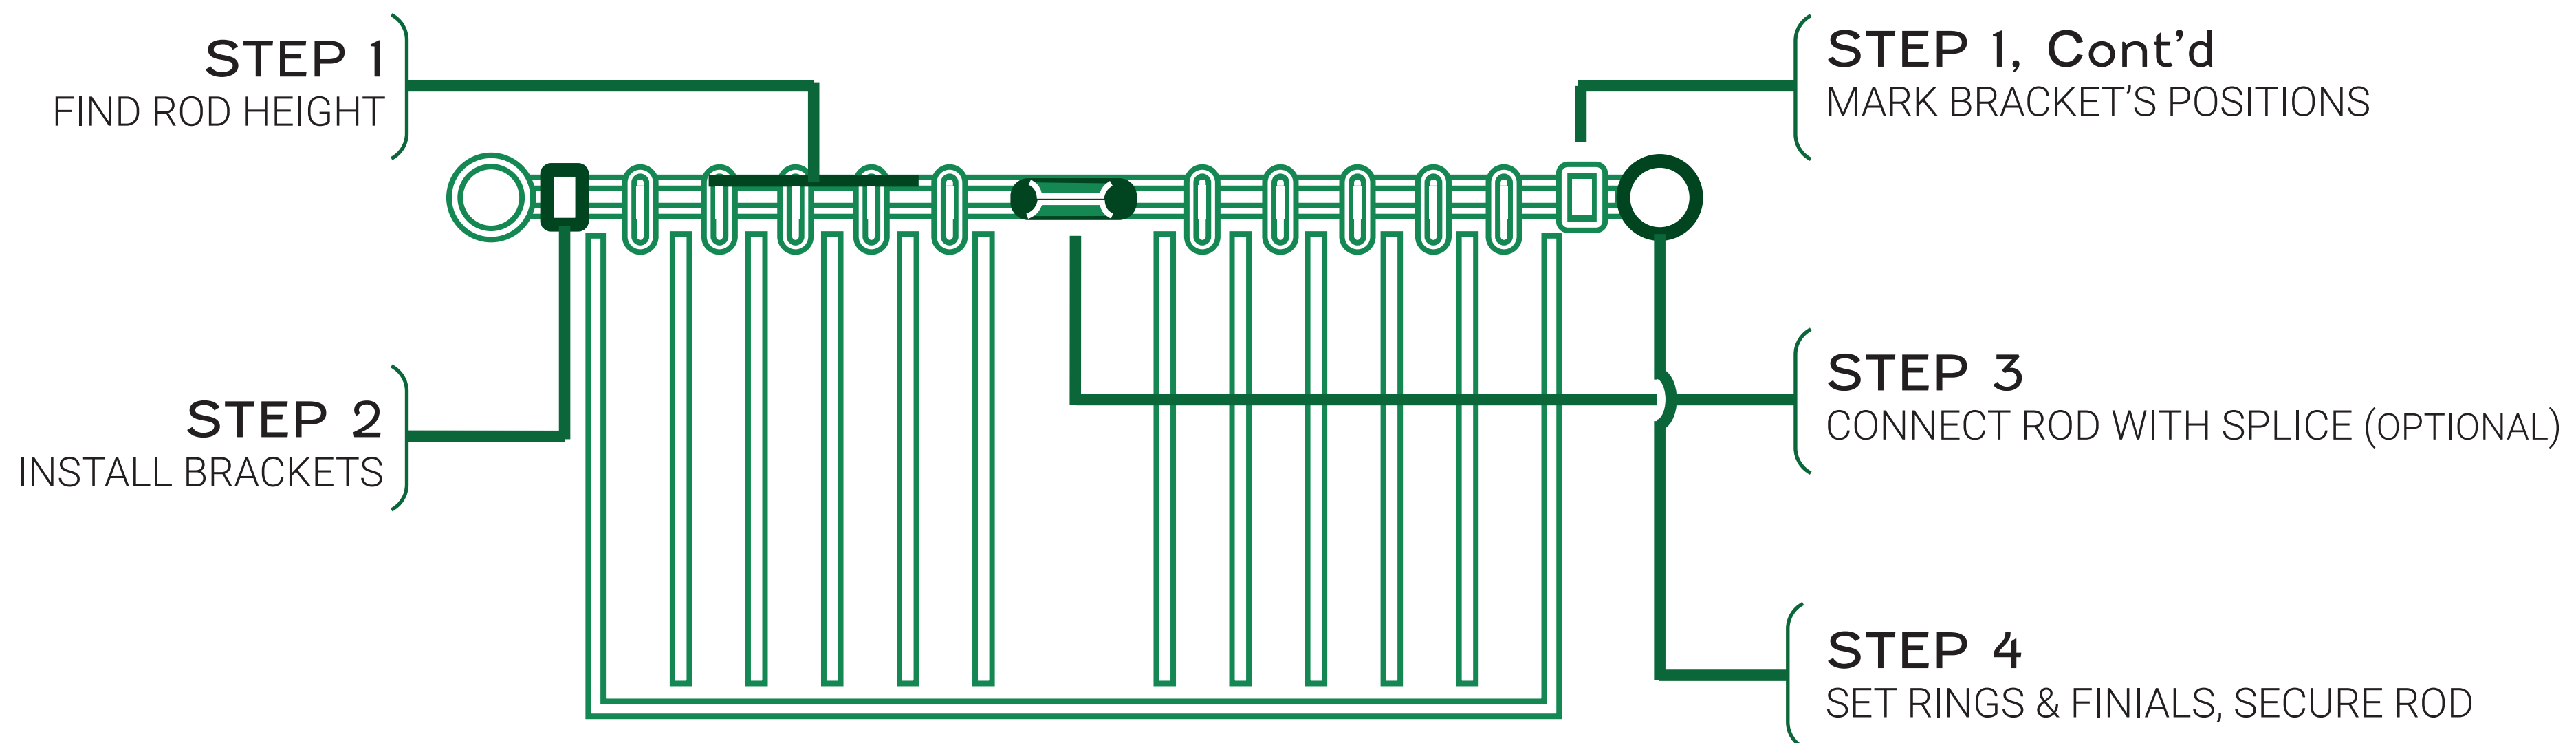

## PARTS YOU GET

<p>DRAPER Y ROD</p>	<p>FINIALS</p>	<p>BRACKETS &amp; ALLEN KEY</p>
<p>SCREWS &amp; ANCHORS</p>	<p>DRAPER Y RINGS</p>	<p>SPLICE</p>

## TOOLS YOU WILL NEED

<p>DRILL</p>	<p>STEP STOOL</p>	<p>TAPE MEASURE</p>
<p>LEVEL</p>	<p>PENCIL</p>	<p>DRILL BIT &amp; PHILLIPS BIT</p>

## STEP 1 MARKING BRACKET PLACEMENT - CEILING MOUNT

**1** Find the Suggested Rod Height in your invoice.


**2** Measure the width of your drapery rod.

### RIPPLE FOLD DRAPER Y


Drape Width(Each): 136"  
Drape Length(Each): 95 3/4"  
These drapes were designed assuming a rod/track width of 154" and a rod/track height of 95 3/4" (top of rod/track to bottom of drape).  
• Hardware: 154" White Track (Wand Draw)  
• Lining: Premium Privacy Lining  
• Drapery Wands: 30 in. White Wand (x 2)

INVOICE SAMPLE


**3** Put the end brackets marks 3-4 inches from the wall, symmetrical to the window, and 3-4 inches in from the rod ends.

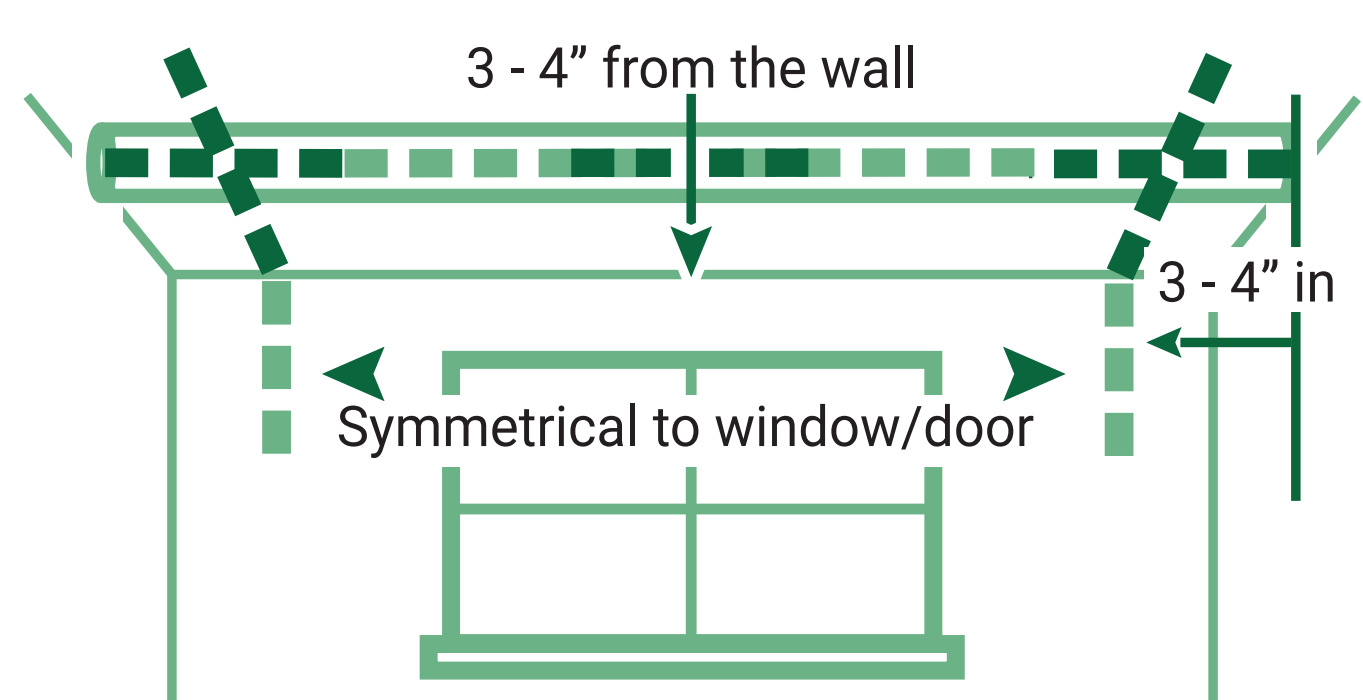

**4** Place the center bracket mark at the exact center between the two end marks.

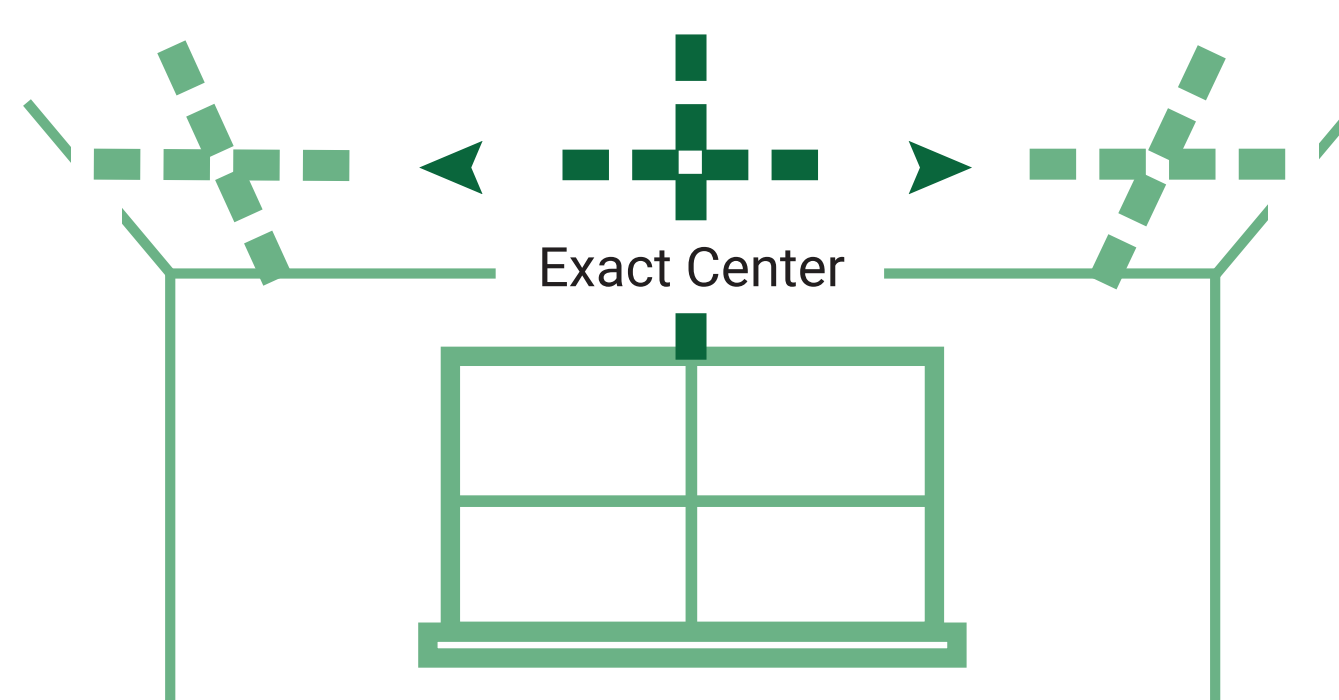


**5** Make sure that all marks are placed in a straight line.

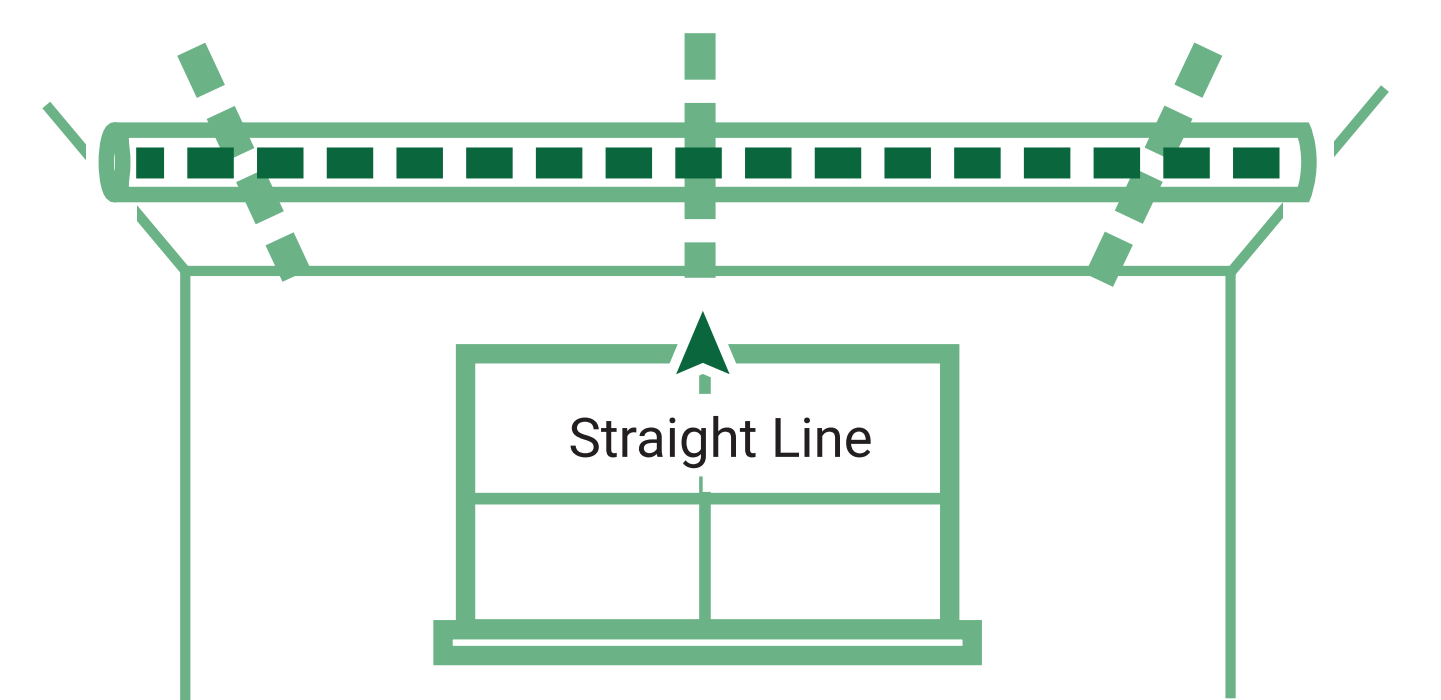




## STEP 2 PLACING BRACKET MOUNTING PLATE


**1** Detach the mounting plate from the bracket.

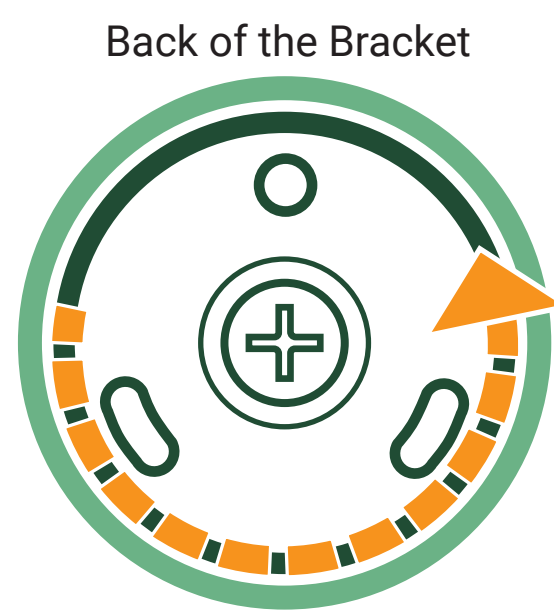


**2** Detach the rod holding ring from the bracket's base using the Allen key.

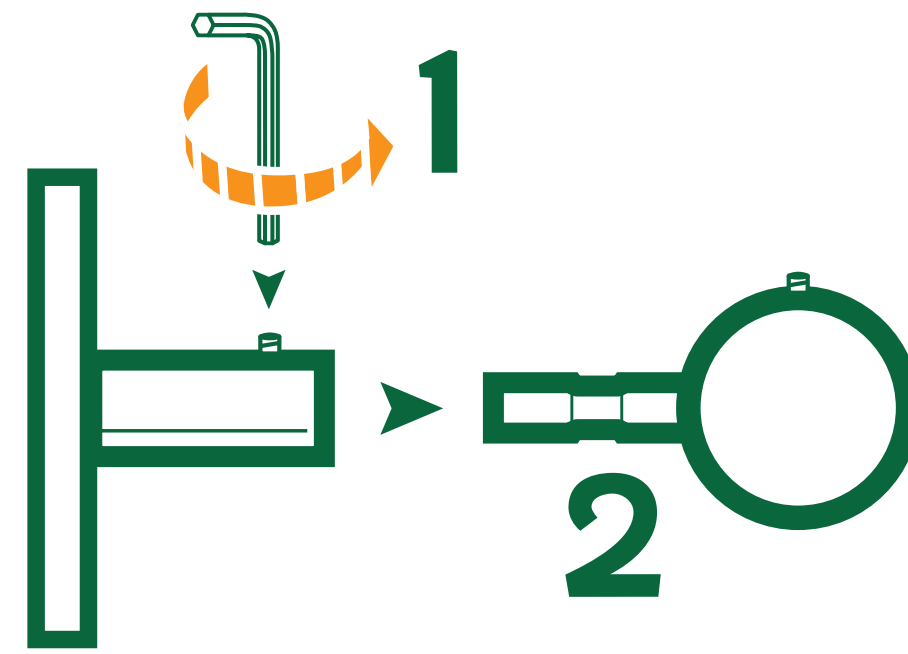


**3** Place the center of the bracket on the mark.

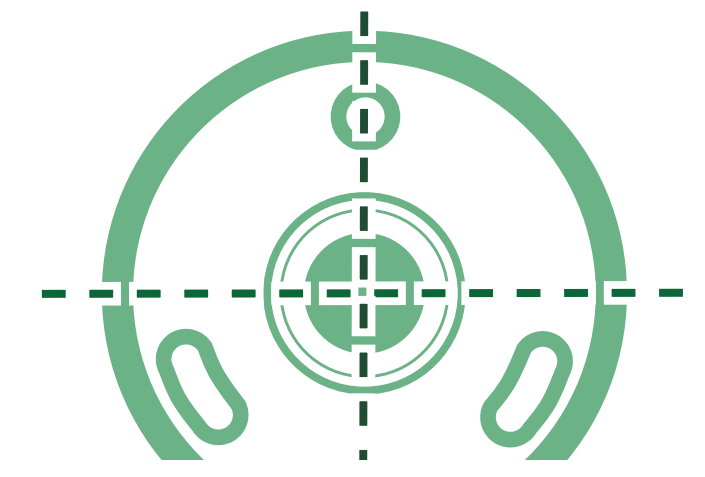

**4** Use holes to mark the position for screws or anchors.

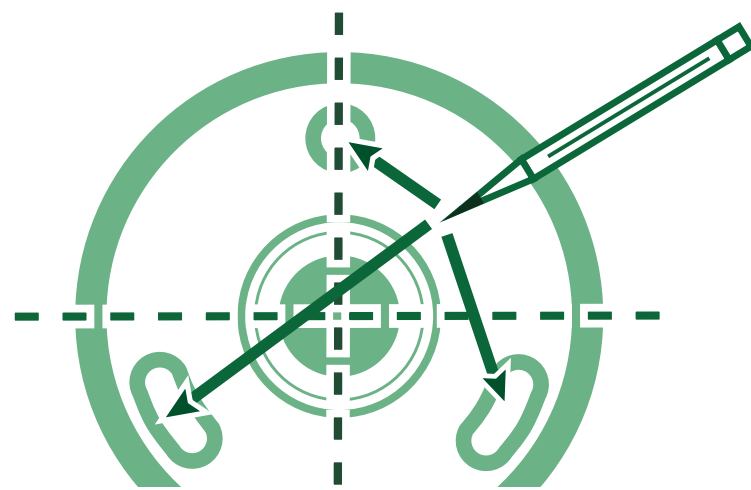

**5** If needed, install the anchors or pre-drill the holes. Drill in the screws to attach the mounting plate.

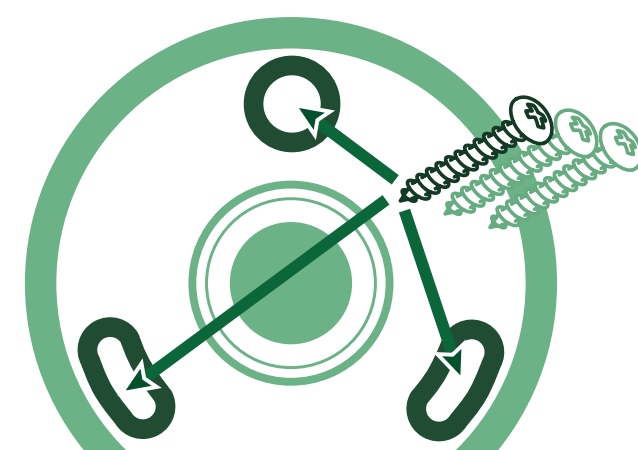


**6** Screw in the bracket base to the mounting plate.




## STEP 3 CONNECTING ROD WITH SPLICE (OPTIONAL)

**1** Insert the splice halfway into the rod. Then attach the other half of the rod to the splice.

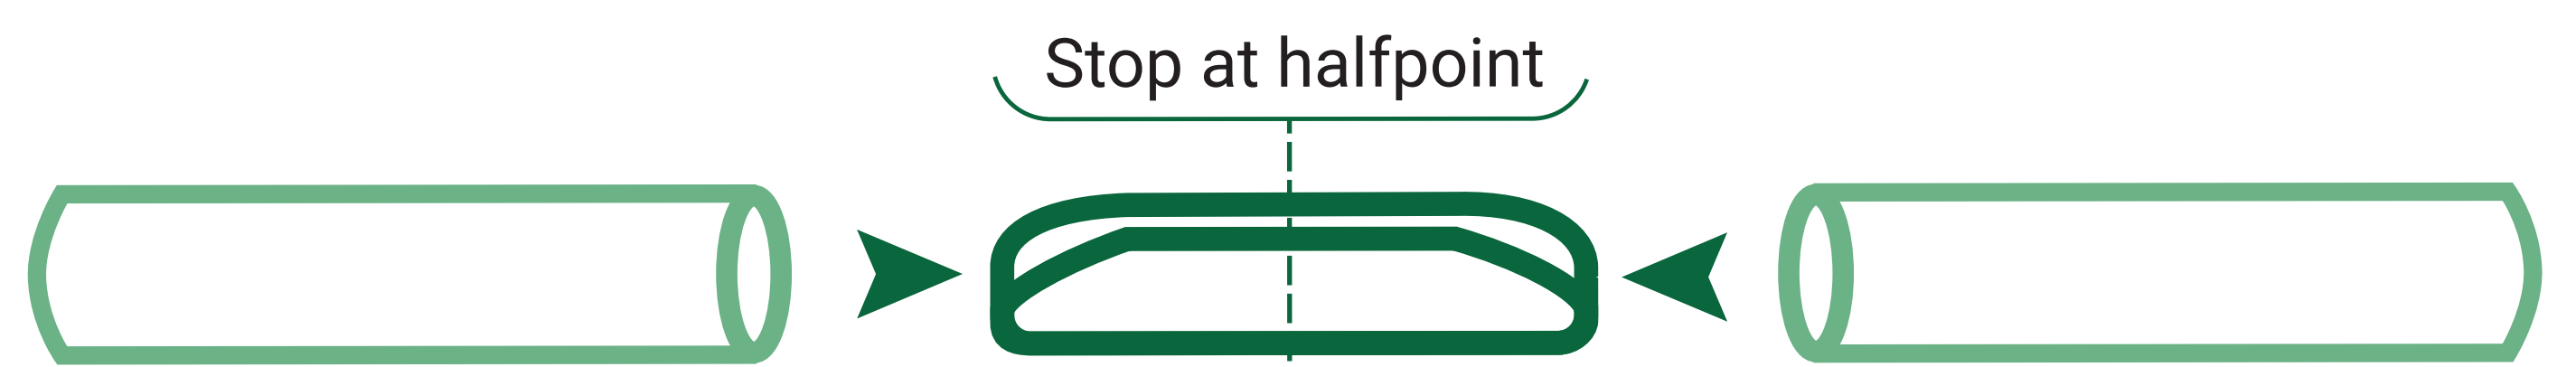


## STEP 4 ATTACHING RINGS, FINIALS, AND MOUNTING ROD


**1** Start with the optional center bracket (1), then slide in the drapery rings (2), the end brackets (3), and the last drapery ring (4).

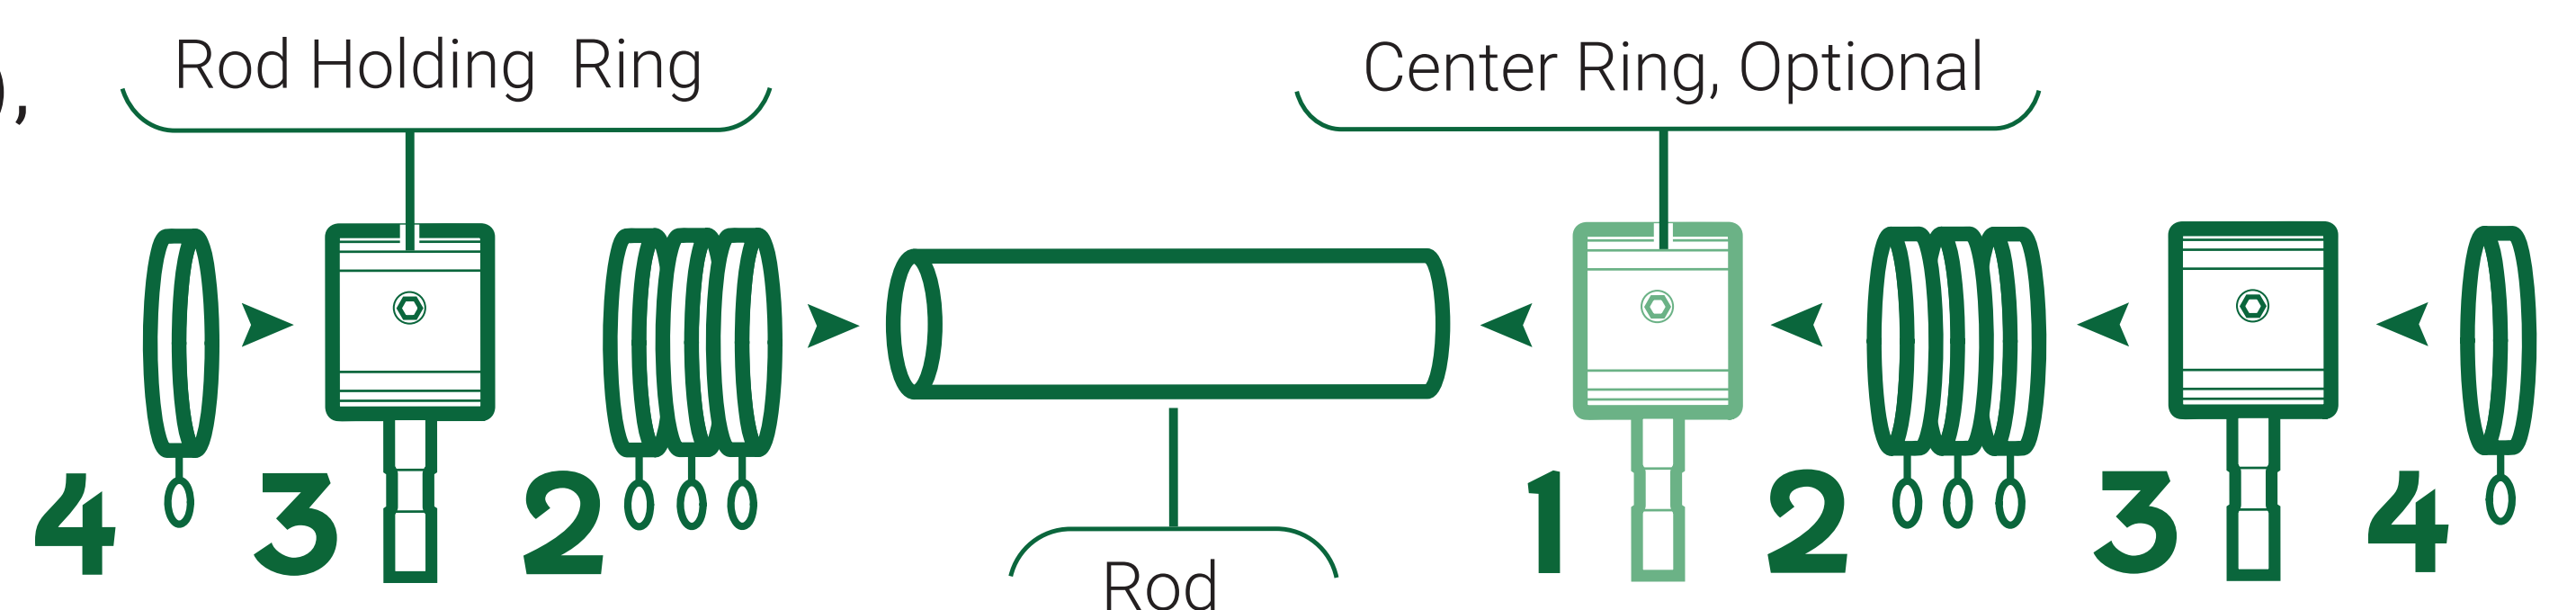


**2** Secure the finials.

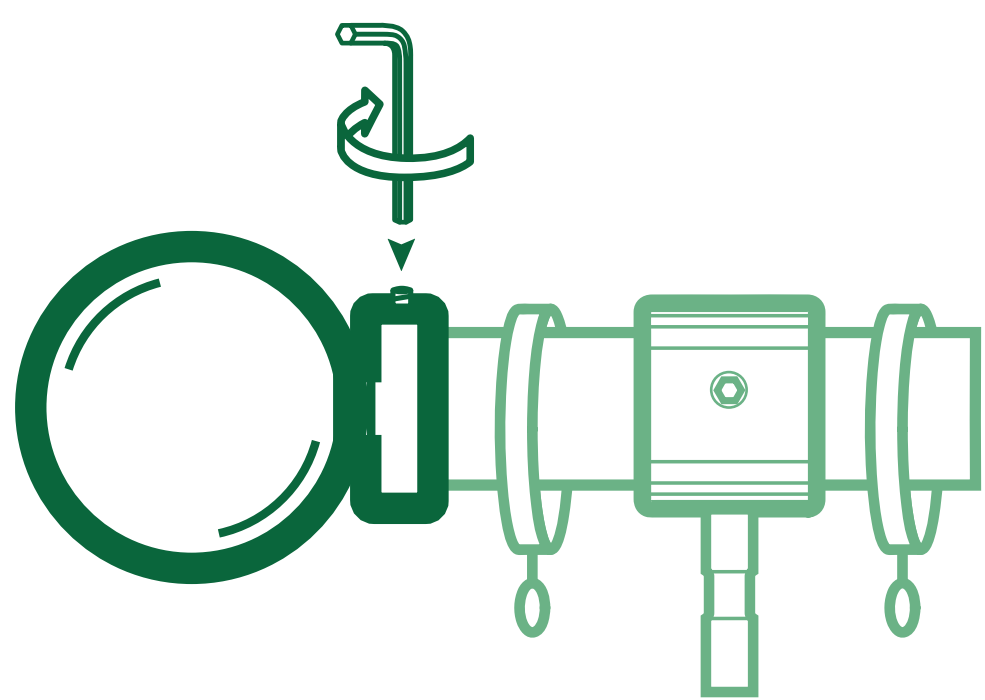

**3** Secure the bracket holding rings with the Allen key.

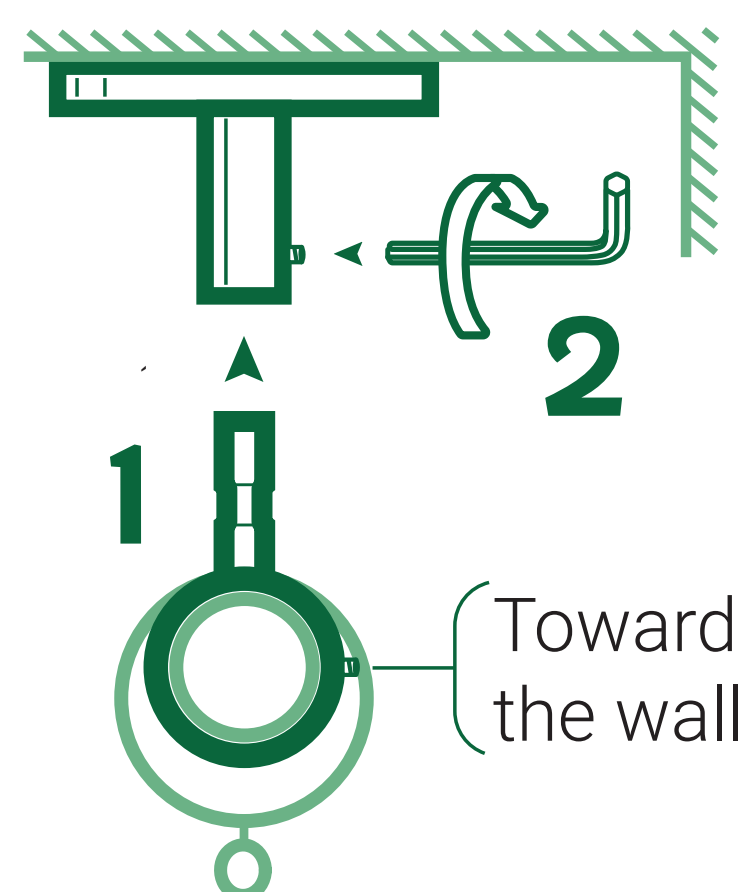

**4** Center the rod on the brackets and secure with the Allen key.

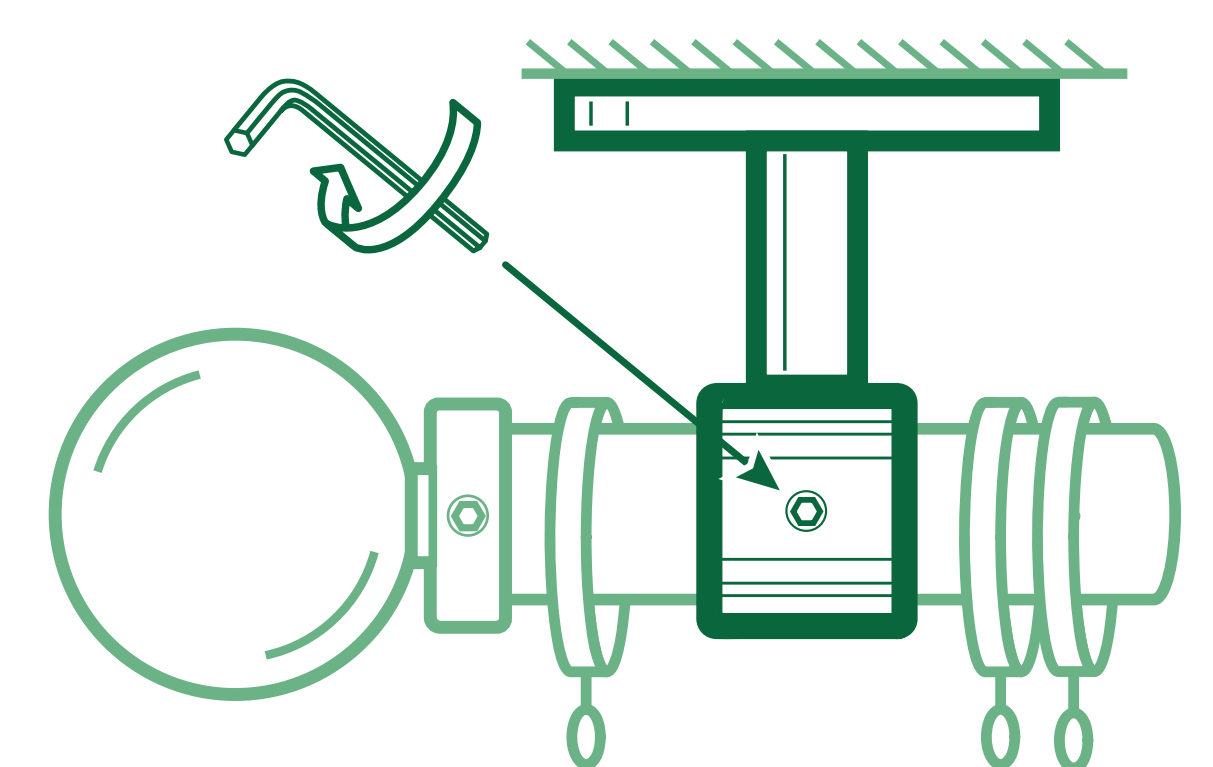

Congratulations, job well done! Still have questions? Customer Care is available at 1.800.256.5005.

**THANK YOU FOR CHOOSING REGAL DRAPES.**

WE ARE PROUD TO MAKE YOUR DRAPES WITH CAREFUL ATTENTION TO EVERY DETAIL. WE HOPE YOU ENJOY YOUR DRAPES FOR MANY YEARS TO COME.