


FIRST TIME INSTALLING DRAPES?

DON'T WORRY, WE'LL WALK YOU THROUGH THE WHOLE PROCESS. JUST FOLLOW THESE SIMPLE STEPS AND YOU'RE NEARLY THERE.

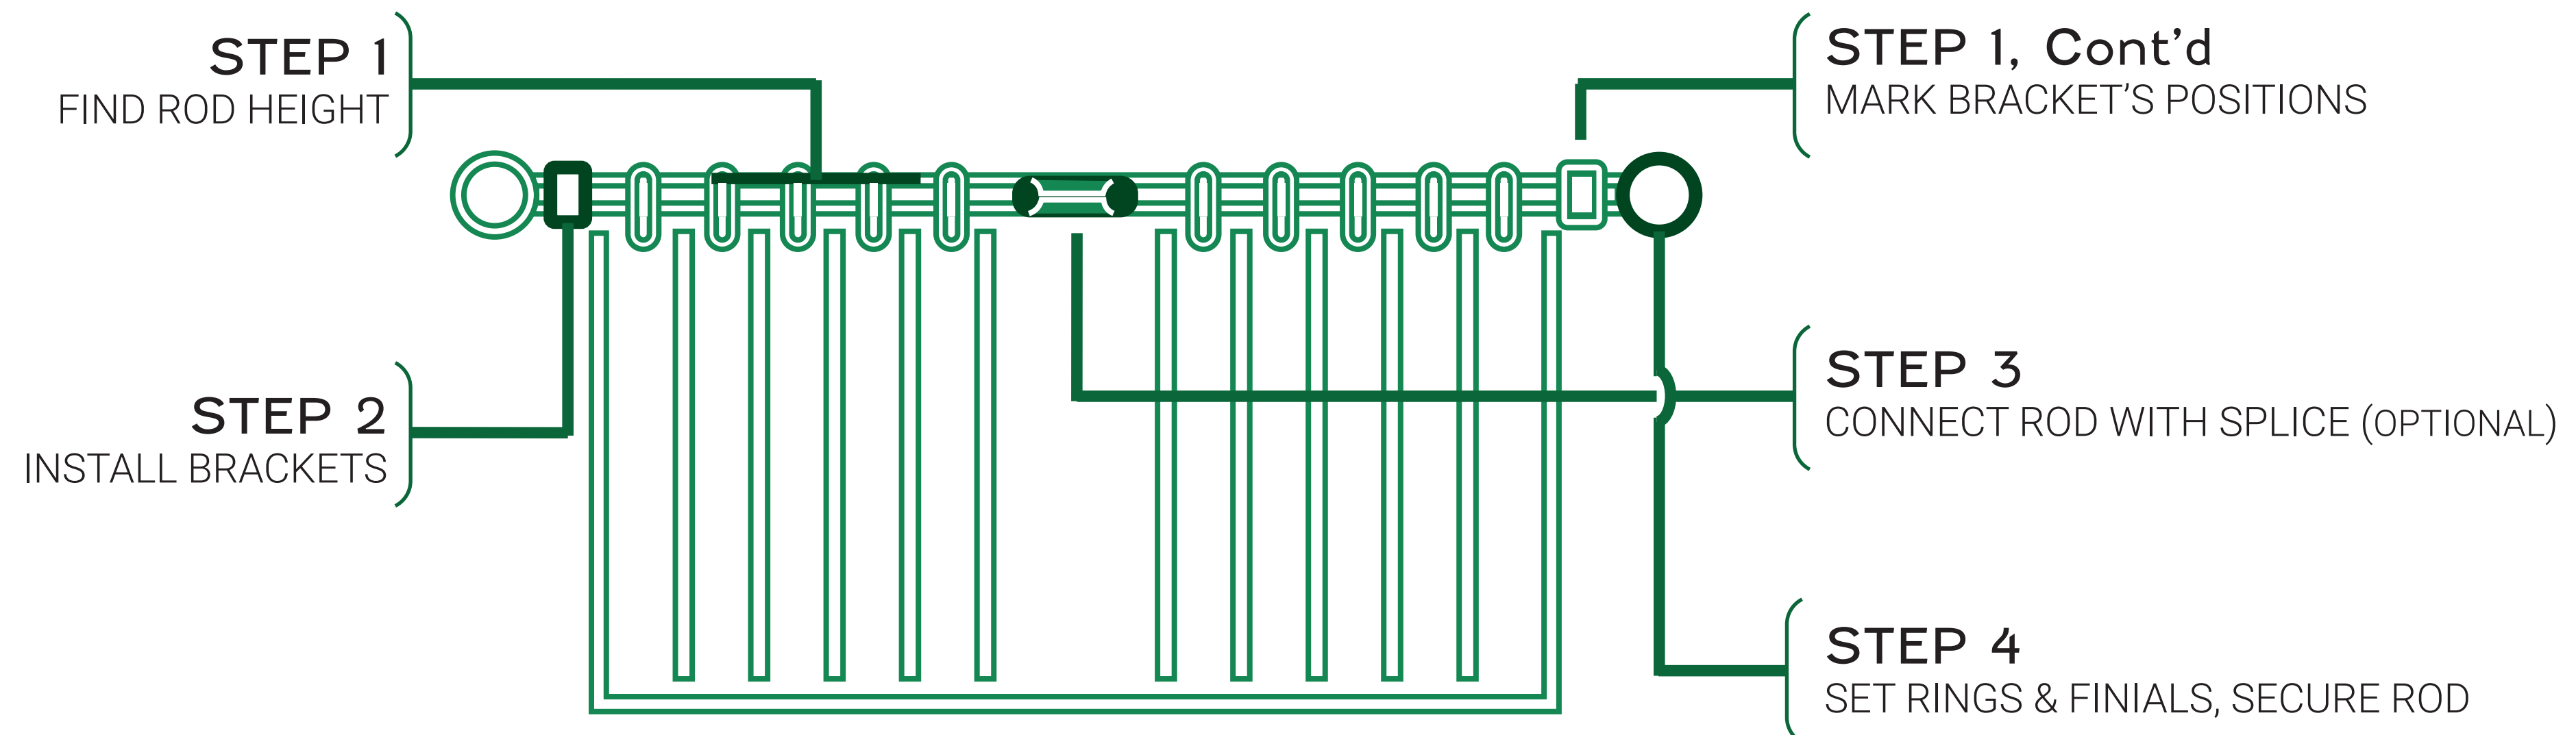

PARTS YOU GET

DRAPERY ROD 	FINIALS 	BRACKETS & ALLEN KEY
SCREWS & ANCHORS 	DRAPERY RINGS 	SPLICE

TOOLS YOU WILL NEED

DRILL 	STEP STOOL 	TAPE MEASURE
LEVEL 	PENCIL 	DRILL BIT & PHILLIPS BIT

STEP 1 MARKING BRACKET PLACEMENT - WALL MOUNT


- Find the Suggested Rod Height in your invoice.
- Measure the width of your drapery rod.

RIPPLE FOLD DRAPERY

Drape Width(Each): 136"
 Drape Length(Each): 95 3/4"
 These drapes were designed assuming a rod/track width of 154" and a rod/track height of 95 3/4" (top of rod/track to floor).

- Hardware: 154" White Track (Wand Draw)
- Lining: Premium Privacy Lining
- Drapery Wands: 30 in. White Wand (x 2)


- Put the end brackets marks 3-4 inches from the wall, symmetrical to the window, and 3-4 inches in from the rod ends.
- Place the center bracket mark at the exact center between the two end marks.
- Make sure that all marks are level to the floor and placed in a straight line.

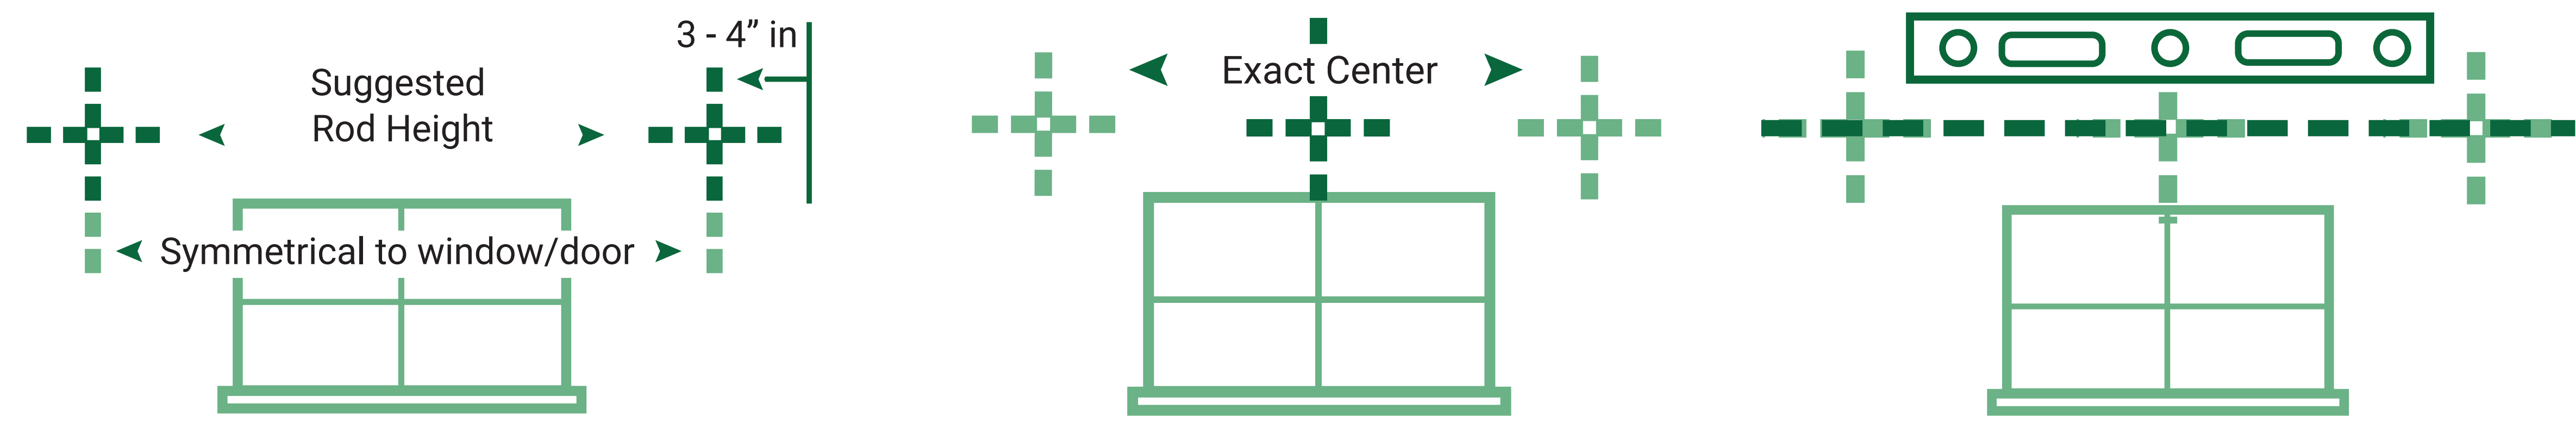


WESTPORT DRAPERY HARDWARE WALL MOUNT

STEP 2 PLACING BRACKET'S MOUNTING PLATE

1 Detach the mounting plate from the bracket.

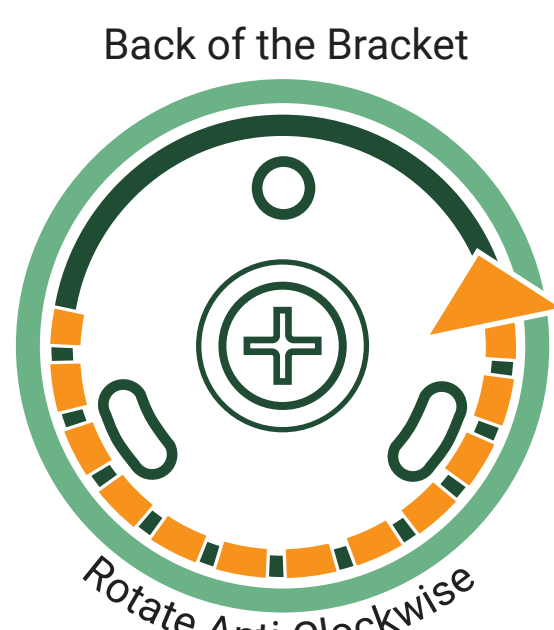


2 Detach the rod holding ring from the bracket's base using the Allen key.

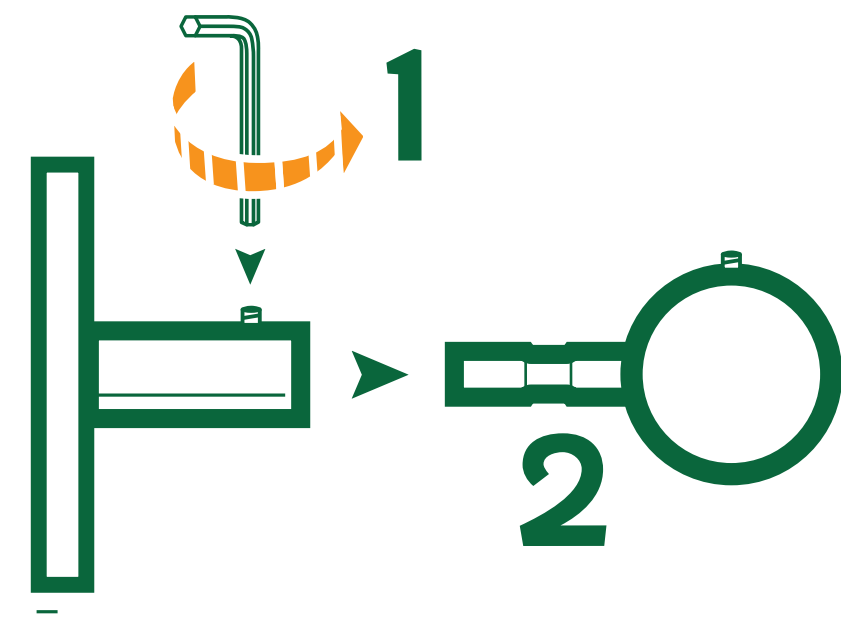


3 Position the circular hole on the mark facing up.




4 Use holes to mark the positions for screws or anchors.

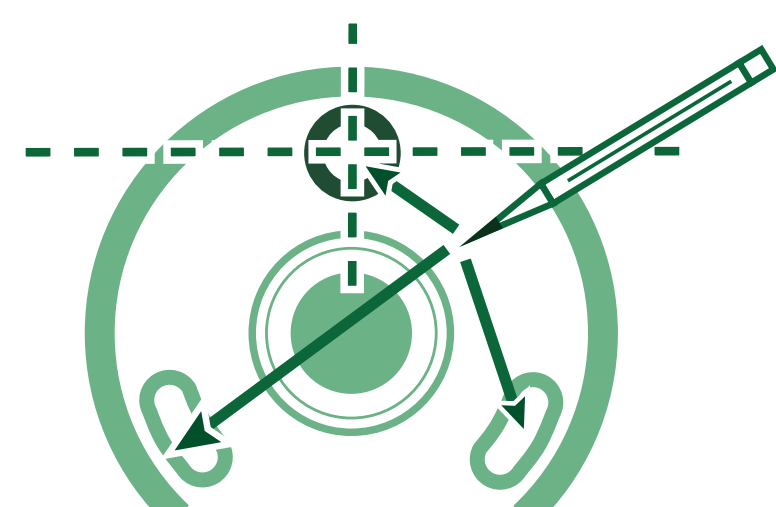

5 If needed, pre-drill the holes or install the anchors. Drill in the screws to attach the mounting plate.

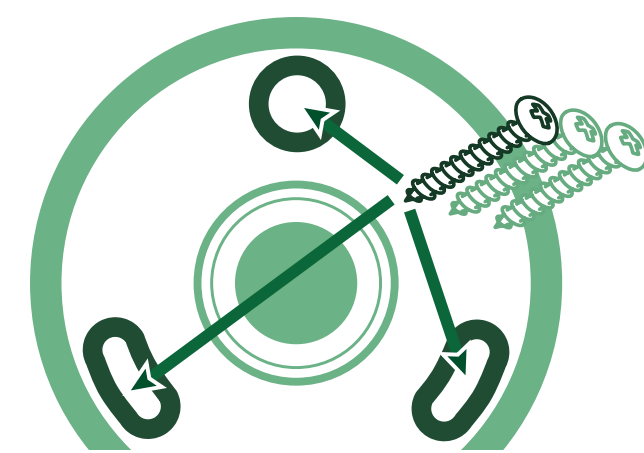


6 Screw in the bracket base to the mounting plate.

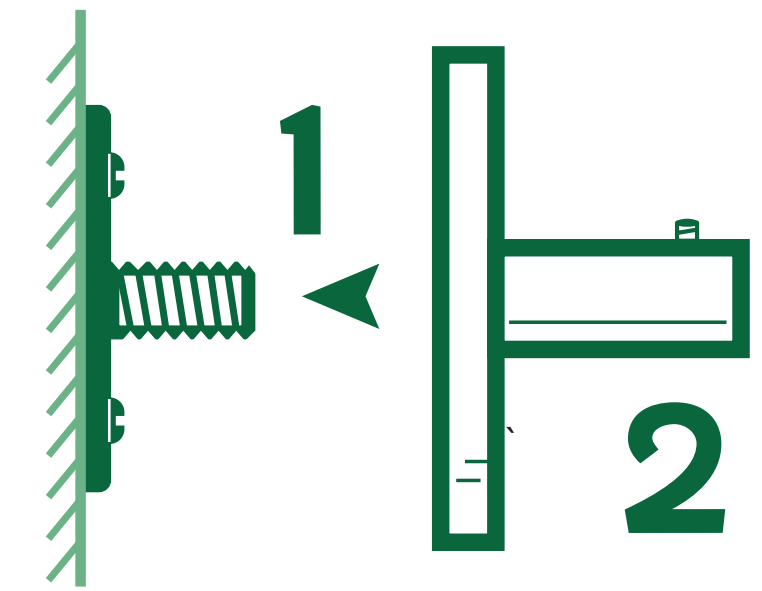


STEP 3 CONNECTING ROD WITH SPLICE (OPTIONAL)

1 Insert the splice halfway into the rod. Then attach the other half of the rod to the splice.

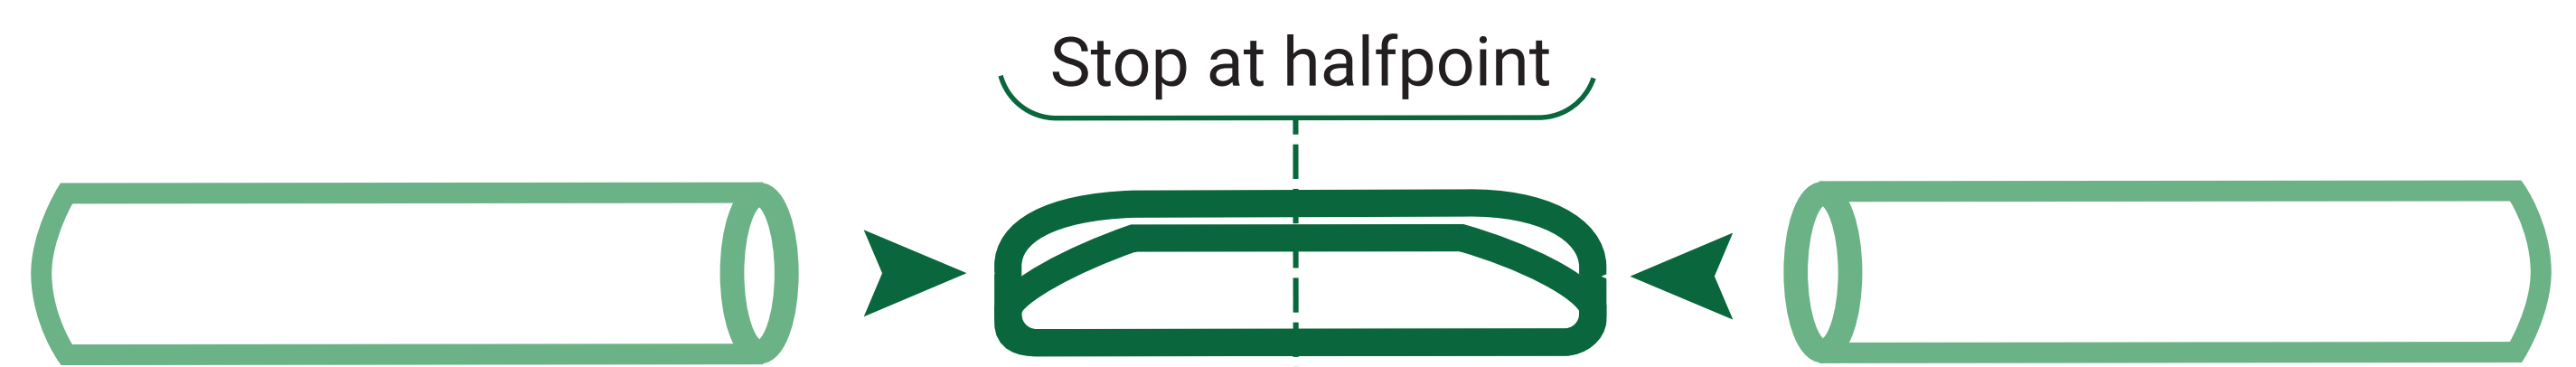


STEP 4 ATTACHING RINGS, FINIALS, AND MOUNTING ROD


1 Start with the optional center bracket (1), then slide in the drapery rings (2), the end brackets (3), and the last drapery ring (4).

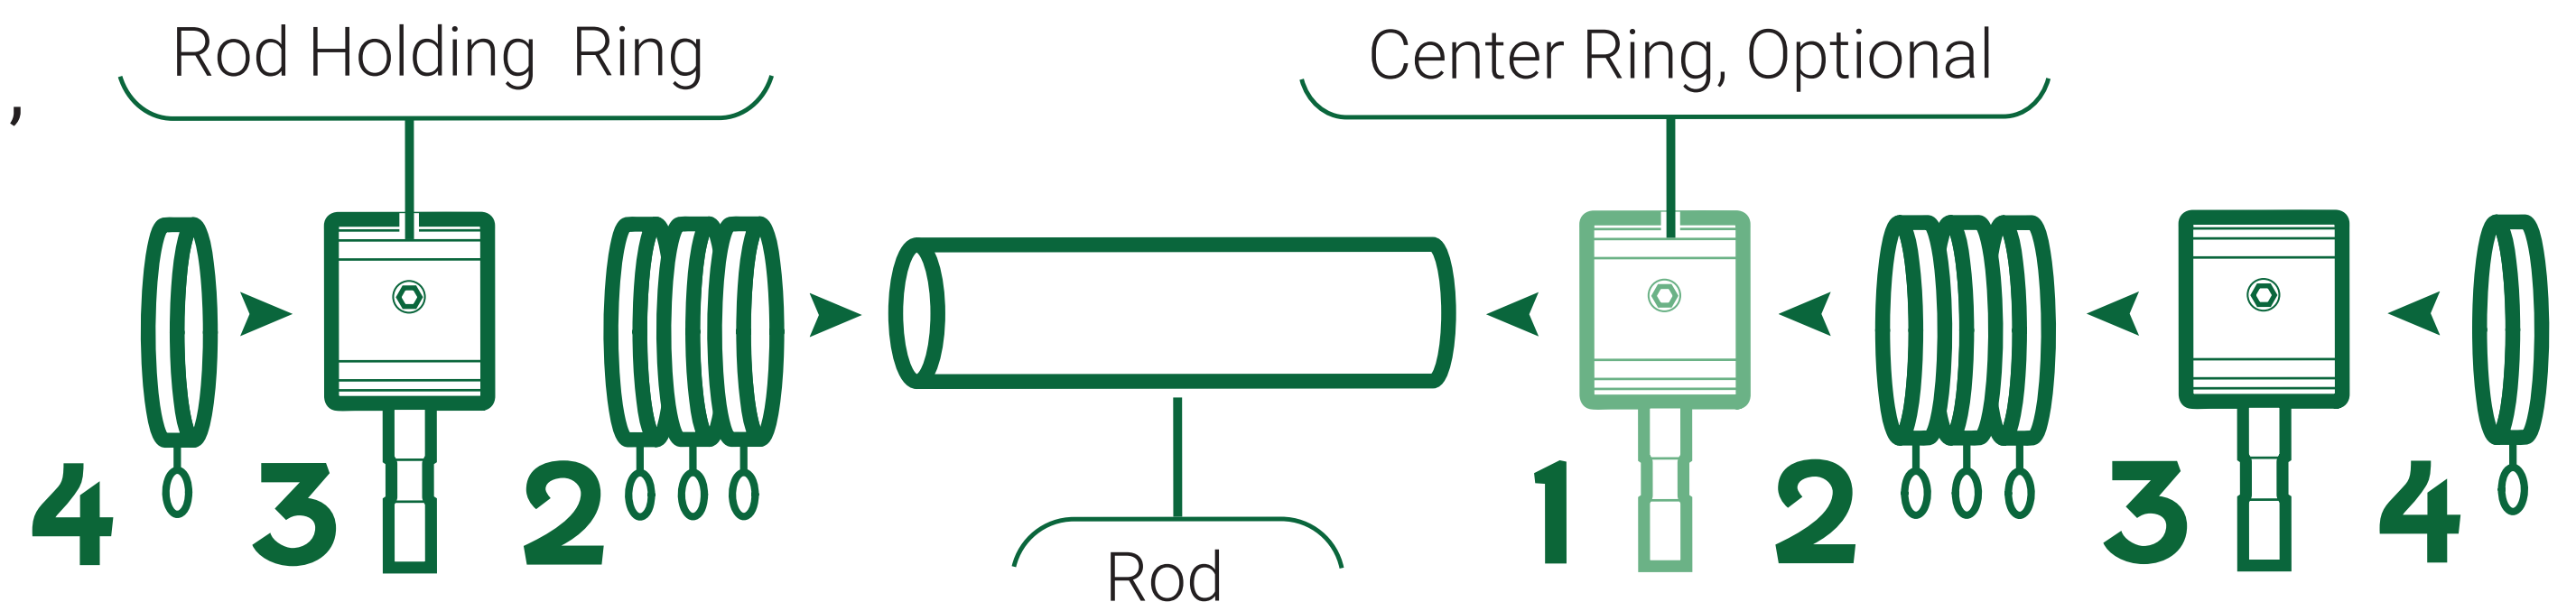


2 Secure the finials.

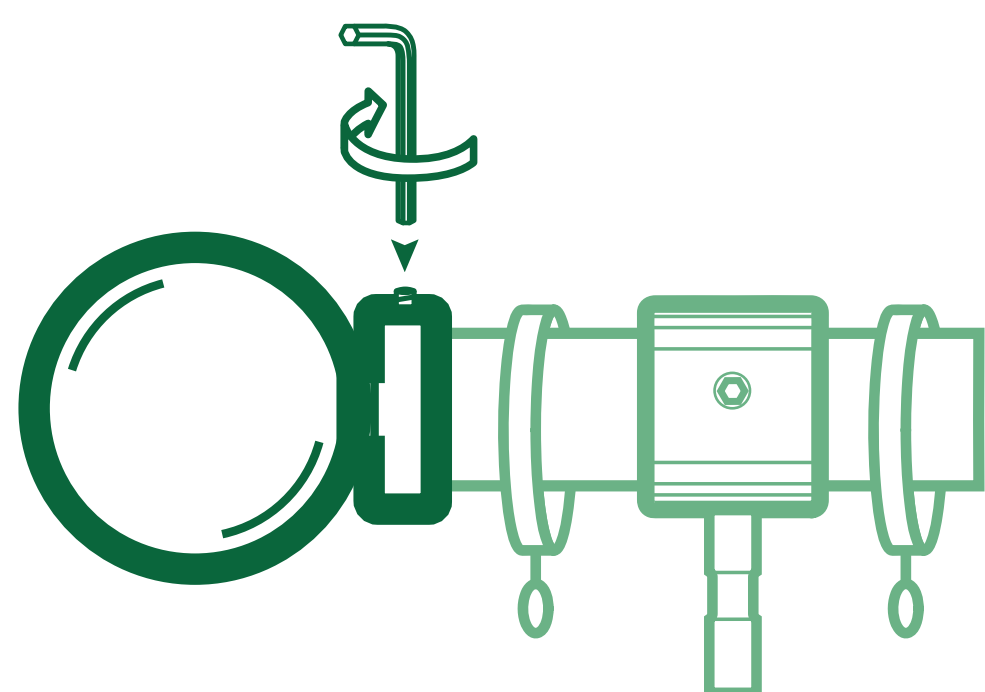

3 Secure the bracket holding rings with the Allen key.

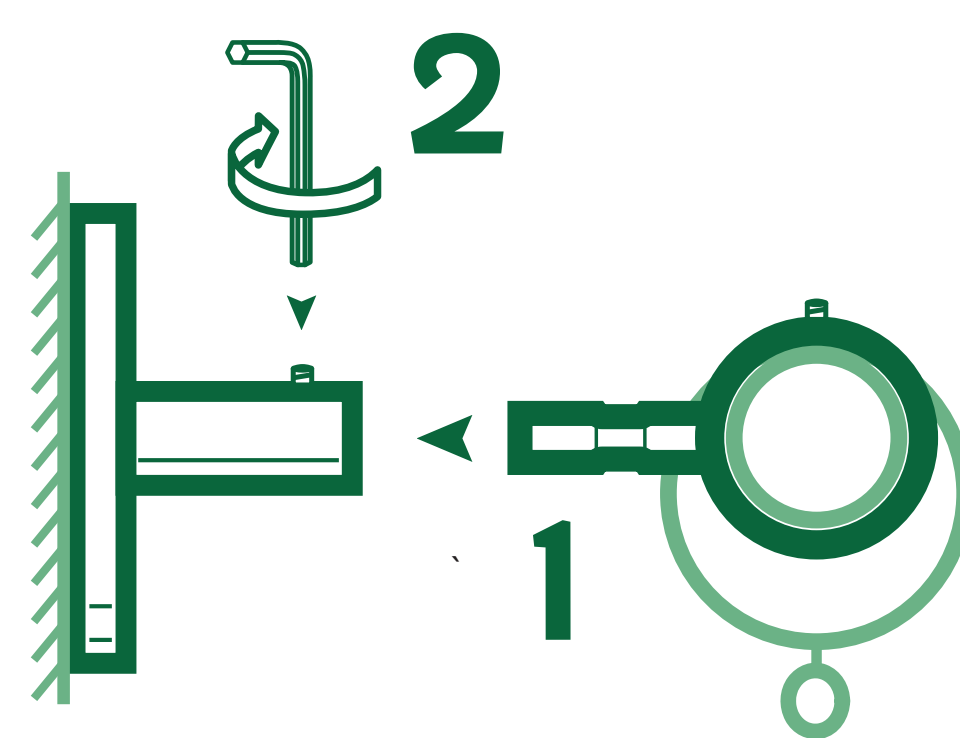

4 Center the rod on the brackets and secure with the Allen key.

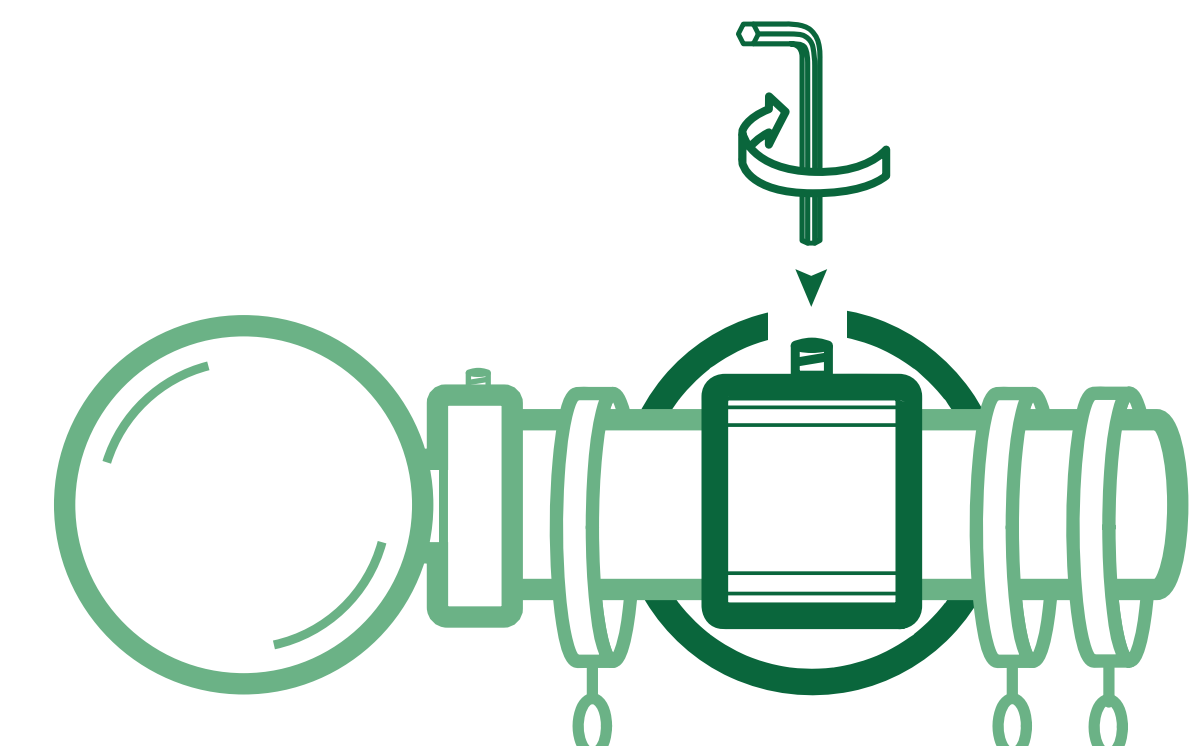

Congratulations, job well done! Still have questions? Customer Care is available at 1.800.256.5005.

THANK YOU FOR CHOOSING REGAL DRAPES.

WE ARE PROUD TO MAKE YOUR DRAPES WITH CAREFUL ATTENTION TO EVERY DETAIL. WE HOPE YOU ENJOY YOUR DRAPES FOR MANY YEARS TO COME.