

## TRAVERSE ROD INSTALLATION INSTRUCTIONS

### Getting Started:

Please read through all instructions carefully before you begin installation.

Unpack all materials making sure all components are included:

- Screws
- Track(s)
- Master carrier(s) & carriers (pre-installed within track)
- Mounting brackets
- Splice (only included with wider tracks)

### Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure
- Hacksaw (optional)


### Wall Mount Instructions:

#### Installing Your Drapery Hardware:

You are now ready to install your hardware.


**(1)** Determine the height of the top of track and mark bracket height on the wall for all the brackets and adjust (as necessary) to make sure they are all leveled.

**(2)** Measure the width of the track and mark the two end brackets approximately 3"-4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

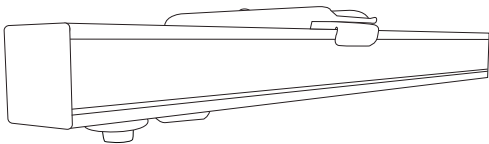


*For heavy draperies keep the brackets spaced tightly to prevent draperies from sagging.*

**(3)** To attach the bracket to the wall; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.

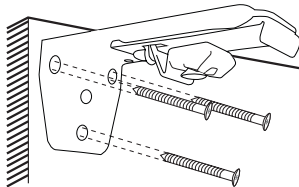


**(4)** Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.

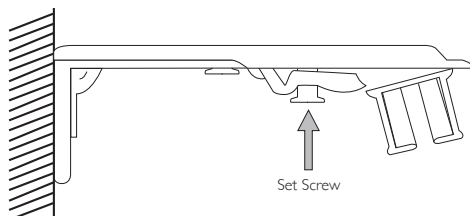


**(5)** Tighten track set screws on all the brackets to secure track to brackets.

**(6)** Adjust track to the desired projection. Projection is adjustable from 3" - 4½". Repeat this step for the remaining brackets.

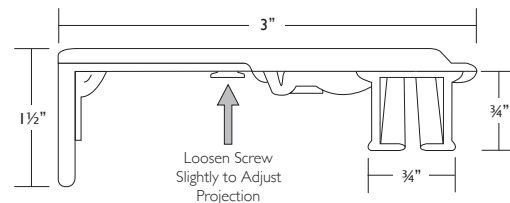

**(7)** Once desired projection is set for all the brackets, lock the bracket into position by tightening the track depth adjustment set screw (see drawing below).

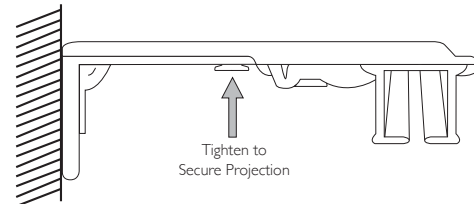


#### Installing a Track System over 96" Wide:

Please read through all instructions carefully before you begin installation.

#### PLEASE NOTE:

- Tracks greater than 96" will come as two pieces
- Tracks greater than 192" will come as three pieces
- Slide each track of the connecting ends into the Splice and butt ends together, ensuring that joint is centered between the 2 lower set screws. Make sure that the set screws on the Splice will be facing the wall when installation is complete.
- Tighten the top 4 set screws securely with the included Allen Key.
- Tighten the bottom 2 set screws with the included Allen Key as needed to adjust the alignment of each track to one another.

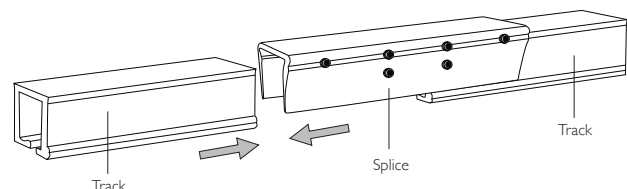

# TRAVERSE ROD INSTALLATION INSTRUCTIONS (continued)

## Ceiling Mount Instructions:


### Installing Your Drapery Hardware:

You are now ready to install your hardware.


(1) Measure the width of the track and mark the two end brackets approximately 3"-4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

(2) To attach the bracket to the ceiling; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.

(3) Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.

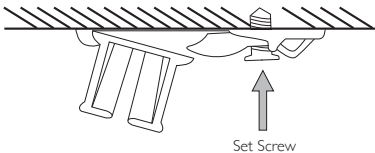

(4) Tighten track set screws on all the brackets to secure track to brackets.

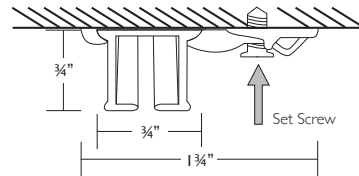


### Installing a Track System over 96" Wide:

Please read through all instructions carefully before you begin installation.

#### PLEASE NOTE:

- Tracks greater than 96" will come as two pieces
- Tracks greater than 192" will come as three pieces
- Slide each track of the connecting ends into the Splice and butt ends together, ensuring that joint is centered between the 2 lower set screws. Make sure that the set screws on the Splice will be facing the wall when installation is complete.
- Tighten the top 4 set screws securely with the included Allen Key.
- Tighten the bottom 2 set screws with the included Allen Key as needed to adjust the alignment of each track to one another.

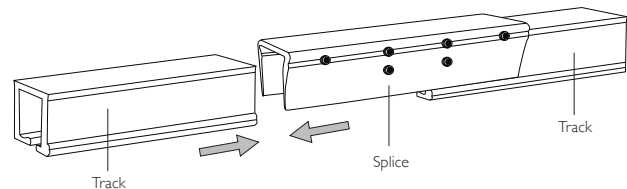

### Installing Drapery Wands (If Purchased) :

You may attach a drapery wand(s) to the master carrier(s). Simply fit the metal hook on the drapery wand through the slot on the master carrier.

